



Register your new Bosch now:  
[www.bosch-home.com/welcome](http://www.bosch-home.com/welcome)



**Tumble dryer**  
**WTY88898SN**



**BOSCH**

**en** Installation and operating instructions

## Your new tumble dryer

You have opted for a tumble dryer manufactured by Bosch.

Please take a few minutes to read and become familiar with the advantages of your tumble dryer.

To meet the high quality demands required by Bosch, every tumble dryer that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website [www.bosch-home.com](http://www.bosch-home.com) or contact our Customer Service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before operating the tumble dryer.

## Display rules

### **Warning!**

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

### **Caution!**

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

### **Note/tip**

Information about the optimum use of the appliance/any other useful information.

### **1. 2. 3. / a) b) c)**

The steps are represented by numbers or letters.

■ / -

Lists are represented by a small box or a dash.

# Contents

 <b>Intended use</b> . . . . .	4	 <b>Noises</b> . . . . .	21
 <b>Safety instructions</b> . . . . .	4	 <b>Cleaning</b> . . . . .	22
Electrical safety . . . . .	4	Cleaning the dryer and the control panel . . . . .	22
Safety for children . . . . .	5	Cleaning the moisture sensor . . . . .	22
Appliance safety . . . . .	5	Cleaning the filter in the condensate container . . . . .	22
 <b>Environmental protection</b> . . . . .	7	 <b>Faults and what to do about them</b> . . . . .	23
Packaging/old appliance . . . . .	7	 <b>After-sales service</b> . . . . .	25
Coolant . . . . .	7	 <b>Consumption values</b> . . . . .	26
Energy-saving tips . . . . .	7	Consumption values table . . . . .	26
 <b>The main points in brief</b> . . . . .	8	Most efficient programme for cotton fabrics . . . . .	26
 <b>Getting to know your appliance</b> . . . . .	9	 <b>Technical data</b> . . . . .	27
Dryer . . . . .	9	 <b>Installation and connection</b> . . . . .	28
Control panel . . . . .	10	Scope of delivery . . . . .	28
Display panel . . . . .	11	Installing and connecting the dryer . . . . .	28
 <b>Laundry</b> . . . . .	12	Changing the condensation drain . . . . .	29
Preparing the laundry . . . . .	12	Changing the side on which the door is hinged . . . . .	31
Sorting washing according to: . . . . .	12	Optional accessories . . . . .	34
 <b>Programmes and buttons</b> . . . . .	13	Transport and frost protection . . . . .	34
Programmes . . . . .	13		
Buttons . . . . .	15		
 <b>Operating the appliance</b> . . . . .	17		
Loading laundry and switching on the dryer . . . . .	17		
Setting a programme . . . . .	17		
Starting the programme . . . . .	17		
Programme sequence . . . . .	18		
Changing the programme or adding laundry . . . . .	18		
Cancelling the programme . . . . .	18		
Programme end . . . . .	18		
Removing laundry and switching off the dryer . . . . .	18		
Clean the fluff filter . . . . .	19		
Emptying the condensate container . . . . .	20		



## Intended use

- For private domestic use only.
- Only to dry and refresh fabrics that have a care label specifying that they are suitable for use in a dryer.
- The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they **are supervised** or have **been instructed** in its use by a responsible adult.
- Keep children under the age of 3 years old away from the dryer.
- This appliance is intended for use up to a maximum height of 4000 metres above sea level.
- Do not let children carry out any unsupervised cleaning or maintenance work on the dryer.
- Keep pets away from the dryer.



## Safety instructions

### Electrical safety



#### Warning

#### Risk of death!

There is a risk of electric shock as the dryer is operated with electricity.

You should therefore observe the following:

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable directly at the plug and never by the cable, as this could damage it.
- Do not use extension cables, multiple plugs or connectors.
- Only have the mains cable replaced by our after-sales service.

## Safety for children

### **Warning**

#### **Risk of death or injury!**

You should therefore observe the following:

- Do not leave the dryer unattended when children or other people who cannot assess the risks are nearby.
- Do not let children play with the dryer.
- Children may become entangled in packaging or film if allowed to play with them, or they may pull them over their heads and suffocate. Keep packaging, packaging parts and film out of the reach of children.
- Children may lock themselves in the dryer. Therefore, when an appliance has reached the end of its service life, unplug it from the mains, cut through the mains cable and destroy the lock on the dryer door.

## Appliance safety

### **Warning**

#### **Risk of death!**

- Do not use the dryer if industrial chemicals have been used to clean it.
- Laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite or cause an explosion when drying is in progress. Before drying, rinse the laundry in hot water with detergent.
- Coal dust or flour in the area around the dryer may cause an explosion.
- Only replace defective components with genuine spare parts.

## Caution!

### Risk of material damage to the dryer or fabrics

- Only use the dryer for drying and freshening up fabrics at home and for fabrics that have been washed with water and are suitable for tumble-drying. Any other use is not considered intended use and is prohibited.
- Foamed material or foam rubber may become deformed or melt during drying. Do not dry any laundry that contains foamed material or rubber.
- Do not lean or sit on the dryer door, as the dryer may tip over.
- Loose cables or hoses may cause you to trip. Avoid tripping hazards.
- Light things, such as hair, may be sucked into the air inlet during operation; keep these away from the dryer.
- The last phase of the drying cycle takes place without any heat (cooling cycle) to ensure that the laundry remains at a temperature that will not damage it.



## Environmental protection

### Packaging/old appliance



Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2012/19/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides a framework for the collection and recycling of old appliances, which is valid across the EU.

### Coolant

The dryer's heat exchanger contains fluorinated greenhouse gas in a hermetically sealed unit.



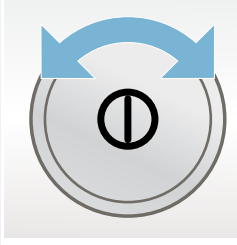
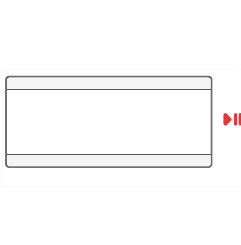
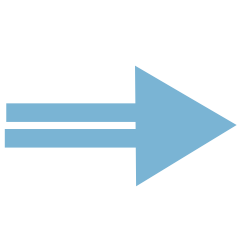
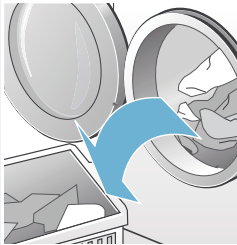

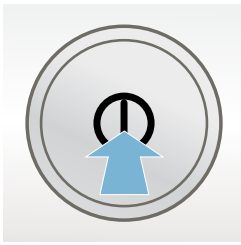
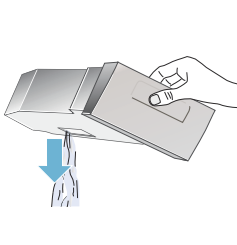
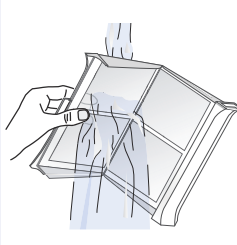
<b>Greenhouse gas:</b>	<b>R134a</b>
<b>Capacity (g):</b>	280
<b>GWP (kgCO<sub>2</sub>/kgRefrig):</b>	1300
<b>Total GWP (kgCO<sub>2</sub>):</b>	364

Dispose of the dryer properly.


### Energy-saving tips

- Spin the laundry before drying. The drier the laundry, the shorter the drying time will be, thus consuming less energy.
- Load the dryer with the maximum load.
  - Note:** Do not exceed the maximum load for the programs, as this prolongs the drying time and increases energy consumption.
- Ventilate the room and keep the air inlet on the dryer free to ensure air exchange.
- Clean the fluff filter after each drying cycle. If the fluff filter is dirty, the drying time is prolonged and energy consumption is increased.
- **Energy saving mode:** If the dryer is not operated for a prolonged period, it automatically switches off before the program starts and when the program has ended to save energy. The display panel and indicator lamps go off after a few minutes and the Start button flashes. To activate the lighting, press any button, open or close the dryer door or turn the program selector.

## The main points in brief
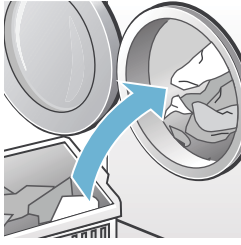
<b>1</b>		→		→	
	Load the laundry and close the door.		Switch off the dryer.		Select a programme and, if necessary, adjust the default programme settings.
<b>2</b>		→		→	
	Select the start button  .		Dry.		Unload the laundry.
<b>3</b>		→		→	
	Switch off the dryer.		Empty the condensate container.		Clean the fluff filter.

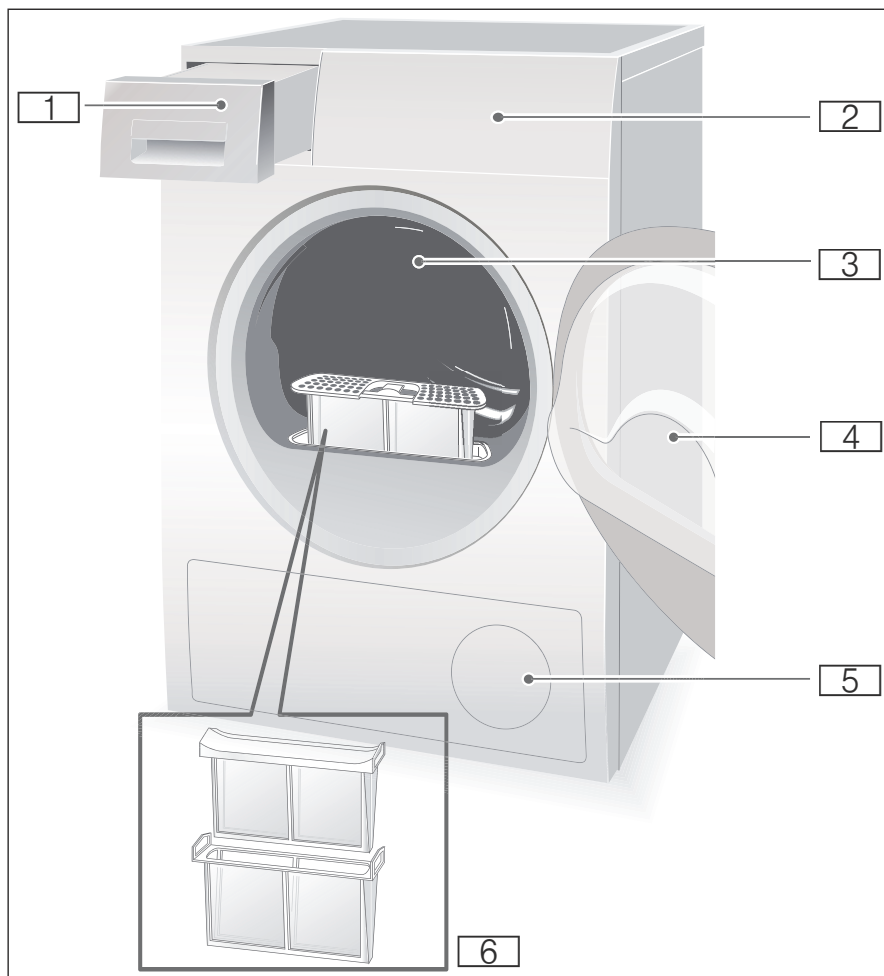


 **Getting to know your appliance****Dryer**

- 1** Condensate container
- 2** Control and display panel
- 3** Drum interior light (depending on the model)
- 4** Dryer door
- 5** Air inlet
- 6** Fluff filter

en Getting to know your appliance


## Control panel

**Note:** All buttons are sensitive and only need to be touched briefly.

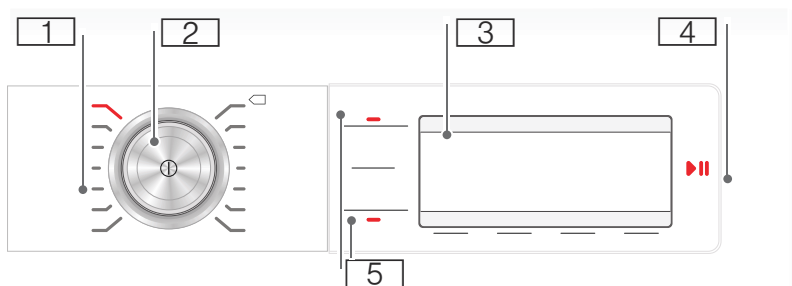

- 1 **Programmes** → Page 13.
- 2 **Programme selector** and **On/Off button**.
- 3 **Display panel with buttons** → Page 10.
- 4 **Start button** for starting, interrupting or cancelling the programme.
- 5 **Buttons** → Page 15.

## Display panel

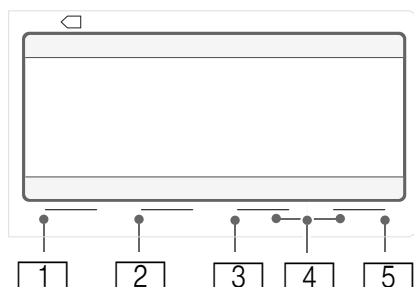

### Button

Button	Description	Display
1	Select the <b>dryness level</b> .	Iron Dry Cupboard Dry Cupboard Dry Plus
2	Select <b>Anti-Crease</b> .	<b>120</b> Anti-Crease function in minutes
3	Select <b>Ready in</b> .	<b>1:40</b> Expected programme duration in hours and minutes or timed programme selected  <b>3 h</b> Programme delay in hours when "Ready in" time is selected
4	Select <b>Settings 3 sec</b> .	<b>End signal</b> <b>Button signal</b> <b>Automatic switch-off</b> <b>Language</b>
5	Select <b>Options</b> .	Spin class Fine adjustment of the dryness level Low heat

For a detailed description of all buttons, see → *Page 15* onwards.

### Other displays

Display	Description
<b>Heat exchanger is being rinsed</b>	The heat exchanger is cleaned automatically.
<b>Please empty the condensate container</b>	Empties the condensate container; → <i>Page 20</i> .
<b>Please clean the fluff filters</b>	Cleans the fluff filters; → <i>Page 19</i> .
	Childproof lock; → <i>Page 15</i> .
<b>Pause, Ready/Anti-Crease</b>	Programme progress: Anti-Crease; End and Pause



## Laundry

### Preparing the laundry



#### **Warning**

##### **Risk of explosion or fire!**

Remove any cigarette lighters and matches from pockets.

#### **Caution!**

##### **The dryer drum and fabrics may be damaged.**

Remove all objects from pockets and take note of the following information:

- Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Close zips, hooks and eyes, and do up any buttons.
- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Remove any metal objects, such as paper clips, from pockets.
- Knitted fabrics, such as T-shirts and jerseys, often shrink slightly the first time they are tumble-dried. Use a gentle programme.
- Do not over-dry easy-care laundry. This increases creasing of the laundry.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.

### Sorting washing according to:

- Suitable for tumble drying
- Dry at normal temperature
- Dry at low temperature
- Do not tumble-dry

If you dry thin- and thick-layered fabrics and fabrics with several layers together, these will dry to differing degrees. To achieve an even drying result, you should therefore only dry laundry of the same type of fabric and structure together. If you feel that the laundry is still too damp afterwards, you can select a time programme for subsequent drying → *Page 13*.








#### **Caution!**




 



##### **Risk of material damage to the dryer or laundry.**

Do not dry non-breathable fabrics, such as rubber-coated laundry.

 
 
 








## Programmes and buttons

### Programmes



Programme and fabrics	Maximum load and programme settings/info
Name of the programme Which fabrics is the programme suitable for?	The maximum load is based on the dry weight of the fabrics
	Possible programme settings
<b>Cottons</b>  Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.	<b>8 kg</b>
<b>Easy-Care</b>  Synthetic or blended fabrics.	<b>3.5 kg</b>
<b>Mix</b>  Mixed load consisting of cotton and synthetic fabrics.	<b>3 kg</b>
<b>Delicate</b>  For delicate, washable underwear, e.g. made of velvet, lace, Lycra, silk or satin.	<b>1 kg</b>
<b>Wool finish</b>  Fabrics made from wool or a wool blend that are suitable for tumble drying.	<b>3 kg</b>
<b>Time program cold 30 min</b>  All types of fabric. For freshening up or airing items of laundry that have not been worn for long.	<b>3 kg</b>
<b>Time program warm 30 min</b>  All types of fabric; time programme. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry.	<b>3 kg</b>
<b>Notes</b> <ul style="list-style-type: none"> <li>■ Only dry wool, sports shoes and soft toys with the basket for woollens → <i>Page 34</i>.</li> <li>■ In the time programme, the laundry's residual moisture is not automatically detected. If the laundry is still too damp after the drying programme, repeat the programme.</li> </ul>	
 
<p><b>Time program warm 60 min</b> </p> <p>All types of fabric; time programme. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry.</p> <p><b>Notes</b></p> <ul style="list-style-type: none"> <li>■ Only dry wool, sports shoes and soft toys with the basket for woollens → <i>Page 34</i>.</li> <li>■ In the time programme, the laundry's residual moisture is not automatically detected. If the laundry is still too damp after the drying programme, repeat the programme.</li> </ul>	<p><b>3 kg</b></p>
<p><b>Shirts</b> </p> <p>Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics.</p>	<p><b>3 kg</b></p>
<p><b>Down</b> </p> <p>Fabrics, pillows, bedspreads or eiderdowns filled with down. Dry large items individually.</p>	<p><b>1.5 kg</b></p>
<p><b>Sport</b> </p> <p>Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics.</p>	<p><b>1.5 kg</b></p>
<p><b>Super Quick 40'</b> </p> <p>Synthetics and light cottons.</p>	<p><b>2 kg</b></p>
<p><b>Blankets</b> </p> <p>Fabrics, pillows, quilts or bedspreads filled with synthetic fibres. Dry large items individually. Observe the care label.</p>	<p><b>2.5 kg</b></p>
<p><b>Towels</b> </p> <p>Hard-wearing towels made of cotton.</p>	<p><b>6 kg</b></p>

## Buttons

  Buttons	Explanations and notes
<b>Note:</b>	Not all buttons and their functions can be selected in all programmes.
 <b>(Dryness level):</b>	Select the dryness level (e.g. Cupboard Dry) or the drying time (20 mins up to 3 hrs 30 mins, depending on the model and programme). Select the dryness level according to the laundry to be dried. If you have selected a dryness level, this is stored for all programmes, except for Cottons, even after the dryer has been switched off.
 Cupboard dry plus	For multi-layered, thick laundry which is difficult to dry.
 Cupboard dry	Normal, single-layered laundry.
 Iron Dry	Normal, single-layered laundry that still needs to be damp after drying and is suitable for ironing or hanging up.
 <b>(Anti-Crease)</b>	The drum moves the laundry at regular intervals for 60 to 120 minutes after drying, in any programme, to prevent creasing.
 <b>(Ready in)</b>	The programme will end in between 1 h and 24 h. Set the "Ready in" time in increments of one hour to delay the start of the programme. The required number of hours after the programme ends is displayed on the display panel.
 Childproof lock	You can activate or deactivate the childproof lock by pressing and holding the "Ready in" button for five seconds.
 <b>(Options)</b>	Select the button and the menu will be displayed in the display panel.
 Spin class	For the spin class, set the spin speed at which the laundry has been spun in the washing machine. This permits the expected drying time to be indicated more precisely. Speeds of between 600 and 1800 rpm can be selected. Default setting: 1000 rpm
 Fine adjustment of the dryness level	If the laundry is too damp after drying, you can finely adjust the dryness levels e.g. Cupboard Dry. The dryness level can be increased in three stages, from +1 to +3. If you have adjusted the dryness level, the setting for all programmes with a selectable dryness level is retained even after the dryer is switched off.
 Low heat	Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane, may increase the drying time.
<b>Memory 1/2</b>	You can save individual programme settings under Memory 1 and 2. Select the required programme settings and press the <b>Memory 1</b> or <b>Memory 2</b> button for 3 seconds until the display panel shows that <b>Memory programme 1</b> or <b>2</b> is saved. Your selected programme settings are retained even after the dryer is switched off. Default setting: No Memory programme saved.

## en Programmes and buttons

 <b>3 sec.</b> <b>(Settings 3 sec.)</b>	Press both buttons at the same time and hold them for 3 seconds. The menu will be displayed in the display panel.
End signal, button signal	Select the button signal volume: off - quiet - normal - loud - very loud. Default setting: loud
Automatic switch-off	Automatically switching off the dryer after 15, 30 or 60 minutes, or never automatically switching off. Default setting: 15 minutes
Language	Select the desired language in the display panel.
 <b>(Start/Pause)</b>	Starts or pauses the programme.






## Operating the appliance

### Loading laundry and switching on the dryer

**Note:** The dryer must be correctly positioned and connected, → *Page 28*.



1. Place the laundry in the drum.
2. Press the  button to switch the dryer on.
3. Close the dryer door.

#### **Caution!**

#### **Risk of material damage to the dryer or laundry.**


Do not trap any laundry between the dryer door and the door seal.

**Note:** The dryer drum is lit up after the door is opened and closed and once the programme has started. The drum interior light goes out on its own.

## Setting a programme

**Note:** If you have activated the childproof lock, you must deactivate it before you can set a programme, see → *Page 15*.

1. Select the required programme; detailed information on the programmes can be found from → *Page 13* onwards.

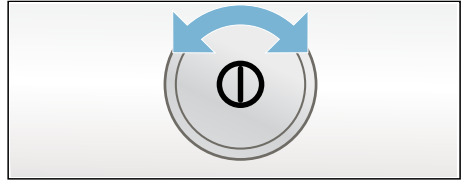

2. Use the programme selector to set the required programme. The default programme settings for the selected programme appear in the display panel.

**Note:** Default programme settings are standard settings that are already defined when a programme is selected. After selecting a programme, you can see the default programme settings in the display panel.

3. If required, adjust the default programme settings. You can find detailed information on this from → *Page 13* onwards.

## Starting the programme

Press the Start button.

**Note:** If you want to lock the programme to prevent it from being inadvertently adjusted, you can select the childproof lock, see → *Page 15*.

## Programme sequence

The programme status is displayed in the display field.

## Changing the programme or adding laundry

You can remove or add laundry and change or alter the programme at any time during drying.

1. To pause the programme, open the dryer door or press the Start button.
2. Add or remove laundry.
3. Select another programme or an additional function, if required.
4. Close the dryer door.
5. Press the Start button.

**Note:** The programme duration in the display panel is updated depending on the load and residual moisture in the laundry. The values displayed may change after the programme is changed or the load is adapted.

## Cancelling the programme

The programme can be interrupted at any time; to pause, open the dryer door or press the Start button.

### Caution!


#### **Risk of fire. Laundry may catch fire.**


If you cancel the programme, you must remove the laundry items and spread them out so that the heat can disperse.

## Programme end

FERTIG. WAESCHE ENTNEHMEN.  
appears in the display panel.

## Removing laundry and switching off the dryer

1. Remove the laundry.
2. Press the  button to switch the dryer off.

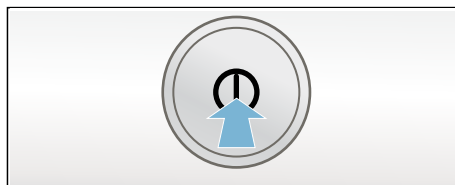


## Clean the fluff filter


**Note:** During drying, fluff and hair from the laundry is trapped by the fluff filter. If the fluff filter is blocked or dirty, this reduces the flow of air, which prevents the dryer from achieving its maximum performance. Clean fluff filters also reduce energy consumption and the drying time.

Clean the fluff filter **after each** drying cycle:

1. Open the dryer door and remove all fluff from the door.
2. Pull out the two-part fluff filter.

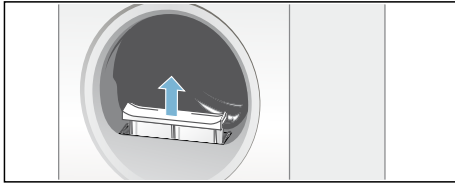


3. Remove the fluff from the recess in the fluff filter.

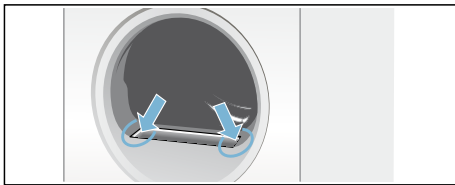


**Note:** Ensure that no fluff falls into the open shaft.


4. Pull apart the two-part fluff filter.

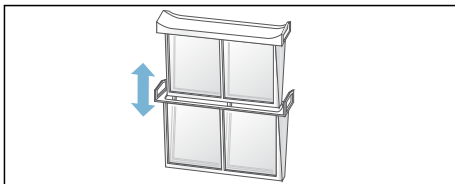


5. Open both filters and remove all the fluff.

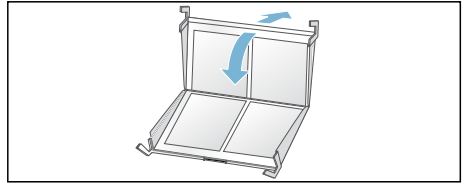

6. Rinse away the fluff under warm, running water.

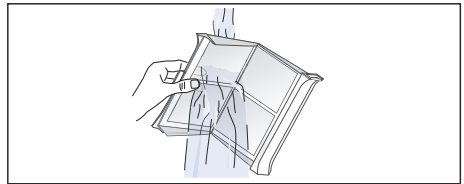

7. Dry the fluff filter, close it and reinsert the two-part fluff filter.

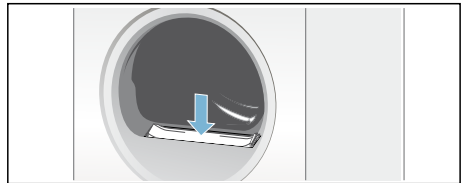

**Caution!**  
**The dryer may be damaged.**

Do not operate the dryer without a fluff filter or if the fluff filter is defective.


## Emptying the condensate container

### Notes


- You can drain off the condensation into the waste-water system using an optional condensation drain\*. For installation, see → Page 29.
- If you drain the condensation using an optional condensation drain, you do not have to empty the condensate container.

**Note:** After each drying cycle, empty the condensate container; otherwise the next drying programme may be cancelled as a result of the condensate container being full.

1. Pull out the condensate container horizontally.

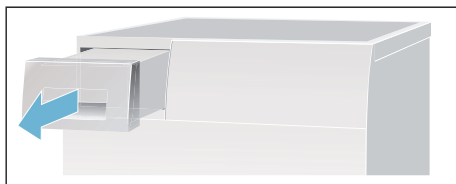

2. Pour out the condensation water.

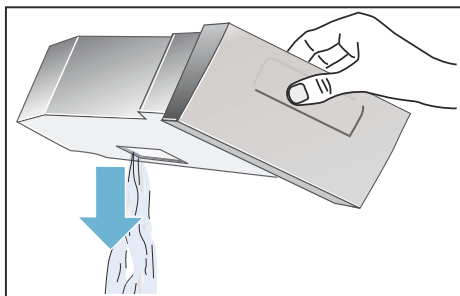


### Caution!

**Dirty condensation water may be harmful to your health and cause material damage.**

Condensation water is not suitable for drinking and may be contaminated with fluff. Do not drink the condensation water or reuse it.

3. Push in the condensate container until you feel it lock back into place in the dryer.

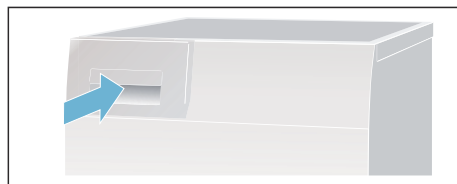

**Note:** The filter in the condensate container filters the condensation which is used during the dryer's automatic cleaning cycle. The filter is cleaned by emptying the condensation. Nevertheless, you should check the filter regularly for remaining deposits and remove them. See → Page 22.


\* Depending on the model




## Noises

**Note:** During drying, the compressor and the pump generate noises which are entirely normal.


From time to time, the compressor in the dryer generates a humming noise. However, the volume may vary depending on the programme and progress of the drying process.

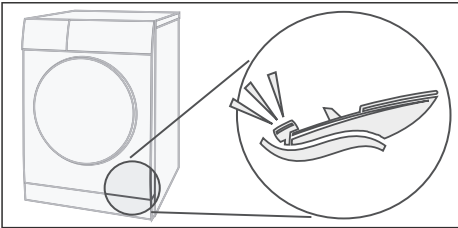


Every now and then, the compressor is ventilated. This creates a whirring noise.

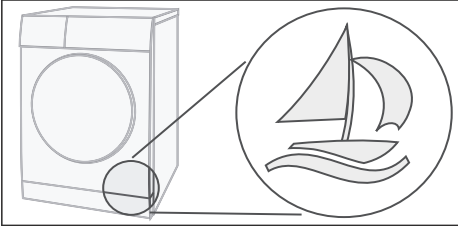

The automatic cleaning of the dryer causes a clicking sound.

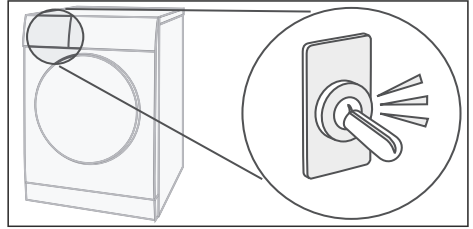

The condensation is pumped into the condensate container using a pump. This generates pumping noises.

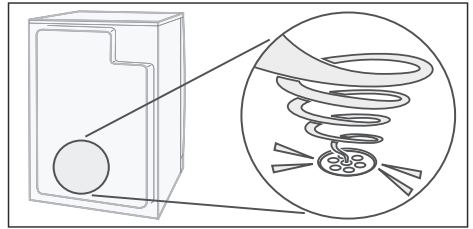



## Cleaning

### Cleaning the dryer and the control panel



#### Warning

#### Risk of death!

There is a risk of electric shock as the dryer is operated with electricity. Disconnect the dryer from the mains before cleaning.

Clean the dryer using only water and a soft, damp cloth.

Remove all detergent residue, spray residue or other residues immediately. Do not use cleaning agents or agents for pre-treating laundry (e.g. prewash sprays, stain removers). Do not use high-pressure cleaners or steam jet cleaners to clean your appliance.

### Cleaning the moisture sensor

**Note:** The dryer is equipped with a stainless-steel moisture sensor. The moisture sensor measures how damp the laundry is. After long periods of use, a fine layer of limescale can form on the moisture sensors. This must be removed regularly.



Open the door and clean the moisture sensor with a rough sponge.

#### Caution!


#### The moisture sensor may be damaged.

Do not clean the moisture sensor with steel wool and abrasive materials.


### Cleaning the filter in the condensate container

**Note:** The filter in the condensate container cleans the condensation water that is used during the dryer's automatic cleaning cycle.


1. Pull out the condensate container horizontally.
2. Pour out the condensation water.
3. Remove the filter.

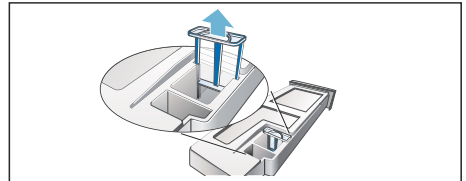

4. Clean the filter under warm, running water or in the dishwasher.

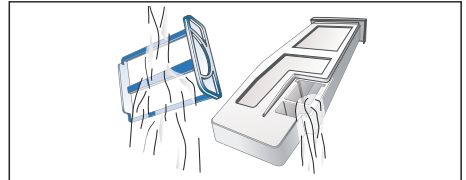

5. Push in the filter until you feel it lock into place.

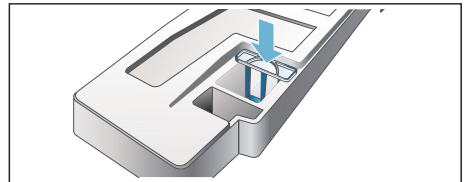

#### Caution!

#### The dryer may be contaminated with fluff and thus become damaged.

Only operate the dryer with the filter inserted.

6. Push in the condensate container until you feel it lock into place.



## Faults and what to do about them

Faults	Cause/remedy
<p><b>Please empty the condensate container</b> on the display panel and the drying cycle is interrupted.</p>	<ul style="list-style-type: none"> <li>■ Empty the condensate container and press the Start button → <i>Page 20</i>.</li> <li>■ If the optional condensation drain* is installed, the drain hose may be blocked or kinked. Check the hose for deposits and rinse the hose. Lay the hose without any kinks.</li> </ul>
<p><b>Please clean the fluff filters</b> on the display panel.</p>	<p>Clean the fluff filter and press the Start button → <i>Page 19</i>.</p>
<p><b>Heat exchanger is being rinsed</b> on the display panel.</p>	<p>Not a fault. The heat exchanger is cleaned automatically. Do not pull out the condensate container while this is displayed.</p>
<p>Dryer does not start.</p>	<ul style="list-style-type: none"> <li>■ Mains plug plugged in or fuse checked?</li> <li>■ Programme selected? Select a programme.</li> <li>■ Dryer door open? Close the door.</li> <li>■ Childproof lock activated? Deactivate the childproof lock.</li> <li>■ "Ready in" time selected? Programme starts after a delay → <i>Page 15</i>.</li> </ul>
<p>Creasing.</p>	<ul style="list-style-type: none"> <li>■ Creasing occurs when you have exceeded the maximum load or selected the wrong programme for the type of fabric. All the required information can be found in the programme table → <i>Page 13</i>.</li> <li>■ Remove clothes immediately after drying; creasing may occur if they are left in the drum.</li> </ul>
<p>Water is leaking out.</p>	<p>Not a fault; the dryer may be positioned on an incline. Level the dryer.</p>
<p>Laundry is not dried correctly or is still too damp.</p>	<ul style="list-style-type: none"> <li>■ After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse.</li> <li>■ Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier → <i>Page 15</i>.</li> <li>■ Select a programme with a longer drying time or increase the drying level. This does not increase the temperature.</li> <li>■ Select a timed programme for subsequent drying of laundry that is still damp → <i>Page 13</i>.</li> <li>■ If you have exceeded the maximum load for the programme, the laundry may not be dried properly.</li> <li>■ Clean the moisture sensor in the drum. A fine layer of limescale may adversely affect the performance of the sensors and your washing will not dry properly → <i>Page 22</i>.</li> <li>■ Drying has been interrupted as a result of a power cut, because the condensate container is full or because the maximum drying time has been exceeded.</li> </ul>
<p><b>Note:</b> See also the laundry tips → <i>Page 12</i>.</p>	

\* depending on the model

Faults	Cause/remedy
Drying time too long?	<ul style="list-style-type: none"> <li>■ The fluff filter may be dirty and cause a longer drying time. Clean the fluff filter.</li> <li>■ If the air inlet on the dryer is blocked or not freely accessible, this may increase the drying time. Make sure that the air inlet remains unobstructed.</li> <li>■ If the ambient temperature is higher than 35 °C, this may extend the drying time.</li> <li>■ Insufficient air circulation in the room may increase the drying time. Ventilate the room.</li> </ul>
Display panel goes off and Start button flashes.	Not a fault. Energy saving mode is active → <i>Page 7</i> .
Residual water in the condensate container despite the dryer being connected to the condensation drain*.	Not a fault. If the condensation drain is installed, residual water remains in the condensate container due to the dryer's self-cleaning function.
Humidity in the room increases.	Not a fault. Make sure the room is sufficiently ventilated.
Power cut.	The drying programme is interrupted. Remove the laundry and spread it out, or restart the programme.
Unusual noises when drying.	Not a fault. Noises are produced by the automatic cleaning of the heat exchanger → <i>Page 21</i> .
The dryer feels cold despite drying.	Not a fault. The dryer can dry efficiently at low temperatures using a heat pump.
* depending on the model	

**Note:** If you cannot rectify the fault yourself by turning the dryer off and on, please contact our after-sales service.





## After-sales service

### **After-sales service**

If you cannot rectify the fault yourself (faults, what to do?), please contact our after-sales service. We will always find an appropriate solution to avoid unnecessary visits by engineers.

The contact information for your nearest after-sales service can be found here or in the enclosed after-sales service directory.

Please provide after-sales service with the dryer's product number (E-no.) and production number (FD).

E-Nr. _____ FD _____
----------------------

You can find this information on the inside of the dryer door or on the rear of the dryer.

### **Trust the expertise of the manufacturer.**

Contact us. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts.



 
## Consumption values


### Consumption values table

Programme	Spin speed which is used for spinning the laundry	Duration**		Energy consumption**	
		8 kg	4 kg	8 kg	4 kg
<b>Cottons</b>					
Cupboard Dry*	1400 rpm	184 min	116 min	1.12 kWh	0.66 kWh
	1000 rpm	209 min	132 min	1.27 kWh	0.75 kWh
	800 rpm	228 min	144 min	1.47 kWh	0.87 kWh
Iron Dry*	1400 rpm	120 min	76 min	0.61 kWh	0.36 kWh
	1000 rpm	142 min	90 min	0.77 kWh	0.46 kWh
	800 rpm	164 min	103 min	0.95 kWh	0.56 kWh
<b>Easy-Care</b>		<b>3.5 kg</b>		<b>3.5 kg</b>	
Cupboard Dry*	800 rpm	60 min		0.40 kWh	
	600 rpm	73 min		0.46 kWh	

\* Programme setting for testing in accordance with the applicable EN 61121 standard.  
 \*\* The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

### Most efficient programme for cotton fabrics

The following "standard cottons programme" (identified with ) is suitable for drying normal, wet cotton laundry and is most efficient in terms of its combined energy consumption for drying wet cotton laundry.

Standard programme for cottons in accordance with current EU regulation 932/2012			
Programme + Drying level	Load	Energy consumption	Programme duration
 Cottons + Cupboard Dry	8 kg/4 kg	1.27 kWh/0.75 kWh	209 min/132 min
Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU			



## Technical data

**Dimensions:**

85 x 60 x 60 cm

Height x width x depth

**Weight:**

Approx. 57 kg

**Maximum load:**

8 kg

**Condensate container:**

4.6 l

**Connected voltage:**

220 - 240 V

**Connected load:**

Max. 700 W

**Fuse:**

10 A

**Drum interior light\*****Ambient temperature:**

5 - 35 °C

**Power consumption when  
switched off:**

0.13 W

**Power consumption when ready  
for use (left-on mode):**

0.13 W

\* Depending on the model



## Installation and connection

### Scope of delivery

 
- Dryer
- Installation and operating instructions
- Basket for woollens\*
- Condensation drain\*

### Installing and connecting the dryer



#### **Warning** **Risk of death!**

There is a risk of electric shock as the dryer is operated with electricity.

- Check the dryer for visible damage. You must not operate the dryer if it is damaged.
- Before connecting the dryer to the power supply, ensure that the electric voltage specified on the rating plate matches the voltage of your socket.
- Only use earth-leakage circuit breakers with the following symbol:  

- Ensure that the mains cable is not kinked or trapped, and that it does not come into contact with heat sources or sharp edges.



#### **Warning** **Children may lock themselves in the dryer, putting their lives at risk!**

Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening.

#### **Caution!** **Risk of injury**

- Due to the heavy weight of the dryer, you may injure yourself if you lift it. Do not lift the dryer on your own.
- You could cut your hands on the sharp edges of the dryer. Do not hold the dryer by the sharp edges.
- Protruding parts on the dryer may break off when it is lifted or pushed. Do not move the dryer by holding onto protruding parts.

#### **Caution!** **Risk of material damage to the dryer or fabrics.**

- Check the dryer for damage caused during transportation. Never operate a dryer if it is damaged.
- Any residual water in the dryer may freeze and damage the dryer. Do not install the dryer in rooms that are at risk of frost.

During installation, ensure that:

- The dryer is placed on a clean, level and firm surface,
- The mains plug can be accessed at all times,
- The air inlet on the dryer is kept clear and there is sufficient ventilation,
- The area around the dryer is kept clean and
- The dryer is levelled using the threaded feet. Use a spirit level to do this.

\* Depending on the model


## Changing the condensation drain

### Notes


- The condensation from the dryer can either be discharged into the condensate container or drained off via a connection to the waste-water system. The factory setting is for the condensation from the dryer to be discharged into the condensate container.
- If the condensation drain is installed, residual water remains in the condensate container because of the dryer's self-cleaning function.

Change the condensation drain as follows:


1. Remove the accessory from the dryer drum.

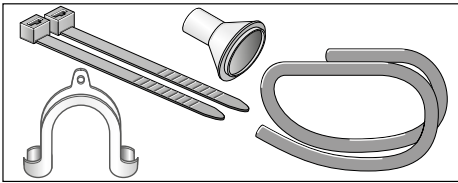


2. Delivery status of the dryer. The hose for discharging the condensation into the condensate container is secured to the connecting piece.
3. Disconnect the hose from the connecting piece and move it into the "parked" position.

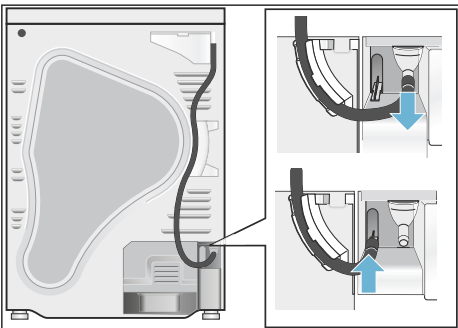

4. Remove the drain hose from the accessory and secure it to the empty connecting piece.

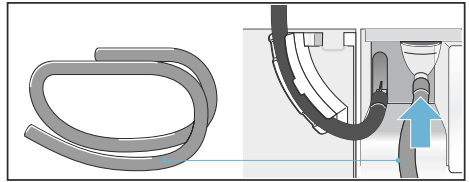

5. Depending on how you connect the hose (A, B or C), secure the drain hose with the remaining accessories on the other side.

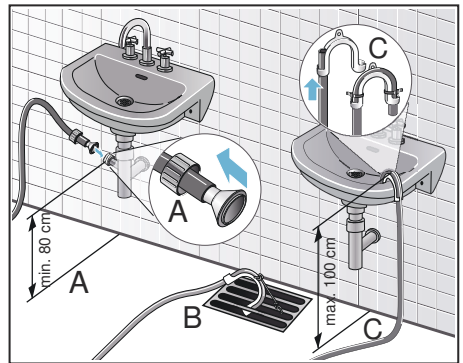

### Caution!

**Blocked water can be drawn back into the dryer and may cause material damage.**

Check that the water drains away from the wash basin quickly. The drain must not be sealed or blocked.


### Caution!

**Material damage due to leaks or draining water.**


Secure the drain hose so that it cannot slip out. Do not kink the drain hose. Observe the height difference between the installation surface and the drain of max. 100 cm, and 80 cm for a drain in a siphon.

**en** Installation and connection


- 6.** Pull out the condensate container fully.

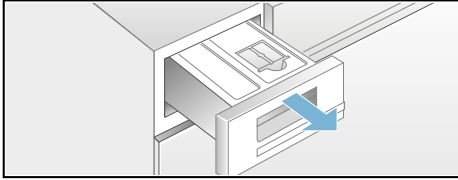


- 7.** Turn the condensate container 180° onto its underside and remove the stopper that is fitted. Turn the condensate container back and insert the stopper into the recess on the top side of the condensate container.

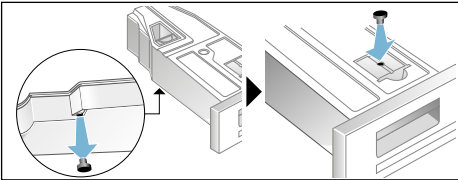

- 8.** Pull the filter out of the notch and place it into the recess on the condensate container.

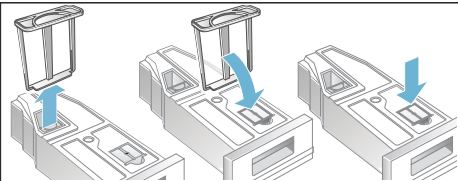

- 9.** Slide in the condensate container until it clicks into place.

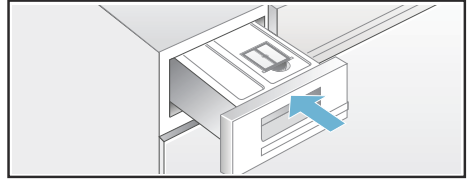


The condensation is now discharged via the drain hose into the waste-water system or into a wash basin

**Note:** If you want to change the condensation drain back to the condensate container, carry out these steps in reverse order.


## Changing the side on which the door is hinged

Proceed as follows to change the side on which the door is hinged:


1. Set the programme selector to the "Off" position, disconnect the dryer from the mains and open the door.

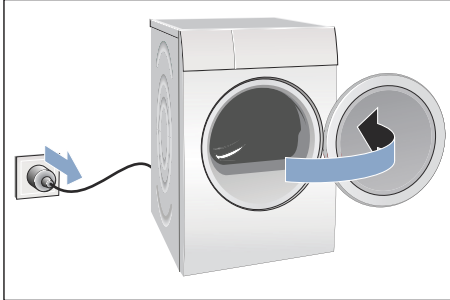


2. Remove the screws from the dryer and then remove the dryer door.  
**Note:** Use a T20 (Torx) screwdriver only. Do not use any other tools to change the side on which the door is hinged.

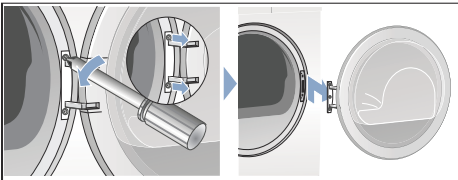


3. Carefully place the dryer door onto a flat surface, and place a hand towel or other such item between the door and the surface to avoid scratching or damaging the door.

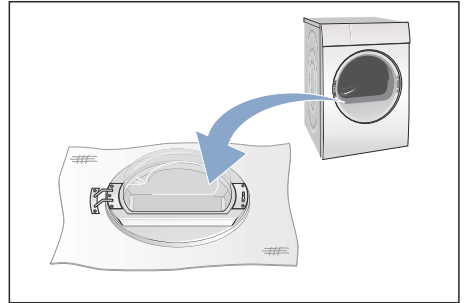


4. Now remove the screws from the door hinge, and remove the hinge from the dryer door.

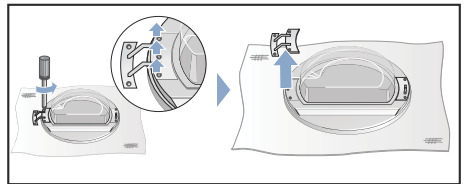


5. Remove the screws from the door handle on the dryer door and remove the door handle.

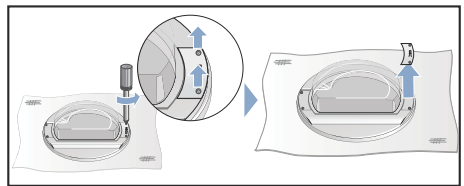


6. Unlock the door ring.

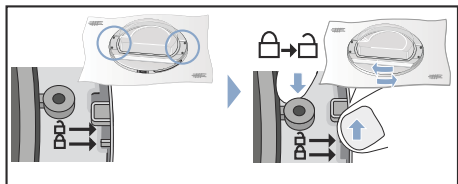



7. Now lift the dryer door from the door ring. Rotate the dryer door and place it back onto the door ring in the corresponding place.

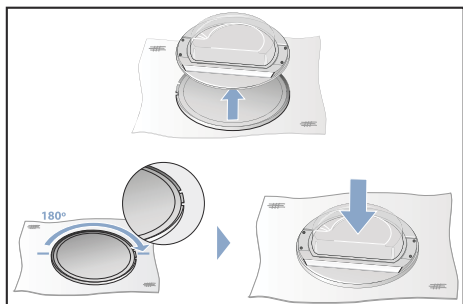


8. Lock the door ring back in place.

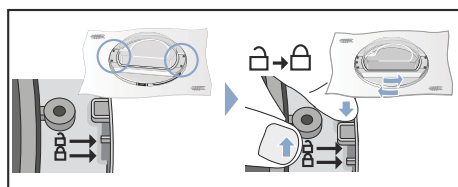

9. Put the door hinge and door handle in place as shown in the picture, and screw them back onto the dryer door.

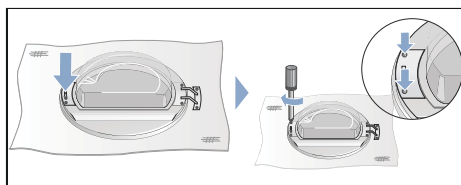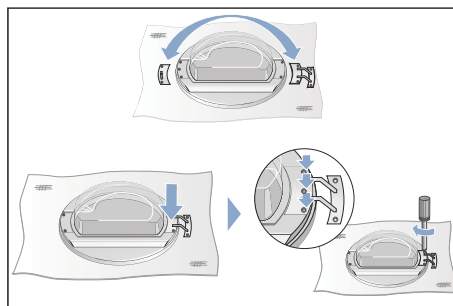


10. Remove the cover from the door lock on the dryer and place it to one side.

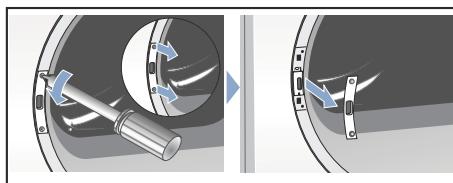





**11.** Remove the door lock.

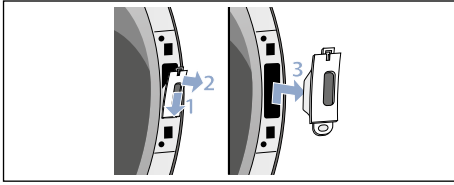


**12.** Insert the door lock (1.) on the other side of the dryer and screw the cover (2.) back on.

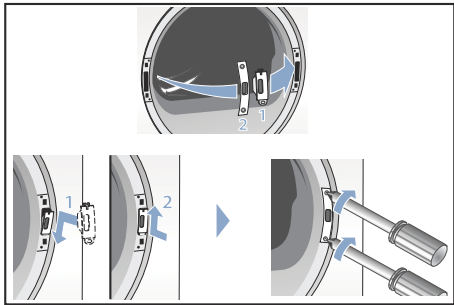

**13.** Now also screw the dryer door back on.

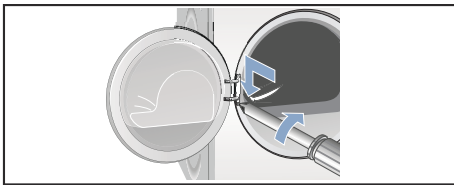

**14.** You can now reconnect the dryer, close the door and start a programme.

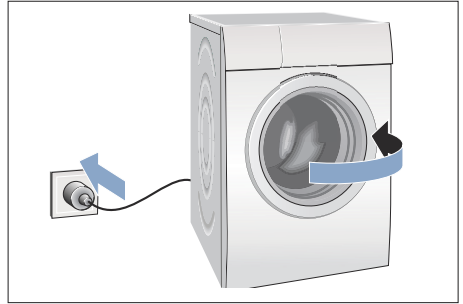

## Optional accessories

Order optional accessories\* from the after-sales service:

### ■ Washer-dryer stack connection set:

To save space, the dryer can be placed on top of a suitable washing machine of the same width and depth.

The dryer must be secured to the washing machine using this connection set.

Order number with pull-out worktop:

**WTZ11400;**

Order number without pull-out worktop: **WTZ20410.**

### ■ Platform:

For easier loading and unloading, raise your dryer with a platform.

Transport laundry with the clothes basket integrated into the platform drawer.

Order number: **WMZ20500.**

### ■ Basket for woollens:

Dry individual woollen items, sports shoes and soft toys in the basket for woollens.

Order number: **WMZ20600.**

## Transport and frost protection

### Empty the condensate container and residual water from the dryer:

1. Select any programme using the programme selector.
2. Press the Start button.
3. Wait for 5 minutes.  
**Note:** The condensation is drained.
4. Empty the condensate container again.
5. Switch off the dryer.

### Caution!

**Any residual water may leak out and cause material damage.**

Transport the dryer in an upright position.

### Caution!

**The dryer contains coolant and may be damaged.**

Allow the dryer to rest for two hours before initial use.

\* Depending on the model





### **Advice and repair order in the event of faults**

GB 0344 892 8979 (Calls charged at local or mobile rate.)

IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

You can find the contact information for all countries in the attached after-sales service directory.

Robert Bosch Hausgeräte GmbH  
Carl-Wery-Straße 34  
81739 München, GERMANY



9001014319 (9502)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>