

# KODAK Ni-MH Battery Charger

## Models K625, K625E

1. Insert 2 or 4 AA/AAA rechargeable Ni-MH batteries into the battery compartment(s), with the +/- contacts facing the +/- contact points in the charger.
  - Batteries must be charged in pairs.
  - When charging only 2 batteries, place them in the front compartment of the battery charger.
2. For charging AAA batteries, pull down the adjustable battery contact plate, then insert the AAA batteries into the compartment. The charger will automatically adjust the charging current for AAA size batteries.
3. Plug the charger into a power outlet. The charge indicator light(s) is illuminated and battery charging begins. The charge indicator light(s) remains on during charging, and turns off only when the charger is unplugged or the batteries are removed.
4. See the table below for charging time. Unplug and re-plug the charger each time you charge another set of batteries.



### CHARGING TIME\*

MIGNON - AA		MICRO - AAA	
AA - 1000-1200 mAh	8 - 10 hours	AAA - 240-320 mAh	5 - 6 hours
AA - 1300-1500 mAh	10 - 12 hours	AAA - 500-600 mAh	9 - 11 hours
AA - 1600-1800 mAh	12 - 14 hours	AAA - 600-700 mAh	11 - 13 hours
AA - 1800-2000 mAh	14 - 16 hours	AAA - 700-800 mAh	13 - 14 hours
AA - 2100-2300 mAh	16 - 18 hours	AAA - 800-900 mAh	14 - 16 hours
AA - 2400-2900 mAh	18 - 20 hours	AAA - 900-1300 mAh	16 - 18 hours

\* Charging time depends upon the brand, capacity, and condition of batteries being charged.

### IMPORTANT SAFETY INSTRUCTIONS—Save These Instructions

- **DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**
- For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet. This battery charger is intended to be correctly oriented in a vertical or floor mount position.
- Do not charge longer than the time specified. Overcharging may cause damage to the charger and batteries.



**In Europe:** For human/environmental protection, it is your responsibility to dispose of this equipment at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility, or appropriate local authorities; or visit [www.kodak.com/go/recycle](http://www.kodak.com/go/recycle). (Product weight: 200 g.)

# Kodak

Eastman Kodak Company  
Rochester, NY 14650 U.S.A.

© Eastman Kodak Company, 2008.

MC/MR/TM: Kodak. 4H5226

[www.kodak.com/go/accessories](http://www.kodak.com/go/accessories)

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>