

# JVC



## COMPACT VHS CAMCORDER

# GR-SZ3000



**Super VHS**

**SVHS** VHS PAL  
625



## INSTRUCTIONS

### CONTENTS

<b>GETTING STARTED</b>	<b>6</b>
<b>RECORDING</b>	<b>14</b>
Basic Recording .....	14
Basic Features .....	15
Advanced Features .....	18
Programme AE With Special Effects .....	18
Focusing .....	20
Picture Stabilizer .....	22
Exposure Control .....	22
Fade/Wipe .....	23
Wide .....	24
Instant Titles .....	24
Character Generator .....	25
Date/Time Character Insert .....	26
Manual White Balance Adjustment ...	27
Using Menu For Detailed Adjustment .....	28
Self-Timer .....	30
Animation .....	31
Time Lapse .....	31
<b>PLAYBACK</b>	<b>32</b>
Basic Connections .....	32
Basic Playback .....	34
Features .....	35
Using The Cassette Adapter .....	36
<b>EDITING</b>	<b>37</b>
Tape Dubbing .....	37
Random Assemble Editing [R.A.Edit] ....	38
<b>USING REMOTE CONTROL UNIT</b>	<b>42</b>
Insert Editing .....	44
Audio Dubbing .....	45
<b>USER MAINTENANCE</b>	<b>46</b>
<b>TROUBLESHOOTING</b>	<b>47</b>
<b>INDEX</b>	<b>49</b>
Viewfinder .....	49
Controls .....	50
Connectors .....	51
Indicators .....	51
Other Parts .....	51
Terms .....	52
<b>CAUTIONS</b>	<b>53</b>
<b>SPECIFICATIONS</b>	<b>55</b>

**Dear Customer,**

Thank you for purchasing the JVC Compact VHS camcorder. Before use, please read the safety information and precautions contained in the following pages to ensure safe use of your new camcorder.

**Using This Instruction Manual**

- All major sections and subsections are listed in the Table Of Contents (☞ cover page).
- Notes appear after most subsections. Be sure to read these as well.
- Basic and advanced features/operation are separated for easier reference.

**It is recommended that you . . .**

- ..... refer to the Index (☞ pgs. 49 – 52) and familiarize yourself with button locations, etc. before use.
- ..... read thoroughly the Safety Precautions that follow and cautions (☞ pgs. 53, 54). They contain extremely important information regarding the safe use of your new camcorder.

# SAFETY PRECAUTIONS

**IMPORTANT****Connection to the mains supply in the United Kingdom.****DO NOT cut off the mains plug from this equipment.**

If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

 
**BE SURE to replace the fuse only with an identical approved type, as originally fitted, and to replace the fuse cover.**

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

**DO NOT** make any connection to the Larger Terminal coded E or Green.

The wires in the mains lead are coloured in accordance with the following code:



If these colours do not correspond with the terminal identifications of your plug, connect as follows:

Blue wire to terminal coded N (Neutral) or coloured black.

Brown wire to terminal coded L (Live) or coloured Red. If in doubt — consult a competent electrician.

## WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

**Warning on lithium battery**

The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100°C or incinerate.

Replace the battery with Panasonic (Matsushita Electric), Sanyo or Maxell CR2025; use of another battery may present a risk of fire or explosion.

- Dispose of used battery promptly.
- Keep away from children.
- Do not disassemble and do not dispose of in fire.

## WARNING: AC Power Adapter/Charger is NOT FOR USE WITH TOYS.

**CAUTIONS:**

 
- To prevent shock, do not open the cabinet. No user serviceable parts inside. Refer servicing to qualified personnel.
- When you are not using the AC Power Adapter/Battery charger for a long period of time, it is recommended that you disconnect the power cord from AC outlet.

**NOTES:**

- *The rating plate (serial number plate) and safety caution are on the bottom and/or the back of the main unit.*
- *The rating plate (serial number plate) of the AC Power Adapter/Charger is on its bottom.*

**Crossed Out Dust Bin Mark**

- The Crossed Out Dust Bin Mark on the battery pack indicates that the product complies with Directives 91/157/EEC and 93/86/EEC.
- Nickel-Cadmium (Ni-Cd) battery pack must be recycled or disposed of properly.



Cd

This camcorder is designed to be used with PAL-type colour television signals. It cannot be used for playback with a television of a different standard. However, live recording and viewfinder playback are possible anywhere. Use the BN-V12U/BN-V22U/BN-V25U battery packs and, to recharge them, the provided multi-voltage AC Power Adapter/Charger. (An appropriate conversion adapter may be necessary to accommodate different designs of AC outlets in different countries.)

This unit is produced to comply with Standard IEC Publ. 65.



Cassettes marked "S-VHS" and "VHS" can be used with this camcorder. However, S-VHS recordings are possible only with cassettes marked "S-VHS".

## SOME DO'S AND DON'TS ON THE SAFE USE OF EQUIPMENT


**This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.**

- DO** read the operating instructions before you attempt to use the equipment.
- DO** ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.
- DO** consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
- DO** be careful with glass panels or doors on equipment.
- DON'T** continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way — switch off, withdraw the mains plug and consult your dealer.
- DON'T** remove any fixed cover as this may expose dangerous voltages.
- DON'T** leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.
- DON'T** use equipment such as personal stereos or radios so that you are distracted from the requirements of road safety. It is illegal to watch television whilst driving.
- DON'T** listen to headphones at high volume, as such use can permanently damage your hearing.
- DON'T** obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.
- DON'T** use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.
- DON'T** allow electrical equipment to be exposed to rain or moisture.


### **ABOVE ALL**

- NEVER let anyone especially children push anything into holes, slots or any other opening in the case — this could result in a fatal electrical shock;
- NEVER guess or take chances with electrical equipment of any kind — it is better to be safe than sorry!

## REMEMBER

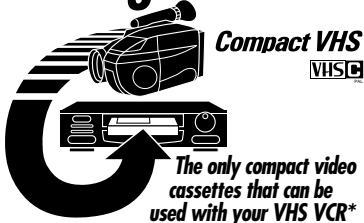**The Logical Choice****Program AE with Special Effects** (☞ pg. 18, 19)

 - Auto Mode Lock ■ Auto Mode Release
- Electronic Fog Filter ■ ND Effect
- Sepia ■ Twilight ■ Sports
- 1/1000 sec. High Speed Shutter
- 1/2000 sec. High Speed Shutter


**Picture Stabilizer** (☞ pg. 22)**Program Manager**

(☞ pg. 18 - 29)


Program AE with special effects, Focus, Picture Stabilizer, Exposure Control, Fade/Wipe, Wide, Instant Titles, Date/Time Character Insert, White Balance Adjustment, Menu Adjustment

**Digital Hyper Zoom**


(☞ pg. 15)

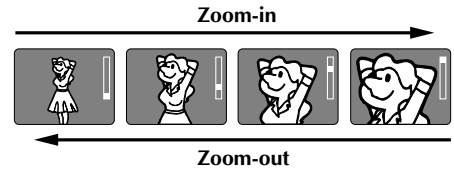**Random Assemble Editing**


(☞ pg. 38 - 41)

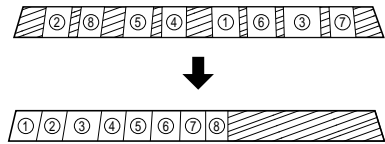**PROVIDED ACCESSORIES**


• AC Power Adapter/  
Charger AA-V11EK

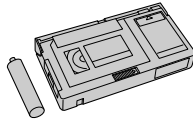


• Cassette Adapter  
C-P7U

 


• Battery Pack  
BN-V12U

 

 • Remote Control  
Unit RM-V704U  
or RM-V700U



• Cable Adapter

 

• Shoulder Strap



• Lithium Battery  
CR2025 x 2




• Editing cable



• DC Cord

## SUPPLY POWER

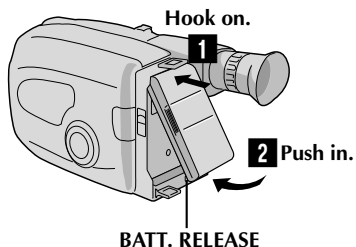


### Using the battery pack

- 1 Hook-on the battery pack's top end to the camcorder. (Charging procedure, pg. 6)
- 2 Push in the battery pack until it locks into place.

### To remove the battery pack


Slide BATT. RELEASE and pull out the battery pack.

## INSERTING A VIDEO CASSETTE

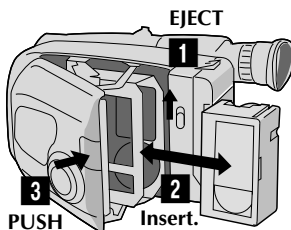

- 1 Slide EJECT.
- 2 Insert a video cassette.
- 3 Press PUSH.  
(For more details, pg. 11)


## PLAYBACK

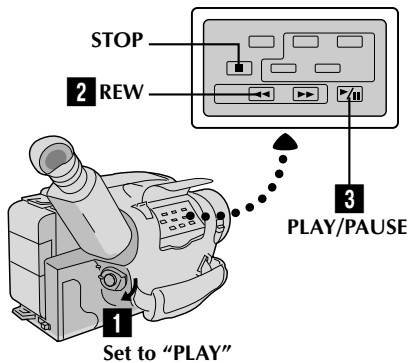


- 1 Set the power switch to "PLAY".
  - 2 Press **REW**.  
— The tape will automatically stop at the beginning of the tape.
  - 3 Press **PLAY/PAUSE**.  
— Playback starts and the playback picture appears in the viewfinder.
- To stop playback, press **STOP**.  
(For more details, pg. 34.)

■ Or simply play back the tape on a VHS VCR using the Cassette Adapter.  
 pg. 36

## SHOOTING

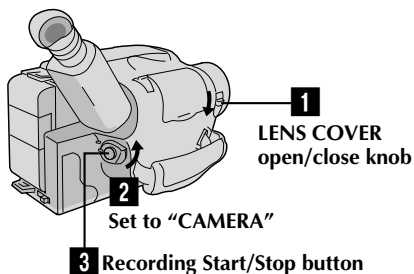


- 1 Slide the LENS COVER open/close knob to open the lens cover.
  - 2 Set the power switch to "CAMERA".  
— The power indicator will light and an image will appear in the viewfinder.
  - 3 Press the Recording Start/Stop button.  
— Recording starts.
- To stop recording temporarily, momentarily press the Recording Start/Stop button once again.  
(For more details, pg. 14)

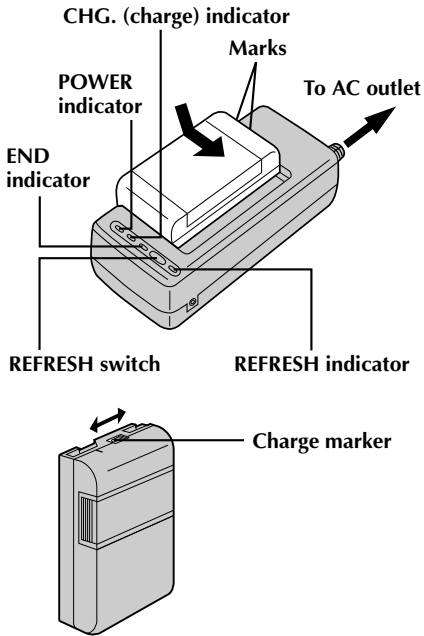

### \*\* CHARGE MARKER

A charge marker is provided on the battery pack to help you remember whether it has been charged or not. Two colours are provided (red and black)—you choose which one means charged and which means discharged.

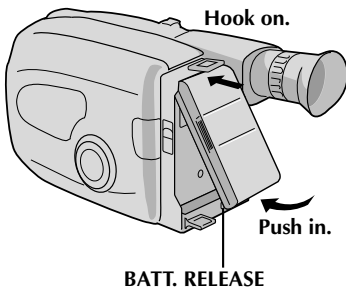

### ATTENTION:

Before detaching the power source, make sure that the camcorder's power is turned off. Failure to do so can result in a camcorder malfunction.

## Power

This camcorder's 3-way power supply system lets you choose the most appropriate source of power.

### NOTES:

- No function is available without power supply.
- Use only specified power supply.
- Do not use provided power supply units with other equipment.

## CHARGING THE BATTERY PACK

### SUPPLY POWER

- 1 Connect the charger's AC power cord to a wall outlet. The power indicator lights.

### ATTACH BATTERY PACK

- 2 Align the marks and slide the battery pack in the direction of the arrow until it locks in place. The CHG. indicator lights.

### DETACH BATTERY PACK

- 3 When charging is completed, the END indicator lights. Slide the battery pack opposite the direction of the arrow.

BATT. PACK	CHARGE	DISCHARGE
BN-V12U	approx. 1 hr. 10 min.	approx. 3 hrs. 30 min.
BN-V22U	approx. 2 hrs. 10 min.	approx. 7 hrs.
BN-V25U	approx. 2 hrs. 40 min.	approx. 10 hrs.

## USING THE BATTERY PACK

### ATTACH BATTERY PACK

- 1 Hook its top end to the camcorder and push the battery pack in until it locks in place.

### DETACH BATTERY PACK

- 2 Slide BATT. RELEASE and pull out the battery pack.

BATT. PACK	APPROXIMATE RECORDING TIME
BN-V12U	50 min.
BN-V22U	1 hr. 50 min.
BN-V25U	2 hrs. 25 min.

### \*\*REFRESH


The AC power adapter features a REFRESH function that allows you to fully discharge the battery pack before recharging.

#### To discharge the battery . . .

..... attach the battery pack to the adapter as shown in the illustration to the left. Then push REFRESH. The REFRESH indicator lights when discharging starts, and goes out when discharging is complete.

## NOTES:

- The recording time per charge is affected by such factors as the time spent in Record/Standby mode and the frequency of zooming. It is safer to have spare battery packs.
- Charging times noted on page 6 are for fully discharged battery pack, and discharging times are for fully charged battery pack.
- Charging and discharging times vary according to the ambient temperature and the status of the battery pack.
- Remember to set the charge marker after charging a battery pack or after detaching a discharged one from your camcorder.
- Perform the REFRESH function after no less than 5 chargings.
- High temperatures can damage the battery pack, so use only where good ventilation is available. Don't allow it to discharge in container, such as a bag.
- If you stop recharging or discharging part way through, make sure to remove the battery pack before unplugging the adapter's AC cord.
- Remove the battery pack from the adapter immediately after discharging.
- To avoid interference with reception, do not use the AC Power Adapter/Charger near a radio.
- Make sure you unplug the DC cord before charging or discharging the battery pack.
- A blinking CHG. indicator means that the battery pack has become hot. Wait until it cools down to continue.
- The CHG. indicator may not light properly with a brand new battery pack, or with one that's been stored for an extended period. In this case, remove and reattach the battery pack and recharge it. The CHG. indicator should light during recharging. If not, contact your nearest JVC dealer.

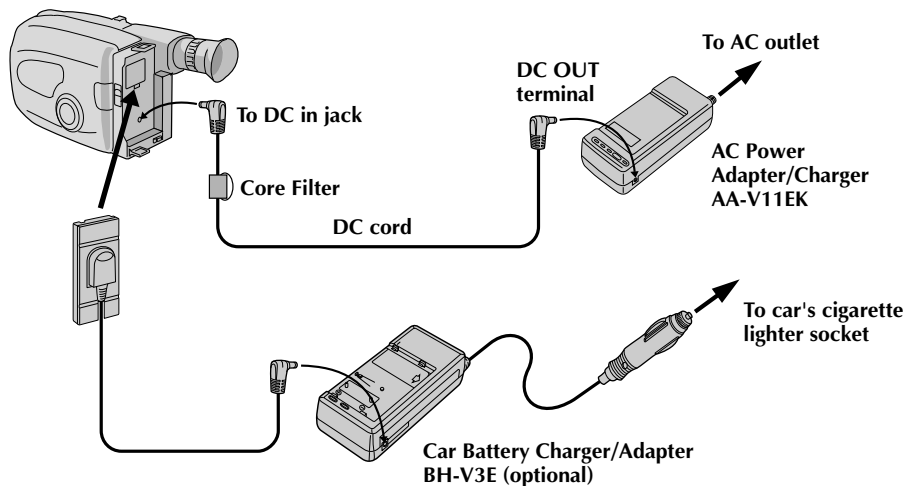

## USING A CAR BATTERY

Use the optional Car Battery Charger/Adapter (connect as shown in the above illustration).

## NOTES:



- When using the car battery, leave the engine idling.
- The optional Car Battery Charger (BH-V3E) can also be used to charge the battery pack.
- When using the optional Car Battery Charger, refer to the respective instruction booklet.

## USING AC POWER

Use the AC Power Adapter (connect as shown in the above illustration).

## NOTES:

- The supplied AC Power Adapter/Charger features automatic voltage selection in the AC range from 110 V to 240 V.
- When using the provided DC cord, make sure you connect the end of the cable with the core filter to the camcorder. The core filter improves performance of equipment.

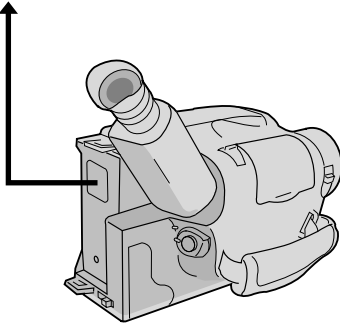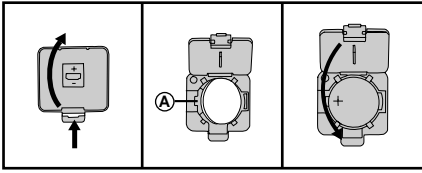

## Clock (Lithium) Battery Insertion/Removal

This battery is necessary for clock operation and to perform date/time settings.

### SWITCH OFF POWER

- 1 Switch off the unit's power and remove the power supply unit.

### OPEN COVER

- 2 Open the clock battery compartment cover while pressing the release tab.

### REMOVE BATTERY (when replacing)

- 3 Insert a pointed, non-metallic object between the battery and the compartment (A) and pull the battery out.

### INSERT BATTERY

- 4 Ensuring the plus (+) side is up, insert a CR2025 lithium battery and push it in.

### CLOSE COVER

- 5 Close the compartment cover until it clicks in place.

### NOTE:

See "SAFETY PRECAUTIONS" (pg. 2) for information on safe handling of lithium batteries.

## Viewfinder Adjustment

### POSITION VIEWFINDER


- 1 Adjust the viewfinder manually for best viewability (see illustration at left).

### SELECT MODE

- 2 Set the power switch to CAMERA.

### ADJUST DIOPTR

- 3 Turn the diopter adjustment control until the indications in the viewfinder are clearly focused.

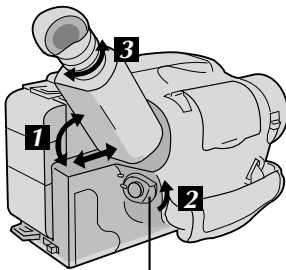

Set POWER to "CAMERA".



## Date/Time Setting

### 1 SELECT MODE

First set the power switch to "CAMERA". Turn the PROGRAM AE select dial to any position except AUTO LOCK.

### 2 ACCESS MENU SCREEN

Press MENU.

### 3 SELECT FUNCTION

Press **-** to move the highlight bar down to "Date/Time", then press **NEAR**. The Set Date And Time screen appears.

### 4 SET DATE/TIME

Press **FAR** or **NEAR** until the item you want to set begins blinking, then press **+** or **-** to until the correct setting appears.




- If you decide you want to return the date and time to the previous settings, press **FAR** or **NEAR** to move the highlight bar to "Cancel", then press **MENU**.
- If you're satisfied with the settings, go on to step 5.

### 5 START CLOCK OPERATION

Once you've set the date and time, press **FAR** or **NEAR** until "Set" begins to blink, then press **MENU**. The Menu screen reappears.


### 6 CLOSE MENU

Press **MENU**.

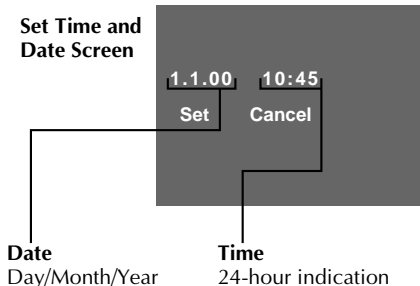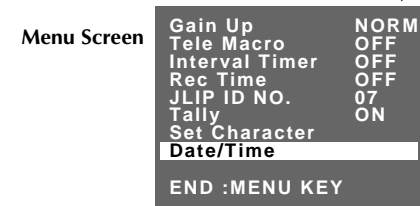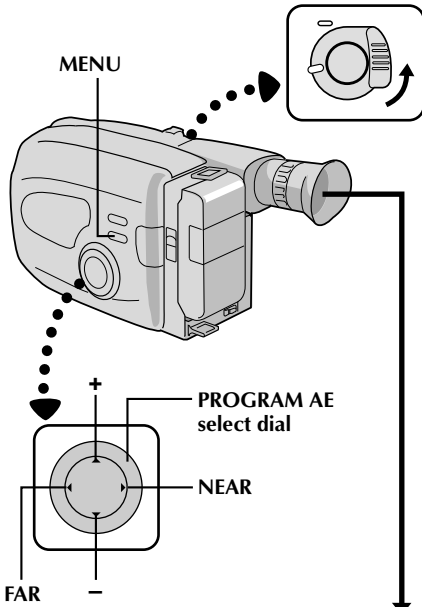

## NOTES:

- To display the date and time in the viewfinder and on a connected TV, see "Date/Time Character Insert" (pg. 26).
- If, in step 4, you input an invalid date (30. 2., 31. 6., etc.) and perform step 5, "Input Error" appears blinking at the bottom of the screen. Press **+**, **-**, **FAR** or **NEAR** to input the correct number.

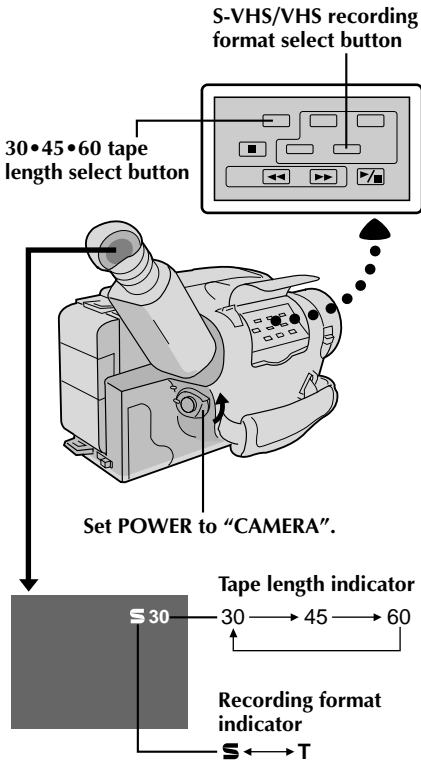

## Tape Length Setting

Set the tape length according to the length of the tape used.

### 1 SET TAPE LENGTH

Press 30•45•60 until the required indication appears in the viewfinder. 30 = 30 minutes of recording time, 45 = 45 minutes, and 60 = 60 minutes.

#### NOTE:

The tape remaining time (see pg. 14) displayed in the viewfinder is correct only if the correct tape length has been selected.

## Recording Format Setting

When using an S-VHS-C cassette, set to either of the recording formats.

### 1 SET RECORDING FORMAT

Press S-VHS/VHS button until the required indication appears in the viewfinder.


S : Super VHS

T : Regular VHS

#### NOTE:



Super VHS recordings cannot be made on normal VHS-C tapes.

## COMPATIBILITY BETWEEN S-VHS AND VHS

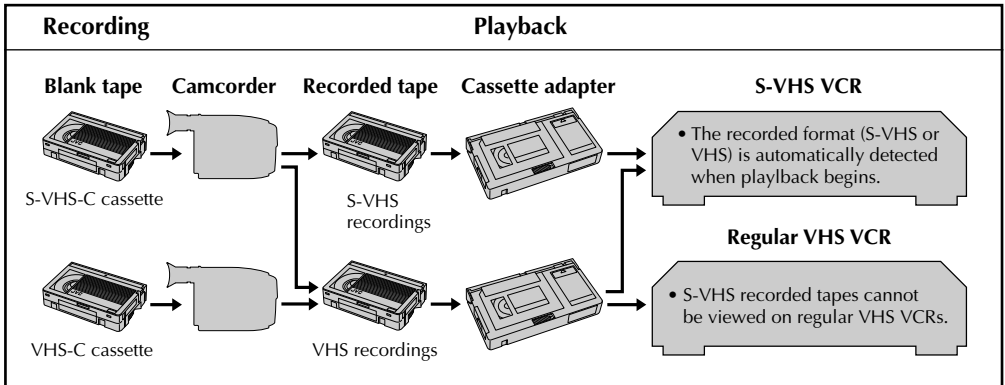

## Playback

The pictures recorded with the camcorder can be viewed in playback by directly connecting it to a TV; and can also be played back using a VCR.

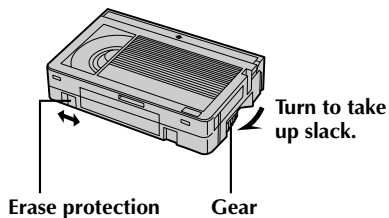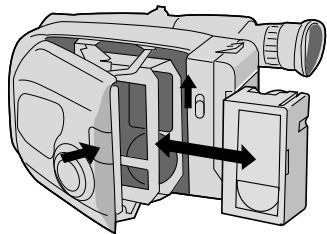

## Loading/Unloading A Cassette

### 1 OPEN CASSETTE HOLDER

Slide **EJECT** until the holder opens. Do not use force to open.

### 2 INSERT/REMOVE CASSETTE


Make sure the label is facing outward.

### 3 CLOSE CASSETTE HOLDER

Press **PUSH** and make sure the holder is closed and locked.

## NOTES:

- A cassette holder can't be opened unless a power supply is attached.
- Make sure that the tape is not slack when loading the cassette. If there is any slack, turn the gear on the cassette in the direction of the arrow to take up the slack.
- Make sure the Erase Protection tab is in the position that allows recording. If not, slide the tab. Some cassettes have removable tabs. If the tab has been removed, cover the hole with adhesive tape.
- The cassette holder can't be opened while the camcorder is in the record mode.

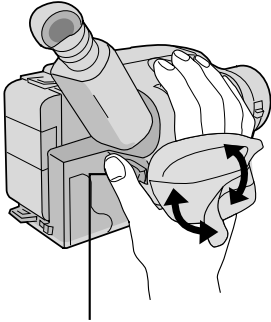

Recording Start/Stop button

## Grip Adjustment

### EXPAND LOOP

**1** Separate the Velcro strip.


### INSERT HAND

**2** Pass your right hand through the loop and grasp the grip.

### ADJUST STRAP LENGTH

**3** Adjust so your thumb and fingers can easily operate the Recording Start/Stop button and Power Zoom lever. Refasten the Velcro strip.

## Shoulder Strap Attachment

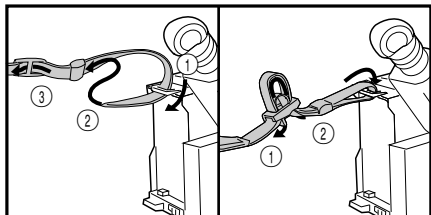

### ATTACH STRAP

- 1 Following the illustration at left, thread the strap through the top of the eyelet ①, then fold it back and thread it through the keeper ②, and then through the buckle ③. Repeat the procedure to attach the other end of the strap to the other eyelet, making sure the strap isn't twisted.


### ADJUST LENGTH

- 2 Adjust as shown in the illustration at left ①, then slide both keepers snug against the eyelets to prevent slipping ②.


## Tripod Mounting

### ALIGN AND TIGHTEN

- 1 Align the screw and camera direction stud on the tripod with the camera's mounting socket and stud hole. Then tighten the screw.

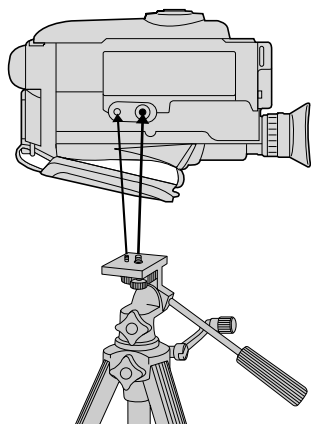

## Tape remaining time indicator

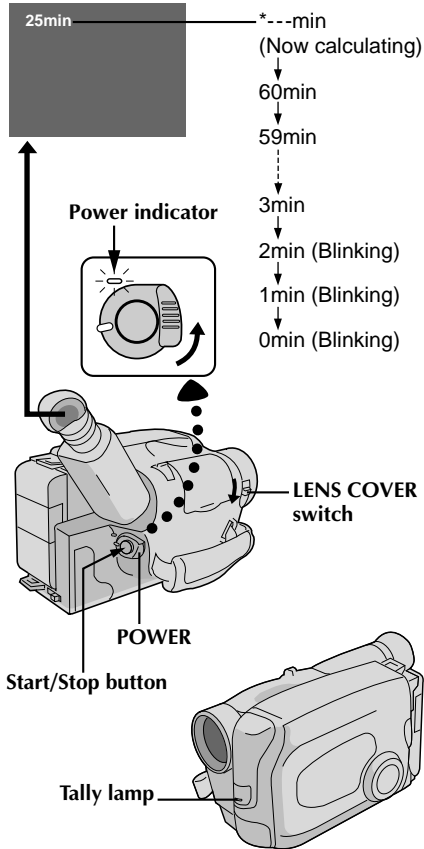**NOTE:**

You should already have performed the procedures listed below. If not, do so before continuing.

- Power (☞ pg. 6)
- Date/Time Setting (☞ pg. 9)
- Tape Length Setting (☞ pg. 10)
- Recording Format Setting (☞ pg. 10)
- Grip Adjustment (☞ pg. 12)

**LOAD A CASSETTE**

- 1 Slide **EJECT** to open the cassette holder, then insert the cassette with the label facing out. Press **PUSH** to ensure the holder is closed and locked.

**ENTER RECORD-STANDBY MODE**

- 2 Slide the **LENS COVER** open/close switch to open the lens cover, then set the power switch to "CAMERA".

- The power indicator lights and the camcorder enters the Record-Standby Mode.
- The scene you're aimed at appears on the viewfinder screen, with the word "PAUSE" superimposed upon it.

**START SHOOTING**

- 3 Press the **Start/Stop** button.

- The tally lamp lights while recording is in progress, and "REC" appears in the viewfinder.

**STOP RECORDING**





- 4 Press the **Start/Stop** button again to stop recording.

- The camcorder re-enters the Record-Standby mode.



**NOTES:**

- A cassette holder can't be opened unless a power supply is attached.
- There may be a delay after you slide **EJECT** until the holder opens. Do not use force.
- The tape's remaining time is displayed in the viewfinder as shown.
- The indicated remaining time is approximate.
- The time required to calculate the remaining tape length, and the accuracy of the calculation, may vary according to the type of tape used.
- The tape remaining time displayed in the viewfinder is correct only if the correct tape length has been selected (☞ pg. 10).
- "TAPE END" appears when the tape reaches its end, and the power goes off automatically if left in this condition for 5 minutes. "TAPE END" also appears when a cassette whose tape is already at its end is loaded.
- If the Record-Standby mode continues for 5 minutes without performing Zoom or any other operations, the camcorder's power shuts off automatically. Set the Power switch to "POWER OFF", and then back to "CAMERA" to turn the camcorder on again.
- If the Recording Start/Stop button is pressed after the Record-Standby mode has continued for over 5 minutes, recording may not start immediately.
- Sometimes even simply ejecting and reloading the tape may cause the tape's present position to change slightly. If you're recording on a cassette from the middle, use the **RETAKE** function (☞ pg. 15) to find the end of the last recording so you don't erase any of it.
- The **LENS COVER** warning blinks for about 10 seconds when the camcorder is turned on, when the cover is closed.

Power zoom Lever

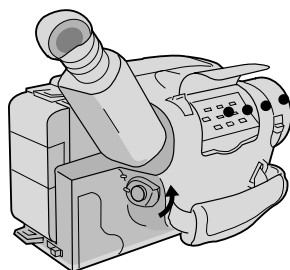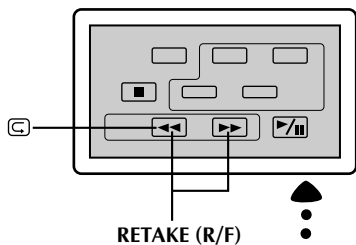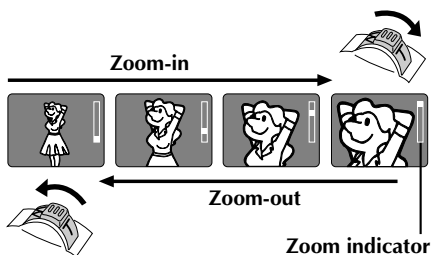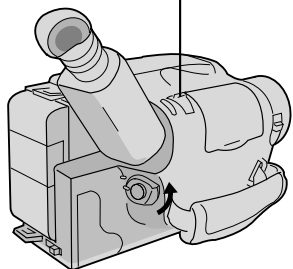

<p><b>FEATURE:</b></p> <p><b>PURPOSE:</b></p> <p><b>OPERATION:</b></p> <p><b>NOTES:</b></p>	<p><b>Zooming</b></p> <p>To produce the zoom in/out effect, or an instantaneous change in image magnification.</p> <p><b>36X Hyper zoom</b> Digital circuitry doubles the maximum 18x magnification offered by optical zoom.</p> <ol style="list-style-type: none"> <li>1) To zoom in, slide the Zoom Lever toward "T".</li> <li>2) To zoom out, slide toward "W".</li> </ol> <ul style="list-style-type: none"> <li>• During Hyper Zoom, the speed increases the further you slide the Zoom Lever.</li> <li>• Focusing may become unstable during Hyper Zoom. In this case, set the zoom while in Record-Standby, set manual focus or Focus Lock (pg. 20, 21), then zoom in or out in Record mode.</li> <li>• The Zoom Level Indicator (■) only moves during optical zoom. Once the Zoom Level indicator reaches the top of the zoom indicator bar, all magnification from that point is through digital processing.</li> <li>• During digital image processing, the quality of the image may suffer.</li> </ul>
<p><b>FEATURE:</b></p> <p><b>PURPOSE:</b></p> <p><b>OPERATION:</b></p> <p><b>NOTE:</b></p>	<p><b>Quick Review</b></p> <p>To check the end of the last recording.</p> <ol style="list-style-type: none"> <li>1) Press "Q" and release quickly during the Record-Standby mode.             <ul style="list-style-type: none"> <li>• Tape is rewound for about 2 seconds and played back automatically, then pauses in Record-Standby mode for the next shot.</li> </ul> </li> </ol> <p><i>Distortion may occur at start of playback. This is normal.</i></p>
<p><b>FEATURE:</b></p> <p><b>PURPOSE:</b></p> <p><b>OPERATION:</b></p> <p><b>NOTE:</b></p>	<p><b>Retake</b></p> <p>To re-record certain segments.</p> <ol style="list-style-type: none"> <li>1) Make sure the camcorder is in the Record-Standby mode.</li> <li>2) Press either <b>RETAKE</b> button to reach the start point for new recording. Pressing "F" fast-forwards the tape and pressing "R" reverses it.</li> <li>3) Press Recording Start/Stop to start recording.</li> </ol> <p><i>Noise may appear during Retake. This is normal.</i></p>

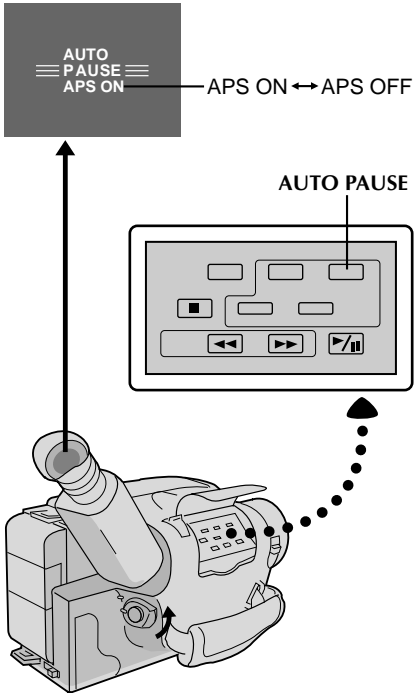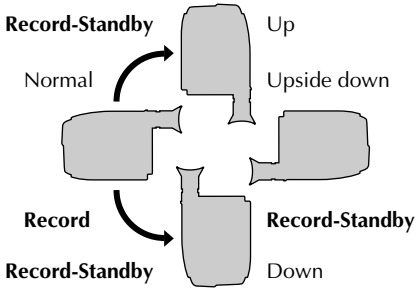

**FEATURE:**  
**PURPOSE:**

**Auto Pause System**

To automatically stop recording when the camcorder is pointed down, preventing accidental recordings of the ground, your feet, etc.

**OPERATION:**


1) Press **AUTO PAUSE** so that "APS ON" appears in the viewfinder for 2 seconds. When the camcorder is tilted down by a large degree from its horizontal position during recording, the Record-Standby mode is automatically engaged. During this, "AUTO" is displayed above "≡PAUSE≡".

- To switch off the Auto Pause System, press **AUTO PAUSE** again so that "APS OFF" appears in the viewfinder for 2 seconds.

**NOTES:**

- The Auto Pause System is also effective when the camcorder is pointed up, or is positioned upside down.
- Auto Pause also works when the camcorder is twisted by a large degree to the left or right.
- When you want to shoot in any of the aforementioned positions, be sure to switch off Auto Pause.

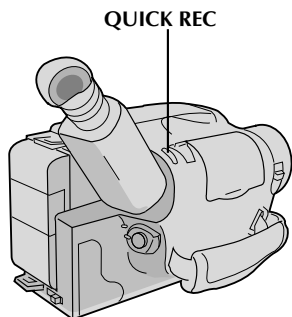

**FEATURE:****PURPOSE:****OPERATION:****NOTES:****Quick Rec**


To record a scene for 5 seconds, providing quick scene transitions like those seen in TV programmes.

1) During Record-Standby, press and release **QUICK REC**. Recording starts, and after 5-second recording is finished, the camcorder reenters the Record-Standby mode automatically.



- To continue shooting longer than 5 seconds, press and hold **QUICK REC**. Recording continues as long as **QUICK REC** is kept pressed.

- *The Fade/Wipe (☞ pg. 23) cannot be activated by pressing **QUICK REC**.*
- ***QUICK REC** cannot be used during Animation and Time-Lapse (☞ pg. 31).*

1 second later, the mode is activated.

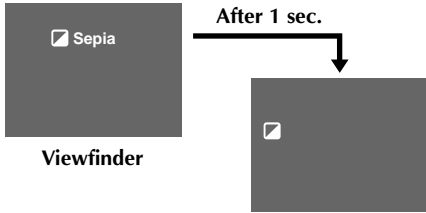

Viewfinder

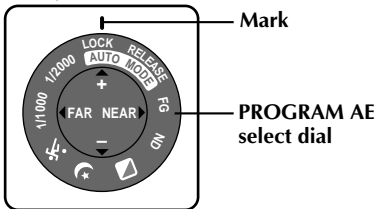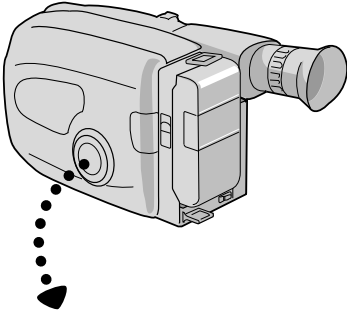

Mark

PROGRAM AE  
select dial

## Programme AE With Special Effects

All you have to do to access any of the variety of shooting effects is to turn the PROGRAM AE select dial.

### SELECT MODE

**1** Turn the PROGRAM AE select dial until the symbol of the function you want is aligned with the mark.

- The selected mode's name and its indication are displayed in the viewfinder for approx. 1 second. Then the name disappears, and only the indication remains. The mode is activated.
- When Auto Mode Lock or Auto Mode Release mode is selected, only the mode's name is displayed. Then the name disappears and the mode is activated.

### NOTES:

- Only one effect can be engaged at a time.
- The screen becomes slightly reddish when the Fade/Wipe (☞ pg. 23) is used in the Sepia mode.
- The screen becomes slightly dark in the High Speed Shutter mode. Use in well-lit situations.
- In the High Speed Shutter or Sports modes, picture colour may be adversely affected if subject is lit by alternating discharge-type light sources such as fluorescent or mercury-vapour lights.

DIAL SYMBOL	VIEWFINDER INDICATION	MODE
LOCK	Auto Lock	Auto Mode Lock

### Auto Mode Lock

Locks the camcorder in Full Auto mode, preventing incorrect operation due to accidental button pressing during shooting.

- In this mode the following controls are disabled; Fade/Wipe, Wide, Title, Display, M.W.B (Manual White Balance), Manual Focus, Focus Lock, Exposure Control and MENU.

RELEASE	Auto Release	Auto Mode Release
---------	--------------	-------------------

### Auto Mode Release

Re-enables the controls that were disabled by Auto Mode Lock.

FG	FG : Fog	Electronic Fog Filter
----	----------	-----------------------

### Electronic Fog Filter

Makes the picture look misty white, as when an external fog filter is attached to the lens. Softens the image and gives it a “fancy” look.

 
ND	ND : ND Effect	ND Effect
----	----------------	-----------


### ND Effect

A black mist darkens the picture, as when an ND filter is used. Helps to counter the effects of glare on the subject.

	 Sepia	Sepia
--	---	-------




### Sepia

The scene being shot is recorded in sepia-tinted (reddish-brown) monochrome, giving the effect of an older movie. Use together with Wide ( pg. 24) for the authentic look of a classic Hollywood movie.

DIAL SYMBOL	VIEWFINDER INDICATION	MODE
	 Twilight	Twilight

### Twilight


Dusk, twilight scenery, fireworks, etc., look more natural and dramatic. The following happens when Twilight mode is selected:


- Auto gain control is turned off.
- White Balance is set to “” (outdoor mode), but can also be manually changed to another mode ( pg. 27).
- Auto Focus becomes available only in the range of 10 m to infinity. To focus when the subject-to-camera distance is less than 10 m, use manual focusing ( pg. 21).

	 Sports	Sports
---	--	--------

### Sports

High shutter speed clearly captures fast-moving action.

1/1000	 1 S 1/1000	1/1000 sec. High Speed Shutter
--------	--	-----------------------------------



1/2000	 2 S 1/2000	1/2000 sec. High Speed Shutter
--------	--	-----------------------------------

### High-Speed Shutter (1/1000s., 1/2000s.)

Captures faster action than Sports mode.



Focus  
detection zone

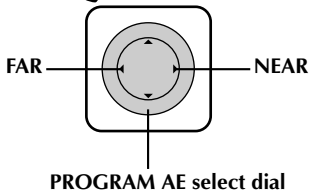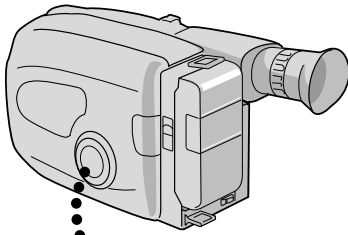

PROGRAM AE select dial

## Focusing

### Auto Focus

The camcorder's Full Range AF system offers continuous shooting ability from close-up to infinity. However, correct focus may not be obtainable in the situations listed below (in these cases use manual focusing):

- When two subjects overlap in the same scene.
- When illumination is low.\*
- When the subject has no contrast (difference in brightness and darkness), such as a flat, one-colour wall, or a clear, blue sky.\*
- When a dark object is barely visible in the viewfinder.\*
- When the scene contains minute patterns or identical patterns that are regularly repeated.
- When the scene is affected by sunbeams or light reflecting off the surface of a body of water.
- When shooting a scene with a high-contrast background.

\* The low-contrast warning “▲▲” appears in the viewfinder.

### Focus Lock

This feature locks the focus in place, which is especially helpful in the following situations:

- When things pass between your subject and the camcorder. Engage the focus lock function to lock your subject in before recording.
- When you want your subject to be focused, and to appear in a corner of the screen. First, center on the subject and focus using auto focus mode. Then engage the focus lock function and move the camcorder until the subject is where you want it.

## SELECT MODE

- 1 Turn the PROGRAM AE select dial to any position except AUTO LOCK.

## LOCK FOCUS



- 2 Press **FAR** or **NEAR**. The focus lock indication “▲▲” appears in the viewfinder.

## RELEASE FOCUS LOCK

- 3 Press **FAR** and **NEAR** simultaneously. The focus lock indication disappears.

## NOTES:

- If the lens is smeared or blurred, accurate focusing is not possible. Keep the lens clean, wiping with a piece of soft cloth if it gets dirty. When condensation occurs, wipe with a soft cloth or wait for it to dry naturally.
- When shooting a subject close to the lens, zoom-out first (☞ pg. 15). If zoomed-in in the auto focus mode, the camcorder could automatically zoom out depending on the distance between the camcorder and the subject. \*When Tele Macro (☞ pg. 29) is activated, the camcorder will not zoom out automatically.

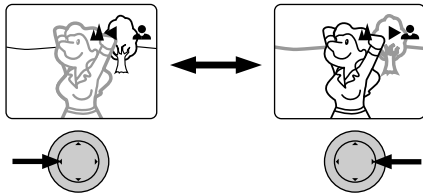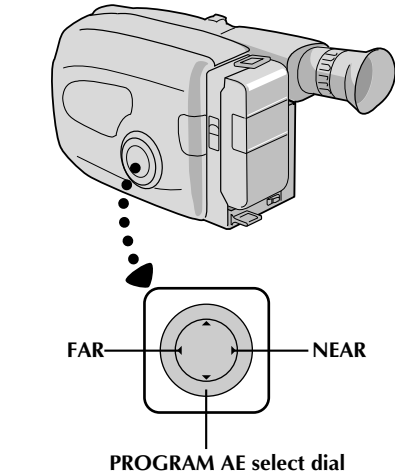

## Manual Focus

### NOTE:

You should already have made the necessary viewfinder adjustments (☞ pg. 8). If you haven't, do so before continuing.

### SELECT MODE

- 1 Turn the PROGRAM AE select dial to any position except AUTO LOCK.

### ADJUST FOCUS

#### To farther subject . . .

- 2 Press and hold **FAR**. The Manual Focus indications "▲◀ ▶" appear and "◀" blinks. Go to step 3.

#### To nearer subject . . .

- Press and hold **NEAR**. The Manual Focus indications "▲▶▶" appear and "▶" blinks. Go to step 3.

### LOCK FOCUS


- 3 Release **FAR** or **NEAR**. The focus indication is replaced by the focus lock indication "▲▶▶" and the adjusted focus is locked in.

### RELEASE MANUAL FOCUS MODE

- 4 Press **FAR** and **NEAR** simultaneously. The Manual Focus mode is immediately released and the focus lock indication disappears.

### NOTES:

- Be sure to focus the lens in the maximum telephoto position when you use the Manual Focus mode. If you focus in on a certain subject in the wide-angle position, sharply focused images cannot be obtained when zoomed up because the depth-of-field is reduced at longer focal lengths.
- When the focus level cannot be adjusted any farther or closer, "▲" or "▶" will blink.

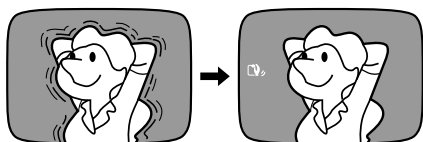

## Picture Stabilizer

This feature compensates for unstable images caused by camera-shake, particularly noticeable at high magnification.


### 1 ACTIVATE PICTURE STABILIZER

Press **P.STABILIZER**. "P" appears in the viewfinder.

- To switch off the Picture Stabilizer, press **P.STABILIZER**. The indicator disappears.

### NOTES:

- *Accurate stabilization may not be possible if hand shake is excessive, or under the following conditions:*
  - When shooting subjects with vertical or horizontal stripes
  - When shooting dark or dim subjects
  - When shooting subjects with excessive backlighting
  - When shooting scenes with movement in various directions
  - When shooting scenes with low-contrast backgrounds
- Switch off Picture Stabilizer when recording with the camcorder on a tripod.

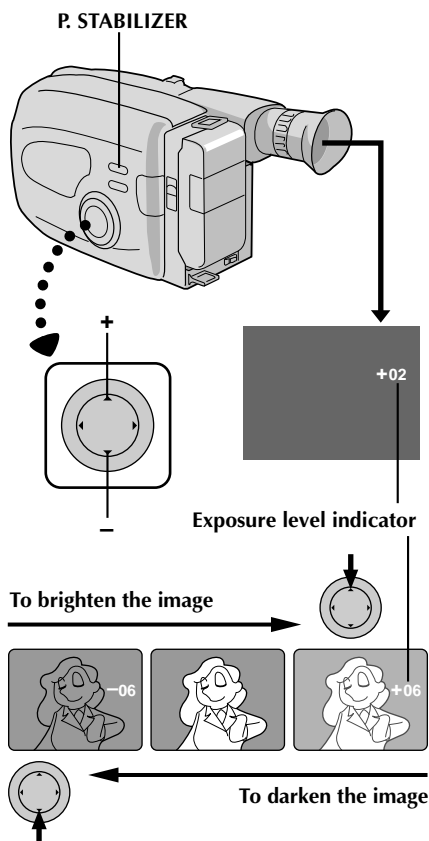

## Exposure Control

This feature automatically adjusts the iris for the best available picture quality, but you can override and make the adjustment manually.

### 1 SELECT MODE

Turn the PROGRAM AE select dial to any position except AUTO LOCK.

### 2 BRIGHTEN IMAGE

Press + (maximum +06). The Exposure level indicator appears in the viewfinder.

OR . . .

### DARKEN IMAGE


Press - (maximum -06). The Exposure level indicator appears in the viewfinder.

**When you want to return to the factory setting . . .**


### 3 RESTORE INITIAL SETTING

Press + and - simultaneously. The standard setting is immediately restored and the Exposure level indicator disappears.


[Ex. : Black Fader]

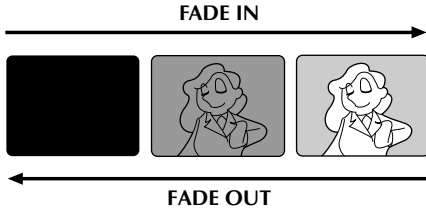

Function indication

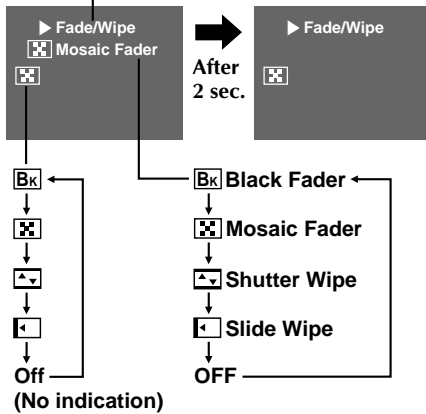

SELECT button

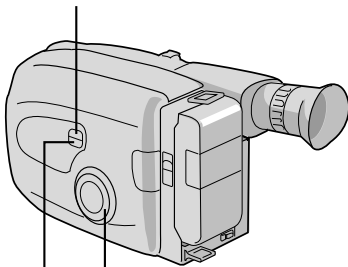

PROGRAM AE select dial

SET button

## NOTES:

- Pressing and holding the Recording Start/Stop button allows you to record a black blank screen, or a mosaic pattern if Mosaic Fader is selected.
- The screen becomes slightly reddish when the Fade/Wipe is used with Sepia (☞ pg. 19).

## Fade/Wipe

These effects let you make pro-style scene transitions. Fade- or wipe-in works at recording start, and fade- or wipe-out works at recording end or when you enter Record-Standby mode.

### 1 SELECT MODE

Turn the PROGRAM AE select dial to any position except AUTO LOCK.

### 2 SELECT FUNCTION

Press **SELECT** repeatedly until "▶ Fade/Wipe" appears.

### 3 ENGAGE FADE- OR WIPE-STANDBY MODE

Press **SET** to cycle through the modes as shown at left. Once the desired mode appears, it is selected and reserved.

- The selected mode's name and its indication are displayed in the viewfinder for approx. 2 seconds. Then the name disappears, and only the indication remains.

### 4 START RECORDING

Press Recording Start/Stop to start recording and activate fade- or wipe-in.

OR . . .

### END RECORDING

Press Recording Start/Stop to end recording and engage fade- or wipe-out.

### 5 TO CANCEL FADE- OR WIPE-STANDBY MODE

While "▶ Fade/Wipe" is displayed, press **SET** twice.

- "OFF" is displayed for approx. 2 seconds and the reserved fade or wipe is cancelled.

#### [Bk] Black Fader

Fades in/out to a black screen.

#### [Mosaic] Mosaic Fader


Gradually turns/returns the picture into/from a mosaic pattern.

#### [Shutter] Shutter Wipe

A black screen moves in from the top and bottom, closing over the image like a shutter, or a new image pushes open the black screen vertically from the centre.

#### [Slide] Slide Wipe

A black screen moves in from the left to gradually cover the image, or a new image moves in from right to left.

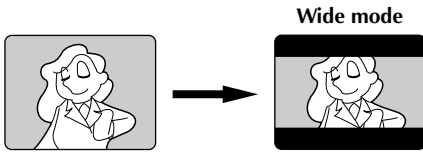

## Wide

This feature allows you to record black bars at the top and bottom of the screen to produce a cinema-like "wide-screen" effect.

### 1 SELECT MODE

Turn the PROGRAM AE select dial to any position except AUTO LOCK.

### 2 SELECT FUNCTION


Press **SELECT** repeatedly until "►Wide" appears.

### 3 ENGAGE WIDE MODE

Press **SET**.

### 4 RESTORE NORMAL SCREEN

Press **SET** again while "►Wide" appears.

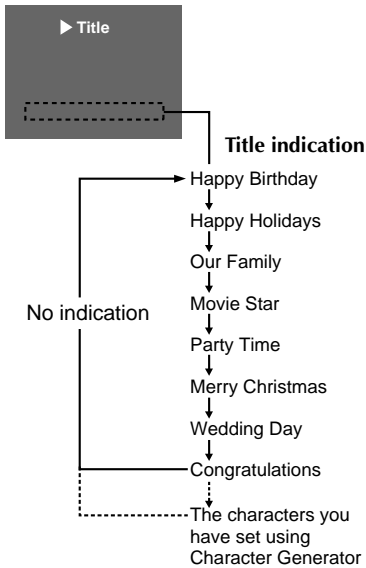

## Instant Titles

The camcorder has eight preset titles in memory. You can superimpose one of them above a previously stored title as shown in the illustration to the left.

### DISPLAY

### 1 SELECT MODE

Turn the PROGRAM AE select dial to any position except AUTO LOCK.

### 2 SELECT FUNCTION


Press **SELECT** repeatedly until "►Title" appears.

### 3 SELECT PRESET TITLE


Engage the Record-Standby mode, then press **SET** to cycle through the preset titles until the desired title is displayed.

## NOTES:

- To delete the Instant Titles during recording, press **SET**.
- To recall a title, press **SET** again.

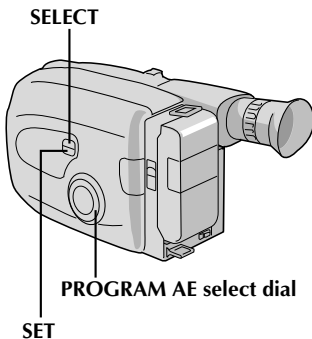



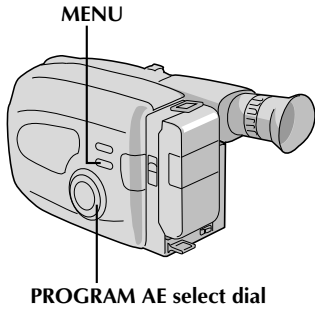

PROGRAM AE select dial

Gain Up	NORM
Tele Macro	OFF
Interval Timer	OFF
Rec Time	OFF
JLIP ID NO.	07
Tally	ON
<b>Set Character</b>	
Date/Time	
END : MENU KEY	



<b>SET : MENU KEY</b>									
<input type="checkbox"/>	A	B	C	D	E	F	G	H	I
J	K	L	M	N	O	P	Q	R	S
T	U	V	W	X	Y	Z	A	O	U
À	É	Ò	ì	ü	Ñ	Æ	Ø	Å	&
:	.	,	'	-	/	!	?	¿	♥
0	1	2	3	4	5	6	7	8	9
<input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>									
End					Clear				



<b>SET : MENU KEY</b>									
<input type="checkbox"/>	A	B	C	D	E	F	G	H	I
J	K	L	M	N	O	P	Q	R	S
T	U	V	W	X	Y	Z	A	O	U
À	É	Ò	ì	ü	Ñ	Æ	Ø	Å	&
:	.	,	'	-	/	!	?	¿	♥
0	1	2	3	4	5	6	7	8	9
<input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>   <input type="checkbox"/>									
End					Clear				

## Character Generator

You can enter an original title of up to 18 characters.

1

### ACCESS MENU SCREEN

Turn the PROGRAM AE select dial to any position except AUTO LOCK, then press **MENU**.

2

### ACCESS CHARACTER SET MENU

Press **+** or **-** to move the highlight bar to "Set Character", then press **NEAR**. The Character Set menu appears.

3

### INPUT CHARACTERS

Press **+**, **-**, **FAR** or **NEAR** to make the desired character blink, then press **MENU**. The selected characters appear at the bottom of the screen. Repeat as many times as desired (max. 18).

- To select the location of the next character, press **+**, **-**, **FAR** or **NEAR** to make the row of squares blink at the bottom of the screen, then press **FAR** or **NEAR** to move the blinking cursor underneath the desired location. Press **+** when you're done, and the blinking cursor returns to the character grid.


4

### END CHARACTER SETTING

Press **+**, **-**, **FAR** or **NEAR** to make "End" blink, then press **MENU** twice to return to the normal screen.

## NOTES:

- To erase a character you entered mistakenly, make "Clear" blink by pressing **+**, **-**, **FAR** or **NEAR**, then press **MENU**. All characters are deleted at once. Or, to erase selected characters only, first move the blinking cursor to the character at the bottom row which you want to replace, then press **+**, **FAR** or **NEAR** to highlight "" in the top left corner, and then press **MENU**.
- To display the characters you have set — "Instant Titles" (pg. 24) or "Date/Time/Character Insert" (pg. 26).
- Characters may be set only in the Record-Standby mode.

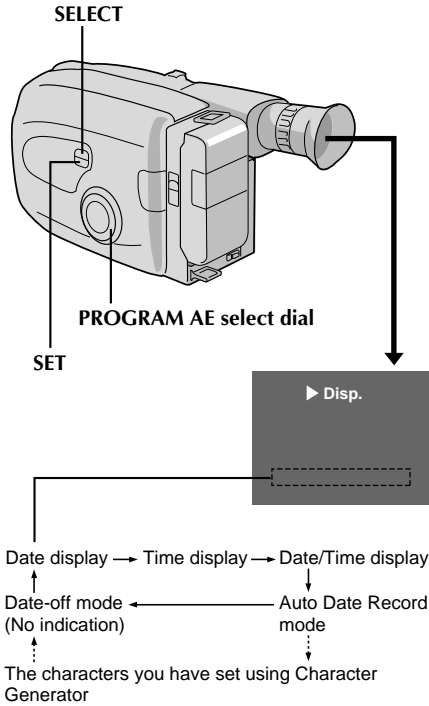

## Date/Time Character Insert

This feature allows you to display date, time and characters in your viewfinder and on a connected colour monitor, record them manually or automatically, and even make your own titles.

### NOTE:

You should already have performed the Date/Time Setting procedure (pg. 9). If you haven't, do so before continuing.

### DISPLAY

#### SELECT MODE

**1** Turn the PROGRAM AE select dial to any position except AUTO LOCK.

#### SELECT DISPLAY

**2** Press **SELECT** repeatedly until "▶Disp." appears.

#### CHOOSE DISPLAY MODE

**3** Press **SET** while in Record-Standby to cycle through the modes as shown in the illustration at left.

### NOTES:

- The selected display can be recorded.
- If you don't want to record the display, select Date-off mode before shooting.
- If you want to delete the display during shooting, press **SELECT** repeatedly until "▶Disp." appears then press **SET**.
- To recall the display, press **SET** again.

## AUTO DATE RECORD

Your camcorder automatically records the date for about 5 seconds after recording is initiated in the following situations:



- After changing the date.
- After loading a cassette.
- After Auto Date Record mode is selected by pressing **SET**.

In this mode, the date is replaced after 5 seconds with "Auto Date".

### NOTES:

- Setting **PROGRAM AE** to **LOCK** always engages this mode, and disables all other modes.
- In the Auto Date Record mode, if the date changes while you're shooting, the date indication is recorded for about 5 seconds from that point. It is not recorded during any other recordings made on that day.

<b>Date display</b>	<b>Auto Date Record mode</b>
25.12.97	Auto Date
<b>Time display</b>	Auto date record mode
10:45:56	25.12.97
<b>Date/Time display</b>	Auto date record executed
25.12.97 10:45:56	<b>Characters</b>
	I LIKE YOU ♥
	Example of stored characters

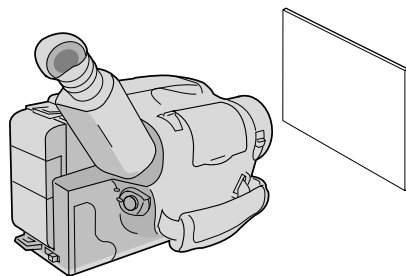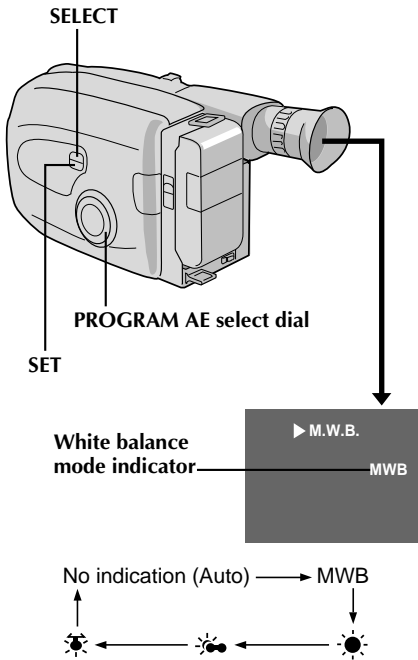

## Manual White Balance Adjustment (M.W.B.)

This camcorder's Automatic Colour Temperature system senses the colour temperature of the ambient lighting for automatic white balance adjustment. However, precise colour adjustment is not possible under the following conditions:

- When an object is in various shades of the same colour.
- When a predominantly red or brown object is being shot outdoors.

In these cases, use the camcorder's built-in preset filters for white balance adjustment.

### SELECT MODE

- 1 Turn the PROGRAM AE select dial to any position except AUTO LOCK.

### SELECT FUNCTION

- 2 Press **SELECT** repeatedly until "►M.W.B." appears.

### SELECT WHITE BALANCE

- 3 Press **SET** (Manual White Balance) until the required indication appears in the viewfinder.

"MWB" ..... With a memorized personal White Balance setting (see below)

"☀" ..... Outdoors on sunny day

"☁" ..... Outdoors on cloudy day

"⚡" ..... Light source is halogen or tungsten lamp

MWB sets the colour temperature for the subject's light source so you can shoot with natural colours that are unaffected by surroundings, even when there are multiple subjects with different colour temperatures.

### MWB

#### SELECT MODE

- 1 Turn the PROGRAM AE select dial to any position except AUTO LOCK.

#### ADJUST FOCUS

- 2 Point the camcorder at a white, flat object such as a sheet of white paper, and adjust focus manually (☞ pg. 21).


#### ADJUST WHITE BALANCE

- 3 Press **SET** until "MWB" appears, then press and hold **SET** for more than 3 seconds.

- "MWB" blinks in the viewfinder during adjustment, then stops blinking but stays lit when adjustment is complete.


### NOTES:

- To switch to automatic white balance adjustment, press **SET** until the indication disappears, or turn the PROGRAM AE select dial to "AUTO LOCK".
- Re-adjust the White Balance when the lighting has changed, when the camcorder has been turned on and off again, or when the PROGRAM AE select dial's position has been changed.
- It is helpful to connect your camcorder to a colour monitor when adjusting the white balance ("Basic Connections" ☞ pg. 32).
- When adjusted by putting coloured paper in front of the subject in step 2 ("ADJUST FOCUS"), this unit makes its colour temperature standard for automatic white balance. So you can enjoy shooting with different colours. For example, when adjusting with red, blue or yellow colours, the image becomes the colour which approximates to green, orange or purple respectively.
- Manual White Balance Adjustment is not possible when the PROGRAM AE select dial is set to SEPIA (☞ pg. 19).

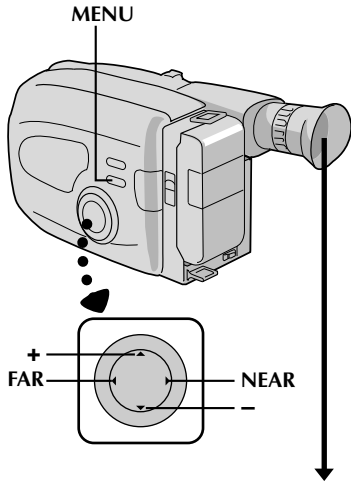

Gain Up	NORM
Tele Macro	OFF
Interval Timer	OFF
Rec Time	OFF
JLIP ID NO.	07
Tally	ON
Set Character	
Date/Time	
END :MENU KEY	

Gain Up	▶ OFF
Tele Macro	▶ ON
Interval Timer	1 min
Rec Time	1/2 s
JLIP ID NO.	07
Tally	ON
Set Character	
Date/Time	
END :MENU KEY	

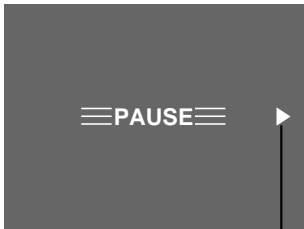

If "Gain Up" or "Tele Macro" in the Menu has been changed from the factory settings, this mark appears in the viewfinder.

## Using Menu For Detailed Adjustment

This camcorder is equipped with Program Manager, an easy-to-use, on-screen menu system that simplifies many of the more detailed camcorder settings.

- 1 SELECT MODE**  
Turn the PROGRAM AE select dial to any position except AUTO LOCK.
- 2 ACCESS MENU SCREEN**  
Press MENU.
- 3 SELECT FUNCTION**  
Press + or - to place the highlight bar on the desired function.
- 4 MAKE SETTING**  
The setting procedure depends on the function you select.  
*If you select Gain Up, Tele Macro, Interval Timer, Rec Time, JLIP ID NO or Tally. . .*  
.... press FAR or NEAR to cycle through the choices until the desired setting appears.  
*If you select Set Character or Date/Time, . . .*  
.... press NEAR to access the selection menu for each function (Set Character – pg. 25; Date/Time – pg. 9).
- 5 CLOSE MENU**  
Press MENU. The normal screen reappears.

### NOTE:

The menu is available only in the Record-Standby mode.



## MENU

<b>Gain Up</b>	<b>NORM</b>	To record a subject in a dimly lit environment. When it is more convenient to shoot with a less coarse picture although the subject becomes slightly dark.
	▶ <b>OFF</b>	Allows you to shoot dark scenes with no picture brightness adjustment.
<b>Tele Macro</b>	<b>OFF</b>	Usually set to this position.
	▶ <b>ON</b>	Usually the distance to a subject where the lens is in focus depends on the zoom magnification. Unless there is a distance more than 1m to the subject, the lens is out of focus at the maximum telephoto setting. When set to "ON", you can shoot a subject as large as possible at a distance of approx. 60 cm. <ul style="list-style-type: none"> <li>• Depending on the zoom position, the lens may go out of focus.</li> </ul>
<b>Interval Timer</b>	<b>OFF</b>	This feature allows you to set the parameters for Self-Timer (☞ pg. 30) and Time-Lapse recording (☞ pg. 31).
	<b>15s</b>	
	<b>30s</b>	
	<b>1min</b>	
	<b>5min</b>	
<b>Rec Time</b>	<b>OFF</b>	This feature allows you to set the parameters for Animation and Time-Lapse recording (☞ pg. 31).
	<b>1/4s</b>	
	<b>1/2s</b>	
	<b>1s</b>	
	<b>5s</b>	
<b>JLIP ID NO.</b>	This number is necessary when connecting the camcorder to a device such as a computer using the J terminal (JLIP) (☞ pg. 51). The numbers range from 01 to 99. Factory setting is 07.	
<b>Tally</b>	<b>ON</b>	The tally lamp comes on to signal the start of recording.
	<b>OFF</b>	The tally lamp remains off at all times.
<b>Set Character</b>	Allows you to input characters (☞ pg. 25).	
<b>Date/Time</b>	Allows you to set the current date and time (☞ pg. 9).	


 = Factory setting and when the PROGRAM AE Select Dial is set to AUTO LOCK

**NOTE:**

During shooting in low light, Auto Focus accuracy may decrease even when Gain Up is used. In this case, use Manual Focus (☞ pg. 21).

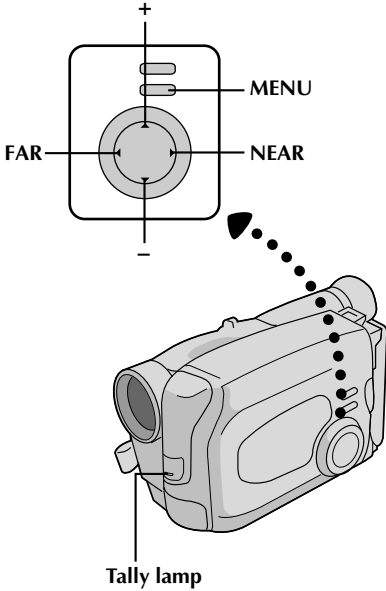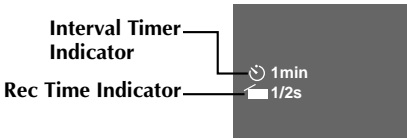

Gain Up	NORM
Tele Macro	OFF
Interval Timer	OFF
Rec Time	OFF
JLIP ID NO.	07
Tally	ON
Set Character	
Date/Time	
END :MENU KEY	

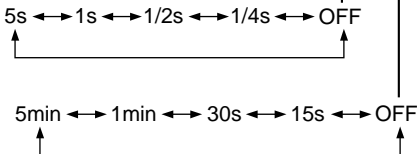

### Self-Timer

You can set the delay between pressing **Recording Start/Stop** and the actual start of recording. If you secure the camcorder, you (or whomever is operating the camcorder) can enter the scene before recording starts.

#### NOTE:

Make sure the camcorder is in the Record-Standby mode before performing the following steps.

### ACCESS MENU SCREEN

**1** Turn the PROGRAM AE select dial to any position except AUTO LOCK, then press **MENU**.

### SET INTERVAL TIME

**2** Press - or + to move the highlight bar down to "Interval Timer", then press **FAR** or **NEAR** to cycle through the choices. Stop when the desired time appears. Choose from "15s", "30s", "1min", "5min", or select to turn the function "OFF".

### CLOSE MENU

**3** Press **MENU**.

### START DELAYED RECORDING

**4** Press **Recording Start/Stop**. The tally lamp begins blinking, and the blinking frequency increases about 5 seconds before recording is to start. Once recording begins, the lamp stops blinking but stays lit.

#### To Release Self-Timer . . .

..... while the tally lamp is blinking, press **Recording Start/Stop** to stop the blinking, then set "Interval Timer" to "OFF".

## Animation

Give stationary scenes or objects an illusion of movement. This function allows you to shoot a series of pictures, each slightly different, of the same object for a brief period of time.

### NOTE:

Make sure the camcorder is in the Record-Standby mode before performing the following steps.

- 1** **ACCESS MENU SCREEN**  
Turn the PROGRAM AE select dial to any position except AUTO LOCK, then press **MENU**.
- 2** **SET RECORDING TIME**  
Press – or + to move the highlight bar down to “**Rec Time**”, then press **FAR** or **NEAR** to cycle through the choices. Stop when the desired time appears. Choose from “1/4s”, “1/2s”, “1s”, “5s”, or select to turn the function “OFF”. Then press **MENU** to close Menu screen.
- 3** **START RECORDING**  
Press the Recording Start/Stop button after focusing on the subject. The recording stops automatically after the selected period of time.
- 4** **ASSEMBLE SERIES OF PICTURES**  
Repeat step 3 for the desired number of pictures.
- 5** **RELEASE ANIMATION MODE**  
Set “**Rec Time**” in the Menu screen to “OFF”.

### NOTES:

- For best results, make sure the camcorder is secured when shooting in Animation or Time-Lapse mode.
- Fade/Wipe-in/out cannot be performed during Animation or Time-Lapse shooting.
- Before performing other operations following Animation or Time-Lapse recording, make sure the Animation or Time-Lapse mode is deactivated.

## Time-Lapse

You can record sequentially at preset time spans. Leaving the camcorder aimed at a specific subject, you can record subtle changes over an extended period of time.


### NOTE:

Make sure the camcorder is in the Record-Standby mode before performing the following steps.


- 1** **ACCESS MENU SCREEN**  
Turn the PROGRAM AE select dial to any position except AUTO LOCK, then press **MENU**.
- 2** **SET INTERVAL BETWEEN RECORDINGS**  
Press – or + to move the highlight bar down to “**Interval Timer**”, then press **FAR** or **NEAR** to cycle through the choices. Stop when the desired time appears. Choose from “15s”, “30s”, “1min”, “5min”, or select to turn the function “OFF”.
- 3** **SET RECORDING TIME**  
Press – or + to move the highlight bar down to “**Rec Time**”, then press **FAR** or **NEAR** to cycle through the choices. Stop when the desired time appears. Choose from “1/4s”, “1/2s”, “1s”, “5s”, or select to turn the function “OFF”. Then press **MENU** to close Menu screen.
- 4** **START TIME-LAPSE RECORDING**  
Press the Recording Start/Stop button. Recording and intervals alternate automatically.
- 5** **RELEASE TIME-LAPSE MODE**  
To release when the tally lamp is not blinking, set “**Rec Time**” and “**Interval Timer**” in the Menu screen to “OFF”. To release when the tally lamp is blinking, press the Recording Start/Stop button to stop the blinking, then set “**Interval Timer**” and “**Rec Time**” in the Menu screen to “OFF”.

These are some basic types of connections. When making the connections, refer also to your VCR and TV instruction manuals.


### A. Connection To a TV or VCR equipped with a SCART connector compatible only with regular video signal

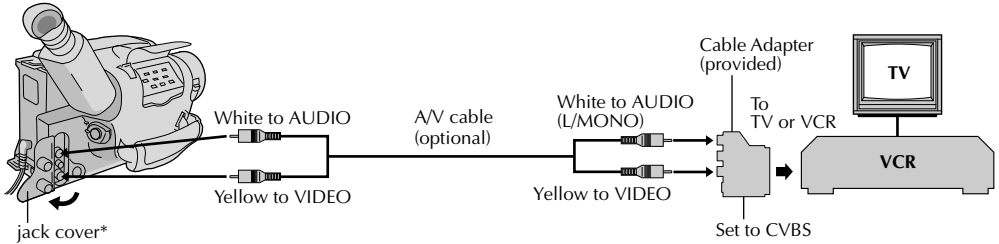

### B. Connection To a TV or VCR equipped with a SCART connector compatible with Y/C signal

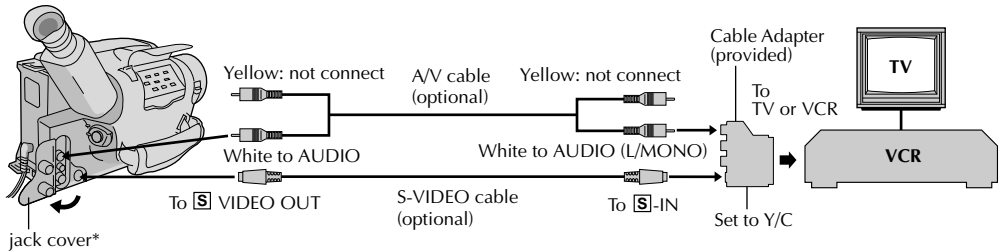

### C. Connection To a TV or VCR equipped with an S-VIDEO IN and/or A/V input (RCA type) connectors

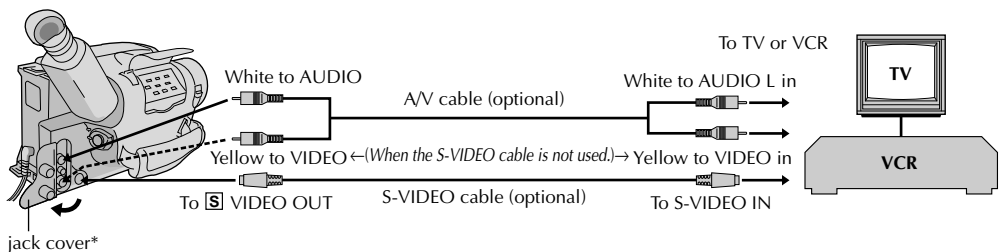

\*jack cover: When connecting the cables, open the jack cover.



## A: Connection to a TV or VCR equipped with a SCART connector compatible only with regular video signals

### NOTE:

Use the A/V cable and cable adapter.

#### CONNECT CAMCORDER TO TV/VCR

- 1 As shown in the illustration at left, connect the A/V cable to the AUDIO and VIDEO connectors on the camcorder and to those on the cable adapter, and then connect the cable adapter to the SCART connector on the VCR or TV.

#### SET "Y/C" / "CVBS" SWITCH

- 2 Set the "Y/C" / "CVBS" video out select switch on the cable adapter to "CVBS".

#### SUPPLY POWER

- 3 Turn on the camcorder, VCR and TV.

#### SELECT MODE

- 4 Set the VCR to its AUX input mode, and set the TV to its VIDEO mode.

## B: Connection to a TV or VCR equipped with a SCART connector compatible with Y/C signals

### NOTE:

Use the S-VIDEO cable, A/V cable and cable adapter.

#### CONNECT CAMCORDER TO TV/VCR

- 1 As shown in the illustration at left, connect the S-VIDEO cable and the A/V cable to the S-VIDEO and AUDIO connectors on the camcorder and to those on the cable adapter, and then connect the cable adapter to the SCART connector on the VCR or TV.

#### SET "Y/C" / "CVBS" SWITCH

- 2 Set the "Y/C" / "CVBS" video out select switch on the cable adapter to "Y/C".

#### SUPPLY POWER

- 3 Turn on the camcorder, VCR and TV.

#### SELECT MODE

- 4 Set the VCR to its AUX input mode, and set the TV to its VIDEO mode.

## C: Connection to a TV or VCR equipped with an S-VIDEO IN and/or A/V input (RCA type) connectors

### NOTE:

Use the A/V cable and S-VIDEO cable.

#### CONNECT CAMCORDER TO TV/VCR

- 1 As shown in the illustration at left, connect the S-VIDEO cable and/or the A/V cable to the S-VIDEO (or the VIDEO) and AUDIO connectors on the camcorder and to those on the VCR or TV.

#### SUPPLY POWER

- 2 Turn on the camcorder, VCR and TV.

#### SELECT MODE

- 3 Set the VCR to its AUX input mode, and set the TV to its VIDEO mode.

## D: Connection to a TV with NO A/V Input Connectors (Playback ONLY)

### NOTE:


Use the optional RF-V5E RF unit.

Connect it to the camcorder's VIDEO, AUDIO and RF DC OUT connectors.

\* Refer to the RF-V5E instruction manual for the connection procedure.

### NOTES:

- It is recommended to use the AC Power Adapter/Charger as the power supply instead of the battery pack.
- To monitor the picture and sound from the camcorder without inserting a tape, set the camcorder's Power switch to "CAMERA", then set your TV to the appropriate input mode.
- If you have a TV or speakers that are not specially shielded, do not place the speakers adjacent to the TV as interference will occur in the camcorder playback picture.

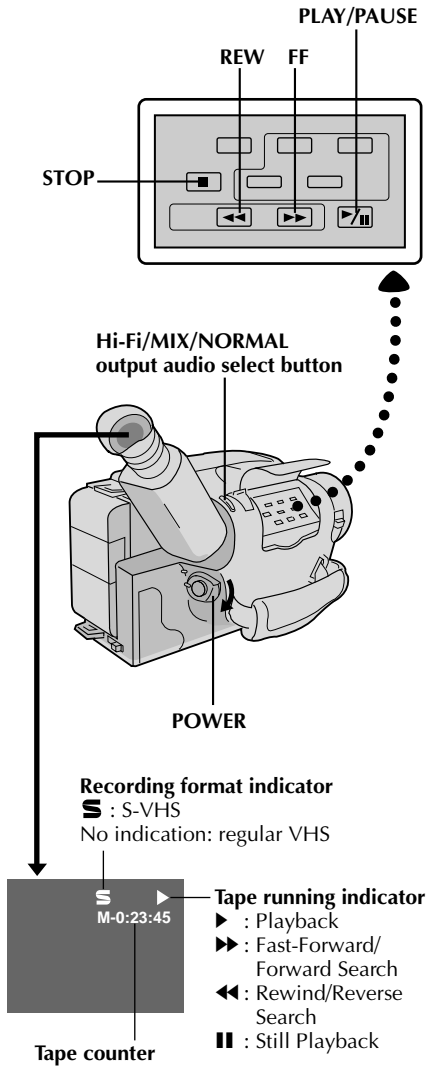**NOTE:**

Make sure you connect your camcorder as directed in "Basic Connections" (pg. 32).

**LOAD A CASSETTE**

- 1 Slide **EJECT** to open the cassette holder, then insert the cassette with the label facing out. Press **PUSH** to ensure the holder is closed and locked.

**SELECT MODE**

- 2 Set the Power switch to "PLAY". The Power On indicator lights.

**PLAYBACK**

- 3 Press **PLAY/PAUSE**. The playback picture appears in the viewfinder and the connected TV.

**STOP PLAYBACK**


- 4 Press **STOP**.

**Rewind or Fast-forward the tape**



Press **REW** to rewind, or **FF** to fast-forward the tape during Stop mode.

**NOTE:**


The camcorder shuts off automatically after about 5 minutes in Stop mode or Still Playback mode. To turn on again, set the Power switch to "POWER OFF", then to "PLAY".

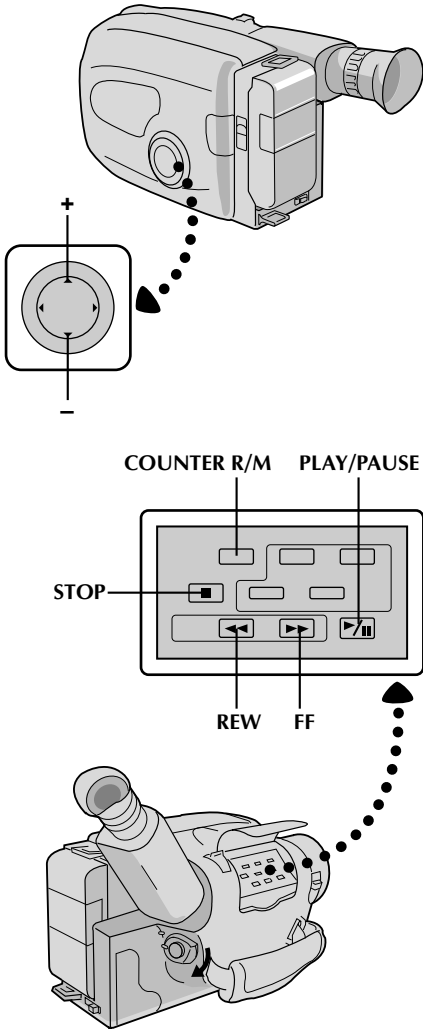


<p><b>FEATURE:</b> <b>PURPOSE:</b></p> <p><b>OPERATION:</b></p> <p><b>NOTES:</b></p>	<p><b>Manual Tracking</b></p> <p>To eliminate noise bars that appear on the screen during playback.</p> <p>1) Press either +/- button as many times as necessary for best picture.</p> <p>● To reset <i>TRACKING</i> to the original preset, press both + and - buttons simultaneously.</p> <p>● Manual Tracking may not work with tapes recorded on other VCRs or camcorders.</p>
<p><b>FEATURE:</b> <b>PURPOSE:</b> <b>OPERATION:</b></p> <p><b>NOTE:</b></p>	<p><b>Still Playback</b></p> <p>To pause during playback.</p> <p>1) Press <b>PLAY/PAUSE</b> during playback.</p> <p>2) To resume normal playback, press <b>PLAY/PAUSE</b> again.</p> <p><i>Noise bars appear and pictures may become monochrome during Still Playback. This is normal.</i></p>
<p><b>FEATURE:</b> <b>PURPOSE:</b></p> <p><b>OPERATION:</b></p> <p><b>NOTE:</b></p>	<p><b>Shuttle Search</b></p> <p>To allow high-speed search in either direction.</p> <p><b>Forward Search</b></p> <p>1) Press <b>FF</b> during playback.</p> <p><b>Reverse Search</b></p> <p>1) Press <b>REW</b> during playback.</p> <p><i>Noise bars appear and pictures may become monochrome or darken in Shuttle Search. This is normal.</i></p>
<p><b>FEATURE:</b> <b>PURPOSE:</b> <b>OPERATION:</b></p> <p><b>NOTES:</b></p>	<p><b>Counter Memory Function</b></p> <p>To make it easier to locate a specific tape segment.</p> <p>1) Press <b>COUNTER R/M</b> and hold for more than 2 seconds. The counter resets to "0:00:00".</p> <p>2) Press <b>COUNTER R/M</b> less than 1 second. "M" appears.</p> <p>3) After recording or playback, press <b>STOP</b>, then <b>REW</b>. The tape automatically stops at or close to 0:00:00.</p> <p>4) Press <b>PLAY/PAUSE</b> to start playback.</p> <p>● The counter memory functions in the FF and REW modes.</p> <p>● To disable Counter Memory Function, press <b>COUNTER R/M</b> less than 1 second so the "M" disappears.</p>

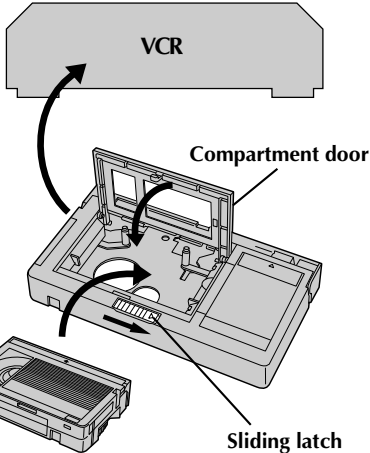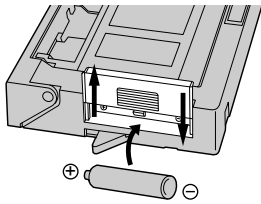

Compact video cassette

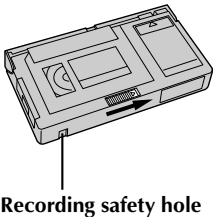

Recording safety hole

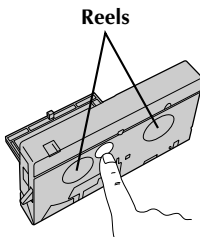

Reels

## Cassette Adapter

Use this to play back a S-VHS-C/VHS-C video cassette recorded with this camcorder. It is fully compatible with any VHS/S-VHS video cassette recorder. The C-P7U adapter is battery powered and automatically performs tape loading and unloading.

### 1 INSERT BATTERY

Slide the battery cover up to remove it, and install one "R6(AA)" size battery as shown in the illustration at left. Then reattach the cover.

### 2 INSERT CASSETTE IN ADAPTER

Slide the latch to open the adapter compartment door, then insert the cassette and close the compartment door.

### 3 PLAY BACK ON CONNECTED VCR


Load the cassette adapter into the VCR and play the tape back as you would any other.

### 4 REMOVE CASSETTE FROM ADAPTER

Slide the latch and the compartment door opens automatically. Then insert your finger in the hole on the underside of the adapter as shown in the illustration at left, push up and remove the cassette.

## NOTES:

- During tape loading and unloading, do not touch the reels for safety and tape protection.
- Tapes recorded in S-VHS cannot be played back on regular VHS VCRs.
- During special-effect playback (slow motion, still frame, etc.), the picture may vibrate or noise bars may appear on the screen.
- To record on a VCR using a compact cassette and the adapter, cover the adapter's recording safety hole with adhesive tape.

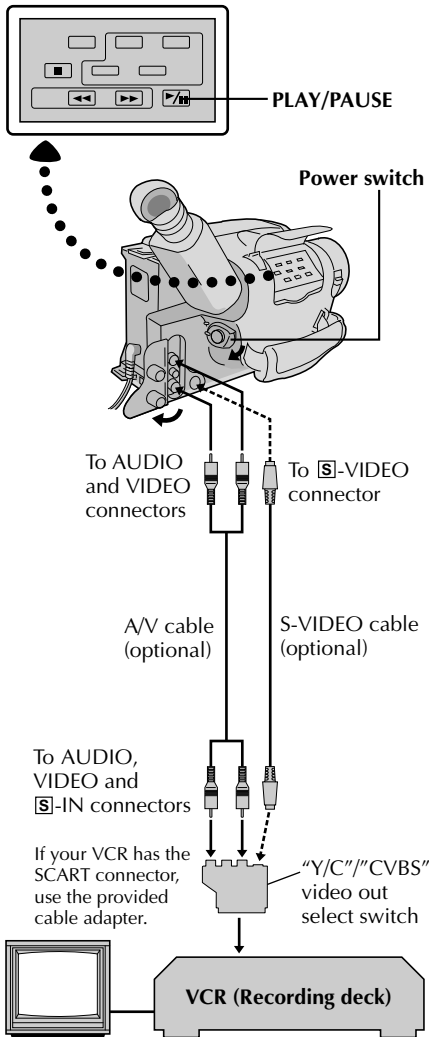

## Tape Dubbing

### CONNECT EQUIPMENT

- 1 Following the illustration at left, connect the camcorder and the VCR. (refer also to page 32 and 33)

### PREPARE FOR DUBBING

- 2 Set the camcorder's Power switch to "PLAY", turn on the VCR's power, and insert the appropriate cassettes in the camcorder and the VCR.

### SELECT VCR MODE

- 3 Engage the VCR's AUX and Record-Pause modes.

### FIND EDIT-IN POINT

- 4 Engage the camcorder's Play mode to find a spot just before the edit-in point. Once it's reached, press **PAUSE** on the camcorder.

### START EDITING

- 5 Press **PLAY** on the camcorder and engage the VCR's Record mode.

### STOP EDITING TEMPORARILY


- 6 Engage the VCR's Record-Pause mode and press **PAUSE** on the camcorder.

### EDIT MORE SEGMENTS

- 7 Repeat steps 4 through 6 for additional editing, then stop the VCR and camcorder when finished.

### NOTES:

- If your VCR has an S-VIDEO input connector or a SCART connector compatible with Y/C signals, connect the camcorder and the VCR using the S-VIDEO cable. This can improve the dubbed picture quality.
- If you use the provided cable adapter, set the "Y/C"/"CVBS" video out select switch as required.
  - Y/C : When connecting to a VCR which accepts Y/C signals and uses an S-VIDEO cable.
  - CVBS : When connecting to a VCR which does not accept Y/C signals and uses an audio/video cable.

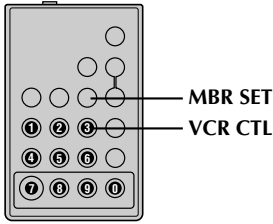

RM-V704U or RM-V700U  
(provided)

### VCR CODE LIST

VCR BRAND NAME	BUTTONS (A) (B)	VCR BRAND NAME	BUTTONS (A) (B)
AKAI	6 2 6 4 7 7	PHILIPS	1 9 9 5 1 1 9 4 9 1 9 6 1 2 3 3
BLAUPUNKT	1 3	SANYO	3 6 3 5
FERGUSON	9 7 9 8 3 2	SELECO, REX	9 1 9 6
GRUNDIG	1 4 3 4	SHARP	1 5 1 0
HITACHI	6 6 6 3	SONY	6 5 6 0 3 9 3 1
JVC A B C	9 1 9 6 9 3	THOMSON, TELEFUNKEN, SABA, NORDMENDE	9 1 9 6 9 7 3 2
MITSUBISHI	6 7 6 8	TOSHIBA	6 9 6 1
NEC	9 7 3 8		
PANASONIC	1 3 1 7 1 1 9 4 1 3		

## Random Assemble Editing [R.A. Edit]

Create edited videos easily using your camcorder as the source player. You can select up to 8 "cuts" for automatic editing, in any order you like. R.A. Edit is more easily performed when the MBR (Multi-Brand Remote RM-V704U or RM-V700U) is set to operate with your brand of VCR (see VCR CODE LIST), but can also be performed by operating the VCR manually.

### SET REMOTE/VCR CODE

Before operation, make sure the lithium battery is installed in the remote control RM-V704U or RM-V700U (see pg. 42).

### 1 SET REMOTE TO OPERATE VCR

Turn off the power to the VCR and point the remote toward the VCR's infrared sensor. Then, referring to the VCR CODE LIST on the left, press and hold **MBR SET**, and press button (A) and then (B).

- The code is automatically set once you release the **MBR SET** button, and the VCR's power comes on.

### 2 OPERATE THE VCR

Make sure the VCR's power is on. Then, while holding **VCR CTL**, press the button on the remote for the desired function. The functions the remote can control are PLAY, STOP, PAUSE, FF, REW and VCR REC STBY (you don't need to press **VCR CTL** for this one).

*You're now ready to try Random Assemble Editing.*

## IMPORTANT

Although the MBR is compatible with JVC VCRs and those of many other makers, it may not work with yours or may offer limited functions.

## NOTES:

- If the VCR's power doesn't come on in step 1, try another code from the VCR CODE LIST.
- Some brands of VCR don't come on automatically. In this case, turn the power on manually and try step 2.
- If the RM-V704U/V700U is not able to control the VCR, use the controls on the VCR.

## MAKE CONNECTIONS

## CONNECT TO . . .

- 1** **A JVC VCR EQUIPPED WITH REMOTE PAUSE TERMINAL**  
Connect the editing cable to the Remote PAUSE terminal.
- B JVC VCR NOT EQUIPPED WITH REMOTE PAUSE TERMINAL BUT EQUIPPED WITH R.A. EDIT CONNECTOR.**  
Connect the editing cable to the R.A. EDIT connector.
- C VCR OTHER THAN TYPE A OR B**  
Connect the editing cable to the RM-V704U/ V700U's Pause-In jack.

## PREPARE CAMCORDER


- 2** Insert a recorded tape and set the Power switch to "PLAY".




## PREPARE VCR

- 3** Turn the power on, insert a recordable tape and engage the AUX mode (refer to VCR's instructions).

## NOTES:

- If your VCR has an S-VIDEO input connector or a SCART connector compatible with Y/C signals, connect the camcorder and the VCR using the S-VIDEO cable. This can improve the dubbed picture quality.
- If you use the provided cable adapter, set the "Y/C"/"CVBS" video out select switch as required.  
Y/C : When connecting to a VCR which accepts Y/C signals and uses an S-VIDEO cable.  
CVBS : When connecting to a VCR which does not accept Y/C signals and uses an audio/video cable.

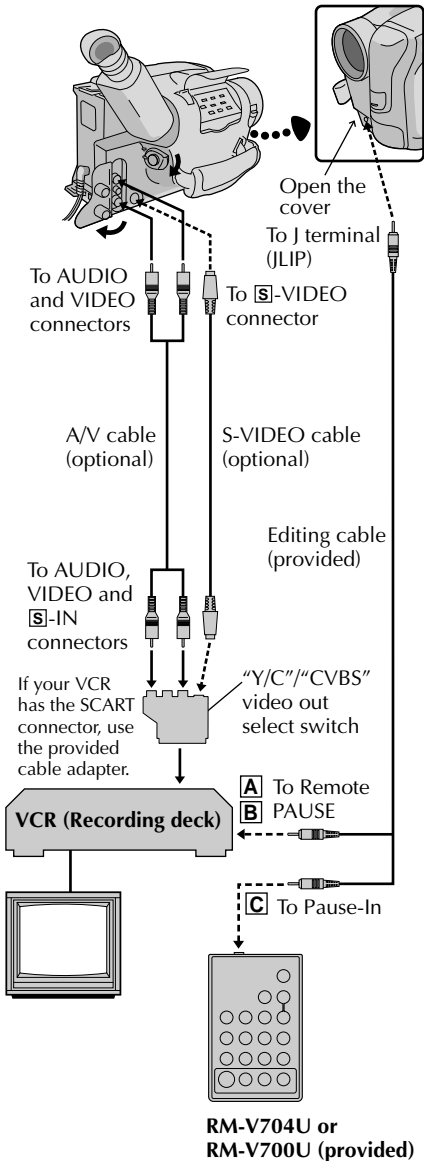

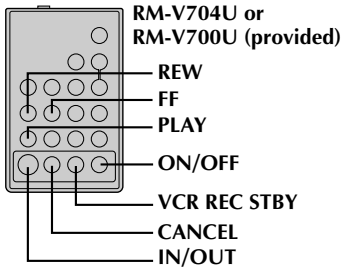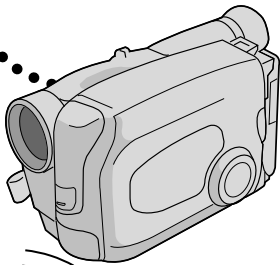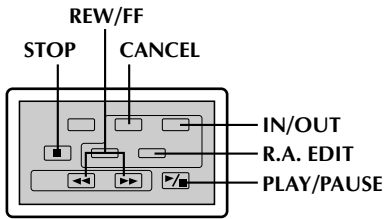

	IN	OUT
1	0:00:25	--:--:--
2		
3		
4		
5		
6		
7		
8		
COUNTER	0:00:25	
TOTAL	0:00:00	



	IN	OUT
1	0:00:25	0:01:05
2	0:03:18	0:03:31
3	0:02:33	0:02:53
4	0:04:11	--:--:--
5		
6		
7		
8		
COUNTER	0:04:11	
TOTAL	0:01:13	

## SELECT SCENES

### ACCESS R.A. EDIT COUNTER DISPLAY

- 1 Press **PLAY/PAUSE**, then press **R.A. EDIT** and the counter display appears in the viewfinder and the screen of the connected TV.

### REGISTER BEGINNING OF SCENE

- 2 Press **REW** or **FF** to locate the beginning of the scene you want, then press **IN/OUT** to register that point. The data appears under **IN** on the display.

### REGISTER END OF SCENE

- 3 Press **REW** or **FF** to locate the end of the scene and press **IN/OUT** to register it. The data appears under **OUT** on the display. The total time of the registered scene(s) is displayed at the bottom of the screen.

### REGISTER ADDITIONAL SCENES

- 4 Repeat steps 2 and 3 for each additional scene (as many as 8).

### MAKE CORRECTIONS



- 5 Press **CANCEL** during steps 2 and 3 to erase the most recently registered point.

## NOTES:

- The RM-V704U/V700U can be used to operate other camcorder functions as well. Point the RM-V704U/V700U at the camcorder's remote sensor and press any of the following buttons (function appears in parentheses):
  - **ON/OFF** (camcorder R.A. EDIT)
  - **IN/OUT** (camcorder IN/OUT)
  - **CANCEL** (camcorder CANCEL)
- There must be at least one second between an in-point and its corresponding out-point.
- To ensure correct operation, leave at least 15 seconds open between scenes.
- Blank portions of tape cannot be registered as in-points or out-points.
- If it takes more than 5 minutes to search for an in-point, the VCR's Record-Pause mode is cancelled and editing doesn't take place.
- Pressing **R.A. EDIT** clears all in- and out-points from memory.
- Leave a small margin for error around each in-point to ensure the scene is recorded in its entirety.



## ORIGINAL TAPE (camcorder)

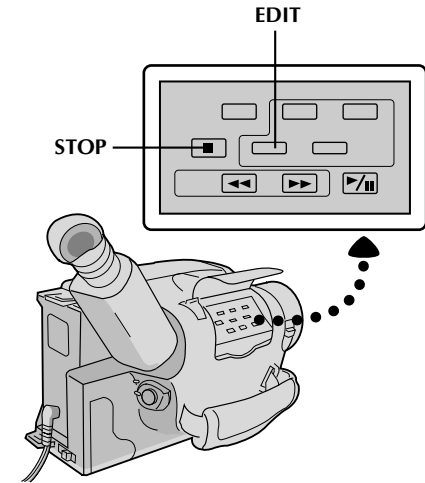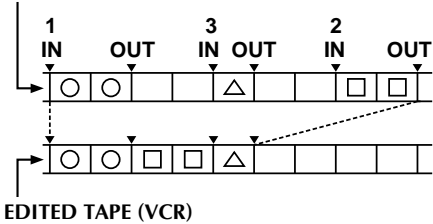

## AUTOMATIC EDITING TO VCR

## ENGAGE VCR'S RECORD-PAUSE MODE

- 1 Point the remote control toward the VCR's infrared sensor and press **VCR REC STBY**, or manually engage the VCR's Record-Pause mode.

## BEGIN AUTOMATIC EDITING

- 2 Press **EDIT** on the camcorder, and the previously selected scenes are copied to the VCR in the specified order.

## END AUTOMATIC EDITING


- 3 When all selected scenes have been copied, the camcorder and VCR enter the still or pause mode. Press **STOP** on both units. To make the R.A. Edit counter display disappear, press **R.A. EDIT**.

- When finished editing, be sure to disconnect the editing cable and the audio/video cable.

## NOTES:

- If you performed step 1 on page 39 ("MAKE CONNECTIONS"), keep the remote control pointed at the VCR during editing.
- The on-screen display only appears while the camcorder searches for each scene.
- There may be noise at in- or out-points on the edited tape with certain VCRs.

## SUPPLEMENTAL INFORMATION ON THE REMOTE CONTROL

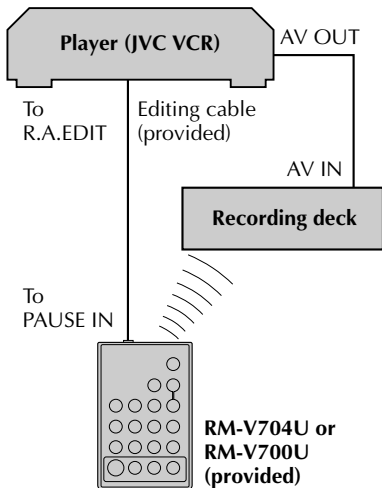

Using the RM-V704U/V700U, it is also possible to perform deck-to-deck Random Assemble Editing. The playback deck must be an R.A. Edit-capable JVC VCR. The recording deck can be...



- a VCR other than JVC, or
- a JVC VCR which has **neither** a Remote PAUSE nor an R.A. EDIT connector

## How to use:

- Connect the playback deck and RM-V704U/V700U as shown on the left.
- Set the RM-V704U/V700U to correspond to the brand of the recording deck. (☞ pg. 38)
- For Random Assemble Editing procedure, please refer to the instruction manual of the JVC VCR you are using as the playback deck.

## Notes:

- RM-V704U/V700U cannot be used to control the playback deck.
- RM-V704U/V700U is capable of controlling basic operations of the recording deck. While pressing VCR CTL, press PLAY, STOP, PAUSE, FF or REW for these functions. (Not possible with some brands and models). Other buttons cannot be used.
- To put the recording deck in the Record-Pause mode, use the controls on the recording deck itself.

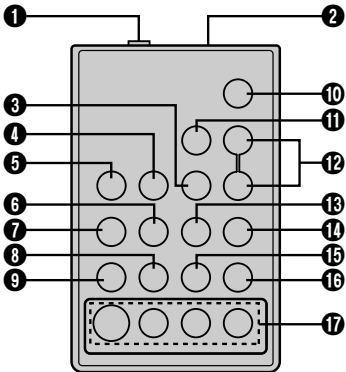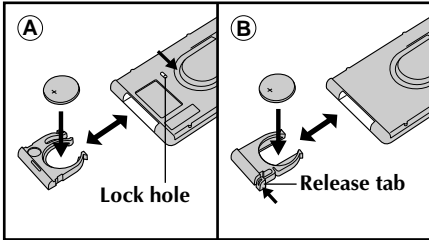

RM-V704U or RM-V700U  
(provided)

The Full-Function Remote Control Unit can operate this camcorder from a distance as well as the basic operations (PLAY, STOP, PAUSE, FF, and REW) of your VCR. This remote control unit makes additional recording functions possible.

## Installing The Battery

### 1 PULL OUT BATTERY HOLDER

Pull out the battery holder according to the type of remote control unit you have.

Type ① : Pull out the battery holder while sliding the lock hole.

Type ② : Pinch the release tab and pull out the battery holder.

### 2 INSERT BATTERY


Making sure the plus (+) side is up, insert the lithium battery (CR2025)\* into the battery holder.

### 3 REPLACE BATTERY HOLDER

Insert the battery holder into the remote control unit, and push the holder until it clicks into place.

\* Read the caution concerning lithium batteries (☞ pg. 2).

BUTTONS	FUNCTIONS	
	With the camcorder's power switch set to "CAMERA".	With the camcorder's power switch set to "PLAY".
① PAUSE IN Connector	—	☞ pg. 39
② Infrared beam transmitting window	Transmits the beam signal.	
③ MBR SET Button	—	☞ pg. 38
④ INT. TIME Button	Self-Timer/Time-Lapse (☞ pg. 43)	—
⑤ REC TIME Button	Animation/Time-Lapse (☞ pg. 43)	—
⑥ FF Button	Retake (forward) (☞ pg. 15)	FF/FF Shuttle Search (☞ pg. 34)
⑦ REW Button	Retake (rewind)/Quick Review (☞ pg. 15)	Rew/Rew Shuttle Search (☞ pg. 34)
⑧ PAUSE Button	—	Pause (☞ pg. 35)
⑨ PLAY Button	—	Playback start (☞ pg. 34)
⑩ START/STOP Button	Functions same as the Recording Start/Stop button on the camcorder.	
⑪ VISS Button	Index Code marking (☞ pg. 43)	—
⑫ ZOOM (T/W) Buttons	Zoom (invariable speed, ☞ pg. 15)	—
⑬ VCR CTL Button	—	☞ pg. 38
⑭ A.DUB Button	—	Audio Dubbing (☞ pg. 45)
⑮ STOP Button	—	Stop (☞ pg. 34)
⑯ INSERT Button	—	Insert Editing (☞ pg. 44)
⑰ R.A.EDIT Buttons	—	☞ pg. 40


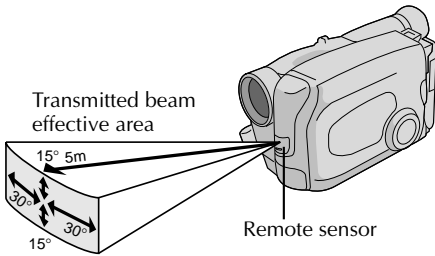


When using the remote control, be sure to point it at the remote sensor. The above illustration shows the approximate transmitted beam effective area for indoor use. The transmitted beam may not be effective or may cause incorrect operation outdoors or when the remote sensor is directly exposed to sunlight or powerful lighting.

#### Interval Timer Indicator



#### Rec Time Indicator

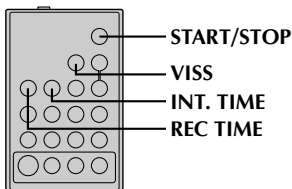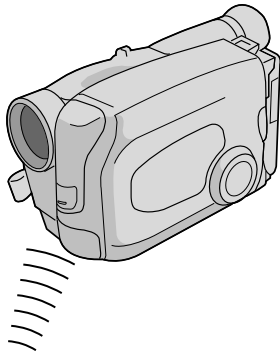

RM-V704U or  
RM-V700U  
(provided)

#### FEATURE: PURPOSE:

#### OPERATION:

#### Self-Timer, Animation and Time-Lapse

The remote control lets you set/release Interval Timer and Rec Time functions as well as the Menu screen.

#### Self-Timer

##### 1) Set

Instead of performing steps 1 through 3 on pg. 30 ("Self-Timer"), press **INT. TIME** on the remote control. Each time **INT. TIME** is pressed, the Interval Timer indicator appears, changing in the following order: 15s, 30s, 1min, 5min and No indication (off).

##### 2) Release

Instead of setting "Interval Timer" to "OFF" in the Menu, press **INT. TIME** on the remote control until the Interval Timer indicator disappears.

#### Animation

##### 1) Set

Instead of performing steps 1 and 2 on pg. 31 ("Animation"), press **REC TIME** on the remote control. Each time **REC TIME** is pressed, the Rec Time indicator appears, changing in the following order: 1/4s, 1/2s, 1s, 5s and No indication (off).

##### 2) Release

Instead of using the Menu in step 5 on pg. 31, press **REC TIME** on the remote control until the Rec Time indicator disappears.

#### Time-Lapse

##### 1) Set

Instead of performing steps 1 through 3 on pg. 31 ("Time-Lapse"), press **INT. TIME** and **REC TIME** on the remote control. Each time **INT. TIME** is pressed, the Interval Timer indicator appears, changing in the following order: 15s, 30s, 1min, 5min and No indication (off). Each time **REC TIME** is pressed, the Rec Time indicator appears, changing in the following order: 1/4s, 1/2s, 1s, 5s and No indication (off).

##### 2) Release

Instead of using the Menu in step 5 on pg. 31, press **INT. TIME** and **REC TIME** on the remote control until the indicators disappear.

#### NOTE:

Also refer to pgs. 30 and 31.

#### FEATURE: PURPOSE:

#### OPERATION:




#### NOTE:

#### Index Code Marking

To give you automatic access to any selected point on a recording.

1) Press **VISS** once to place the index code. "INDEX" blinks in the viewfinder during marking.

If **VISS** is pressed during Record-Standby mode, the mark is placed where **Recording Start/Stop** is pressed.

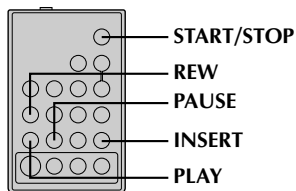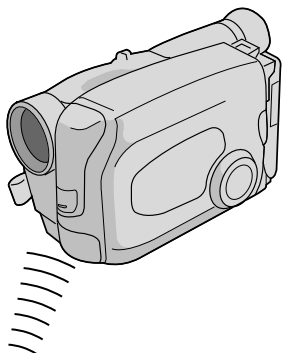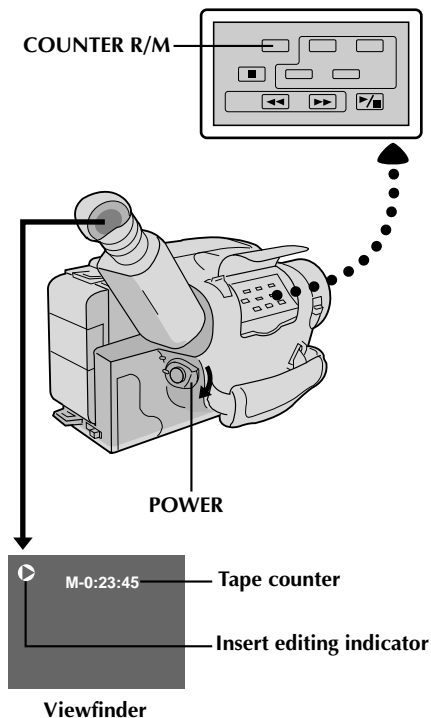

RM-V704U or RM-V700U  
(provided)

## Insert Editing

You can record a new scene into a previously recorded tape, replacing a section of the original recording with minimal picture distortion at the in- and out-points. The original audio on the normal audio track remains unchanged.

### NOTE:

Use the RM-V704U or RM-V700U remote control unit to perform this procedure.

## SELECT MODE

- 1 Set the Power switch to "PLAY".

## FIND EDIT-OUT POINT

- 2 Play back the tape, locate the Edit-Out point and press **PAUSE** on the camcorder or the remote control.

## RESET COUNTER

- 3 Press and hold **COUNTER R/M** for more than 2 seconds to reset the tape counter, then press for less than 1 second and make sure "M" appears in the viewfinder.

## FIND EDIT-IN POINT

- 4 Press **REW** to go a little beyond the beginning of the scene you want to replace, press **PLAY** to view the recorded tape, and press **PAUSE** at exactly at the Edit-In point where the new scene should start.

## ENGAGE INSERT EDITING MODE

- 5 Press and hold **INSERT**, and without releasing **INSERT**, press and release **PAUSE**. The Insert mode is engaged. When the scene the camcorder is aimed at appears on the screen, go to the next step.

## BEGIN INSERT EDITING


- 6 Press **Recording Start/Stop**. When the counter reaches "0:00:00", editing stops automatically and the camcorder enters the Insert-Pause mode.

## END INSERT EDITING

- 7 Press **STOP**.

### NOTES:

- After step 5, Retake (pg. 15) can be performed.
- The tape may stop slightly before or after the designated end point, and noise bars may appear. Neither indicates a defect in the unit.
- Only video signal is recorded in the Insert Editing mode.

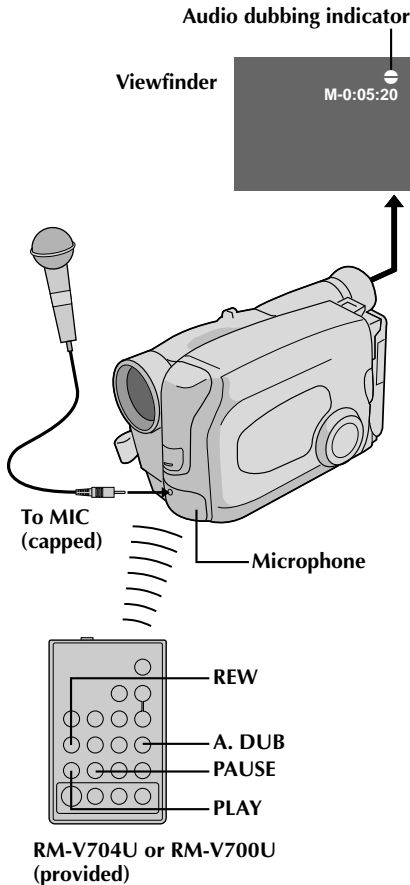

## Audio Dubbing

You can record a new soundtrack on a prerecorded tape (normal audio only).

\*\* Perform steps **1**, **2** and **3** of the Insert Editing procedure (pg. 44) before continuing.

- The sound comes from the built-in microphone (or an external microphone if connected).

### FIND EDIT-IN POINT

- 1 Press **REW** to go a little beyond the beginning of the scene onto which you want to dub new audio, press **PLAY** to view the recorded tape, then press **PAUSE** at exactly the point where dubbing should start.

### ENGAGE AUDIO DUB STANDBY MODE

- 2 Press and hold **A. DUB**, and without releasing **A. DUB**, press and release **PAUSE**.

### BEGIN AUDIO DUBBING

- 3 Press **PLAY**. When the counter reaches "0:00:00", Audio Dubbing stops automatically and the camcorder enters the Audio Dub-Standby mode.

### END AUDIO DUBBING




- 4 Press **STOP**.

### NOTES:

- Do not press **FF** or **REW** during Audio Dub-Standby, or the edit points will not be accurate.
- If the microphone is too close to the TV, or if the TV's volume is too high, whistling or howling may occur.

### NOTES (for Insert Editing and Audio Dubbing):

- Insert Editing and audio Dubbing may not work correctly if the tape contains blank segments, or if the recording speed was changed during the original recording.
- To edit/dub onto a tape with the recording safety tab removed, cover the hole with adhesive tape.
- Do not press **STOP** during Insert Editing or Audio Dubbing, or the edit points will not be accurate.
- During Insert Editing and Audio Dubbing, when Insert-Pause or Audio Dub-Standby is engaged, the counter may go slightly past "0:00:00". Recording, however, stops at exactly 0:00:00.

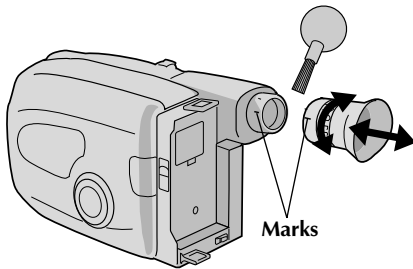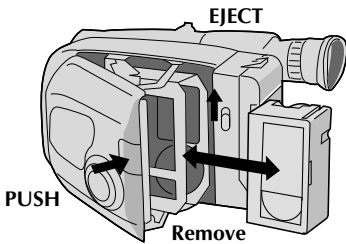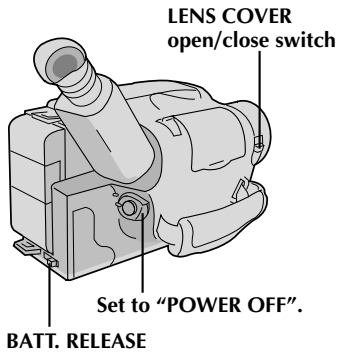

## After Use

- 1** Set the Power switch to "POWER OFF" to turn off the camcorder.
- 2** Slide **EJECT** to open the cassette holder, then remove the cassette.
- 3** Close and lock the cassette holder by pressing **PUSH**.
- 4** Press **BATT. RELEASE** to remove the battery pack.
- 5** Slide the **LENS COVER** open/close switch to close the lens cover.

## Cleaning The Camcorder

### CLEAN EXTERIOR

- 1** Wipe gently with a soft cloth.

### CLEAN LENS

- 2** Blow it with a blower brush, then wipe gently with lens cleaning paper.

### CLEAN VIEWFINDER

- 3**
  - ① Turn the eyepiece counterclockwise and pull it out.
  - ② Remove dust using a blower brush.
  - ③ Align the marks, re-attach the eyepiece and turn it clockwise.

### NOTES:


- Avoid using strong cleaning agents such as benzine or alcohol.
- Cleaning should be done only after the battery pack has been removed or other power units have been disconnected.
- Mould may form if the lens is left dirty.

SYMPTOM	POSSIBLE CAUSE(S)
<b>POWER</b>	
No power is supplied.	<ul style="list-style-type: none"> <li>• The battery pack has not been attached correctly (☞ pg. 6).</li> <li>• The battery pack is not charged (☞ pg. 6).</li> <li>• The power supply has not been correctly connected (☞ pg. 7).</li> </ul>
The power suddenly goes off and doesn't come back on by itself.	<ul style="list-style-type: none"> <li>• The battery pack has completely discharged.</li> <li>• Remove the cassette and disconnect the power source, then after a few minutes, try turning the power back on. If it still doesn't come on, consult your nearest JVC dealer.</li> </ul>
<b>RECORDING</b>	
Recording cannot be performed.	<ul style="list-style-type: none"> <li>• The recording tape's Erase Protection tab is missing. Cover the hole with adhesive tape. (Some tapes have sliding tabs. In this case, check the position of the tab.)</li> </ul>
Recording does not start.	<ul style="list-style-type: none"> <li>• The camcorder Power switch has not been set to "CAMERA" (☞ pg. 14).</li> </ul>
<b>PLAYBACK</b>	
The tape is running, but there's no playback picture.	<ul style="list-style-type: none"> <li>• The TV has not been set to its VIDEO mode.</li> <li>• If A/V connection is used, the TV's VIDEO/TV switch has not been set to VIDEO.</li> <li>• The RF unit has not been set to the correct channel.</li> </ul>
Noise bars appear in the playback picture.	<ul style="list-style-type: none"> <li>• Manual Tracking has not been performed (☞ pg. 35).</li> </ul>
Noise appears throughout the entire playback picture.	<ul style="list-style-type: none"> <li>• This occurs when playing back a blank portion of tape.</li> <li>• If this occurs when playing a recorded portion, there is a possibility that the video heads are dirty or the camcorder is broken. Consult your nearest JVC dealer.</li> </ul>
Playback picture is blurred or interrupted.	<ul style="list-style-type: none"> <li>• The video heads are dirty or worn out. Consult your nearest JVC dealer for head cleaning or replacement.</li> </ul>
The counter indication is blurred during Still playback.	<ul style="list-style-type: none"> <li>• This is normal.</li> </ul>
Tape was played back on VCR using cassette adapter but picture could not be viewed.	<ul style="list-style-type: none"> <li>• Tapes recorded in S-VHS cannot be played back on regular VHS VCRs (☞ pg. 10). Connect camcorder directly either to VCR or to TV, then playback can be performed on camcorder (☞ pg. 32).</li> </ul>
<b>TAPE TRANSPORT</b>	
The tape stops during fast-forward or rewind.	<ul style="list-style-type: none"> <li>• The Counter Memory Function has been activated (☞ pg. 35).</li> </ul>
Rewinding or fast-forwarding cannot be performed.	<ul style="list-style-type: none"> <li>• The tape is already fully wound on one reel or the other.</li> </ul>

SYMPTOM	POSSIBLE CAUSE(S)
<b>OTHER</b>	
<b>The tape won't eject.</b>	<ul style="list-style-type: none"> <li>● The battery pack is running low.</li> </ul>
<b>Some functions are not available.</b>	<ul style="list-style-type: none"> <li>● The PROGRAM AE select dial is set to "AUTO LOCK".</li> </ul>
<b>Vertical white lines appear when shooting a very bright object.</b>	<ul style="list-style-type: none"> <li>● This sometimes occurs when the contrast between the background and the object is great. It is not a defect of the camcorder.</li> </ul>
<b>Bright, crystal-shaped spots appear in the viewfinder.</b>	<ul style="list-style-type: none"> <li>● Sunlight is directly entering the lens.</li> </ul>
<b>An error number (i.e. E03) appears in the viewfinder.</b>	<ul style="list-style-type: none"> <li>● Turn the camcorder's power off, then disconnect the power source. After a few minutes, try turning the power on again. If the error number still appears in the viewfinder, consult your nearest JVC dealer.</li> </ul>
<b>The image is out of focus.</b>	<ul style="list-style-type: none"> <li>● The diopter needs to be adjusted (☞ pg. 8).</li> <li>● The scene being shot is adversely affecting the operation of Auto Focus (☞ pg. 20).</li> </ul>
<b>A character generator title and the date and time displays disappear from the viewfinder.</b>	<ul style="list-style-type: none"> <li>● If you remove the power source from the camcorder while the power is on, all settings and selections are erased. Make sure to turn the camcorder's power off before disconnecting the power source.</li> </ul>
<b>Even though the Lens Cover is open, the Lens Cover Warning indicator blinks.</b>	<ul style="list-style-type: none"> <li>● The Lens Cover Warning indicator may blink when the camcorder is used in dark areas, regardless of the position of the Lens Cover.</li> </ul>
<b>When the camcorder is swung or shaken, a noise can be heard.</b>	<ul style="list-style-type: none"> <li>● This camcorder is equipped with Auto Pause System which has a sensor for detection. Because of the sensor, when the camcorder is swung or shaken, noise can be heard from the sensor. This is not a malfunction.</li> </ul>
<b>The wrong date and time are displayed/recorded.</b>	<ul style="list-style-type: none"> <li>● If you have not performed Date/Time Setting (☞ pg. 9), the date and time are not displayed/recorded correctly. Be sure that Date/Time Setting is carried out.</li> </ul>


The camcorder is a microcomputer-controlled device. External noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such cases, first disconnect its power supply unit (battery pack, AC Power Adapter/Battery Charger, etc.) and clock battery; and then re-connect it and proceed as usual from the beginning.



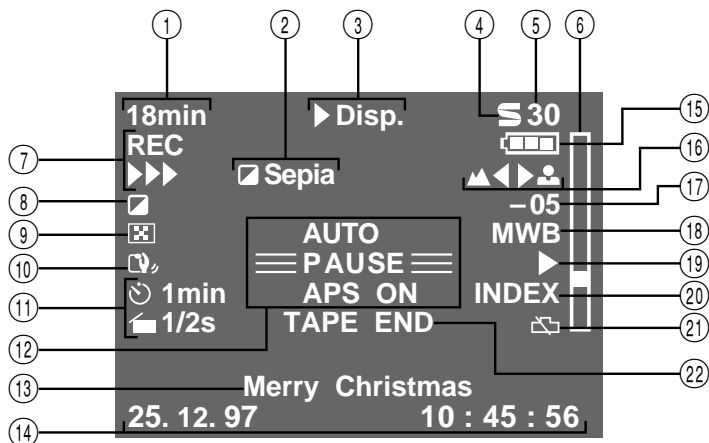



Viewfinder Indications

- ① Cassette Warning/Remaining Tape Time ..... pg. 14  
When no cassette is inserted: the Cassette ( ) Warning blinks.  
When Erase Protection tab is not in the position that allows recording: the Cassette ( ) Warning lights. Otherwise, the Remaining Tape Time is displayed.
- ②, ⑧ PROGRAM AE Indicator ..... pg. 18  
Displayed at ② for approx. 1 second when the PROGRAM AE select dial is switched from one position to another. Then only the indicator remains at ⑧.
- ②, ⑨ Fade/Wipe Standby Indicator ..... pg. 23  
Displayed at ② for approx. 2 seconds when the Fade/Wipe is switched from one function to another by pressing the SET button. Then only the indicator remains at ⑨.
- ③ Program Manager Function Indication ... pg. 23  
Appears when the PROGRAM AE select dial is set to any position other than AUTO LOCK.
- ④ Recording Format Indicator ..... pg. 10
- ⑤ Tape Length Display ..... pg. 10
- ⑥ Zoom Indicator Bar ..... pg. 15
- ⑦ Recording Indicator ..... pg. 14
- ⑩ Picture Stabilizer Indicator ..... pg. 22
- ⑪ Interval Time/Recording Time Indicator ..... pg. 30
- ⑫ • Record-Standby Mode Indicator ..... pg. 14  
• Auto Pause System Indicator ..... pg. 16  
• Lens Cover Warning: LENS COVER .. pg. 14
- ⑬ Instant Titles Display ..... pg. 24
- ⑭ Date/Time Character Display ..... pg. 26
- ⑮ Battery Pack Remaining Power Indicator  
Changes as follows according to the battery pack's remaining power level: "". When the power is almost gone, the indicator blinks, then the unit shuts off. Replace the battery pack with a fully charged one.  
**(Note:** The symbol containing 3 darkened squares — — does not necessarily mean that the battery pack is fully charged.)
- ⑯ Focus Indicator ..... pg. 20
- ⑰ Exposure Level Indicator ..... pg. 22
- ⑱ White Balance Mode Indicator ..... pg. 27
- ⑲ Menu Setting Change Indicator ..... pg. 28
- ⑳ Index Code Marking ..... pg. 43
- ㉑ Clock Warning  
Once the power is turned on and the indicator blinks for about 10 seconds, perform the date and time settings ( pg. 9). After setting is complete, turn the power off and disconnect the power source. If you re-connect it and turn the power on and the indicator is blinking, that means that the clock (lithium) battery is either not installed or has discharged. Install, or replace the old battery with, a new one ( pg. 8).
- ㉒ • Tape End Display: TAPE END ..... pg. 14  
Appears when the end of the tape is reached during playback, recording or fast-forward.  
• Condensation Warning:   
When this indication appears, all functions are disabled. Turn the unit off (without removing the power source) for a few hours, and when you turn it on again the indicator should disappear.

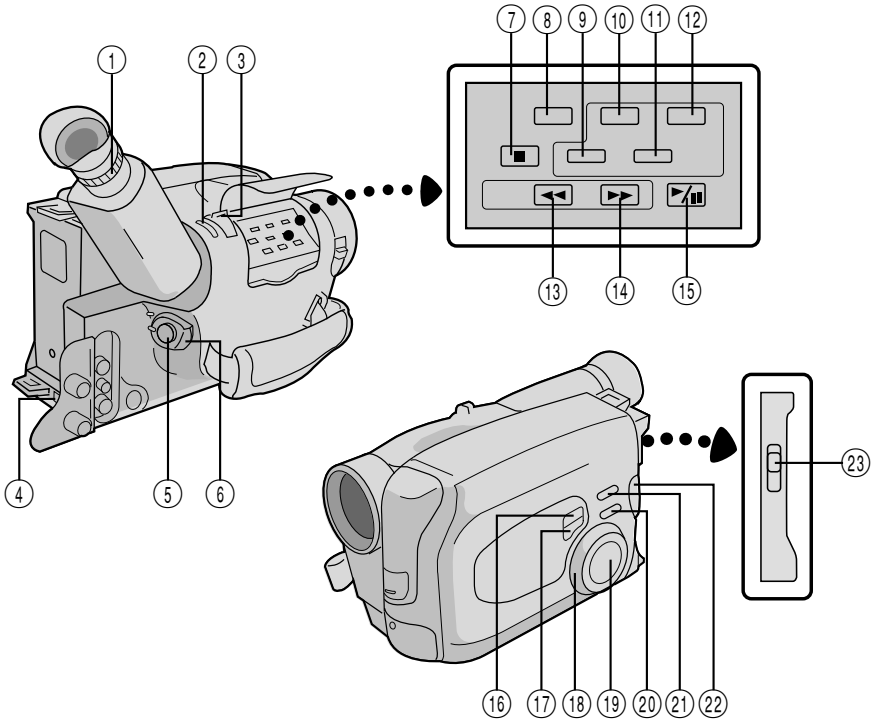

## Controls

- |   |            |  |        |
|---|------------|--|--------|
| ① Diopter Adjustment .....                          | pg. 8      | ⑬ REW Button .....                     | pg. 34 |
| ② QUICK REC Button .....                            | pg. 17     | RETAK E R [Quick Review] Button .....  | pg. 15 |
| ③ Power Zoom Lever .....                            | pg. 15     | ⑭ FF Button .....                      | pg. 34 |
| ④ BATT. [Battery] RELEASE Switch .....              | pg. 6      | RETAK E F Button .....                 | pg. 15 |
| ⑤ Recording Start/Stop Button .....                 | pg. 14     | ⑮ PLAY/PAUSE Button .....              | pg. 34 |
| ⑥ POWER Switch .....                                | pg. 14, 34 | ⑯ SELECT Button .....                  | pg. 23 |
| ⑦ STOP Button .....                                 | pg. 34     | ⑰ SET Button .....                     | pg. 23 |
| ⑧ Tape Length [30•45•60]<br>Select Button .....     | pg. 10     | ⑱ PROGRAM AE Select Dial .....         | pg. 18 |
| COUNTER R [Reset]/M [Memory]<br>Button .....        | pg. 35     | ⑲ Multi-Function Control               |        |
| ⑨ EDIT Button .....                                 | pg. 41     | • Exposure +/- .....                   | pg. 22 |
| ⑩ R.A.EDIT CANCEL Button .....                      | pg. 40     | • Focus FAR/NEAR .....                 | pg. 20 |
| ⑪ • R.A.EDIT Button .....                           | pg. 40     | • Menu Setting Change .....            | pg. 28 |
| • S-VHS/VHS Recording Format<br>Select Button ..... | pg. 10     | • Tracking +/- .....                   | pg. 35 |
| ⑫ • R.A.EDIT IN/OUT Button .....                    | pg. 40     | ⑳ MENU Button .....                    | pg. 28 |
| • AUTO PAUSE Button .....                           | pg. 16     | ㉑ P. [Picture] STABILIZER Button ..... | pg. 22 |
|   |            | ㉒ PUSH Button .....                    | pg. 11 |
|   |            | ㉓ EJECT Switch .....                   | pg. 11 |

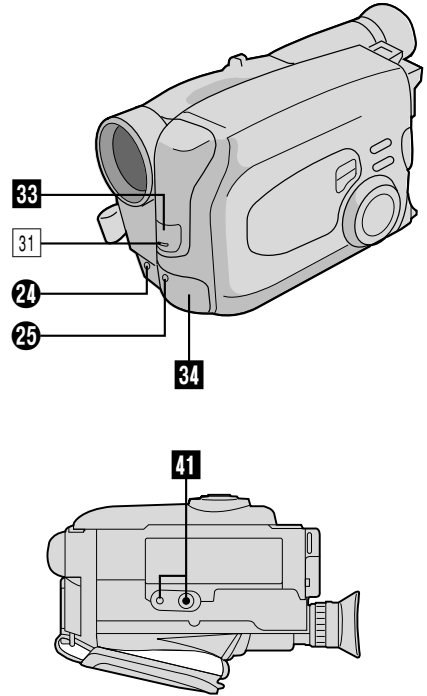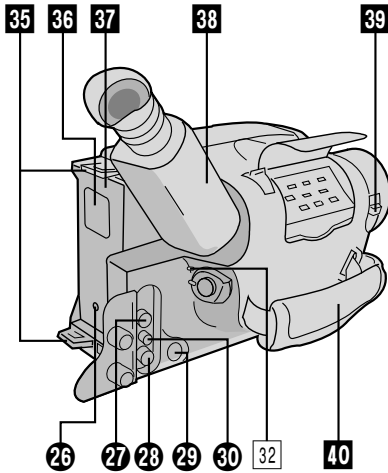

## Connectors

- 24** J terminal (JLIP (Joint Level Interface Protocol) Connector.)  
(Located beneath the jack cover)
    - Connect the Editing Cable when performing Random Assemble Editing (pg. 39).
    - It is used to connect the camcorder to a device such as a personal computer.  
For further detail consult your nearest JVC dealer. Information (in English) is also available at our home page: <http://www.jvc-victor.co.jp/>
  - 25** External MIC Jack (capped) ..... pg. 45
  - 26** DC IN Jack ..... pg. 7
- The jacks **27** to **30** are located beneath the jack cover.
- 27** AUDIO OUT Jack ..... pg. 32
  - 28** VIDEO OUT Jack ..... pg. 32
  - 29** S-VIDEO OUT Jack ..... pg. 32
  - 30** RF DC OUT Jack ..... pg. 33

## Indicators

- 31** Tally Lamp ..... pg. 14
- 32** Power On Indicator ..... pg. 14

## Other Parts

- 33** • Camera sensor  
Be careful not to cover this area; built-in here is the sensor necessary for shooting.
- Remote sensor ..... pg. 43
- 34** Microphone ..... pg. 45
- 35** Shoulder Strap Eyelets ..... pg. 13
- 36** Clock Battery Compartment ..... pg. 8
- 37** Battery Pack Mount ..... pg. 6
- 38** Electronic Viewfinder ..... pg. 8
- 39** LENS COVER SWITCH ..... pg. 14
- 40** Grip Strap ..... pg. 12
- 41** Tripod Mounting Socket ..... pg. 13

**A**

AC Power Adapter .....	pg. 6
Animation Recording .....	pg. 31, 43
Audio Dubbing .....	pg. 45
Auto Date Record .....	pg. 26
Auto Focus .....	pg. 20
Auto Mode Lock Mode .....	pg. 19
Auto Mode Release Mode .....	pg. 19
Auto Pause System .....	pg. 16

**B**

Battery Pack .....	pg. 6, 53
Brighten the Image .....	pg. 22

**C**

Car Battery .....	pg. 7
Cassette Adapter .....	pg. 36
Character Generator .....	pg. 25
Charge Marker .....	pg. 6
Charging the Battery Pack .....	pg. 6
Clock (Lithium) Battery .....	pg. 8, 42
Connection to a VCR/TV .....	pg. 32
Contents .....	Cover page
Counter Memory .....	pg. 35

**D**

Darken the Image .....	pg. 22
Date/Time/Character Insert .....	pg. 26
Date/Time Setting .....	pg. 9
Discharge the Battery pack .....	pg. 6
Dioptr Adjust .....	pg. 8

**E**

Electronic Fog Filter Mode .....	pg. 19
Erase Protection .....	pg. 11
Exposure Control .....	pg. 22

**F**

Fade-in/out .....	pg. 23
Fast-Forward Tape .....	pg. 34
Focus Lock .....	pg. 20

**G**

Grip Adjustment .....	pg. 12
-----------------------	--------

**H**

High Speed Shutter Mode .....	pg. 19
-------------------------------	--------

**I**

Index Code Marking .....	pg. 43
Insert Cassette .....	pg. 11
Insert Editing .....	pg. 44
Instant Titles .....	pg. 24

**M**

Manual Focus .....	pg. 21
MBR code Setting .....	pg. 38

**N**

ND Effect Mode .....	pg. 19
----------------------	--------

**P**

Picture Stabilizer .....	pg. 22
Playback .....	pg. 34
Program AE with Special Effects .....	pg. 18
Provided Accessories .....	pg. 4

**Q**

Quick-Rec .....	pg. 17
Quick Review .....	pg. 15

**R**

Random Assemble Editing .....	pg. 38–41
Recording, Advanced Features .....	pg. 18–31
Recording .....	pg. 14
Recording, Start/Stop .....	pg. 14
Recording Format Setting .....	pg. 10
Recording-Standby .....	pg. 14
Remote Control Unit .....	pg. 42
Remove Cassette .....	pg. 11
Retake .....	pg. 15
Rewind Tape .....	pg. 34

**S**

Self-Timer .....	pg. 30, 43
Sepia Mode .....	pg. 19
Shoulder Strap Attachment .....	pg. 13
Shuttle Search .....	pg. 35
Specifications .....	pg. 55
Sports Mode .....	pg. 19
Still Playback .....	pg. 35

**T**

Tape Counter .....	pg. 34
Tape Dubbing .....	pg. 37
Tape Length Setting .....	pg. 10
Time-Lapse Shooting .....	pg. 31, 43
Tracking .....	pg. 35
Tripod Mounting .....	pg. 13
Twilight Mode .....	pg. 19

**V**

Viewfinder Adjustment .....	pg. 8
Viewfinder, Indications .....	pg. 49

**W**

White Balance Adjustment .....	pg. 27
Wide Mode .....	pg. 24
Wipe-in/out .....	pg. 23

**Z**

Zooming .....	pg. 15
---------------	--------

## General Battery Precautions

 
- When the C-P6U or C-P7U (cassette adapter) is not functioning even when correctly operated, the batteries are exhausted. Replace them with fresh ones.
- Use only the following battery:  
C-P6U or C-P7U ..... R6(AA) size

Please make note of the following rules for battery use. When misused, batteries can leak or explode.

1. Refer to the C-P6U/C-P7U instructions when replacing the battery.
2. **Do not** expose batteries to excessive heat as they can leak or explode.
3. **Do not** dispose of batteries in a fire.
4. Remove batteries from the unit if it is to be stored for an extended period to avoid battery leakage which can cause malfunctions.

## Battery Packs

The supplied battery pack is a nickel-cadmium battery. Before using the supplied battery pack or an optional battery pack, be sure to read the following cautions:



1. **To avoid hazard . . .**
  - .... **do not** burn.
  - .... **do not** short-circuit the terminals.
  - .... **do not** modify or disassemble.
  - .... use only specified chargers.
2. **To prevent damage and prolong service life . . .**
  - .... **do not** subject to unnecessary shock.
  - .... avoid repeated charging without fully discharging.
  - .... charge in an environment where temperatures are within the tolerances shown in the chart below. This is a chemical reaction type battery—cooler temperatures impede chemical reaction, while warmer temperatures can prevent complete charging.
  - .... store in a cool, dry place. Extended exposure to high temperatures will increase natural discharge and shorten service life.
  - .... avoid prolonged uncharged storage.
  - .... remove from charger or powered unit when not in use, as some machines use current even when switched off.

3. **To prevent damage to the camcorder . . .**
  - .... replace the battery pack when it begins to deliver less recording time per charge.

### NOTE:

*It is normal for the battery pack to be warm after charging, or after use.*

### Temperature Ranges

Charging .....	10°C to 35°C
Operation .....	0°C to 40°C
Storage .....	-10°C to 30°C

### NOTES:

- *Recharging time is based on room temperature of 20°C.*
- *The lower the temperature, the longer recharging takes.*

## Cassettes

To properly use and store your cassettes, be sure to read the following cautions:

### 1. During use . . .

- .... make sure the cassette bears the S-VHS-C or VHS-C mark.
- .... be aware that recording onto prerecorded tapes automatically erases the previously recorded video and audio signals.
- .... make sure the cassette is positioned properly when inserting.
- .... do not load and unload the cassette repeatedly without allowing the tape to run at all. This slackens the tape and can result in damage.
- .... do not open the front tape cover. This exposes the tape to fingerprints and dust.

### 2. Store cassettes . . .

- .... away from heaters or other heat sources.
- .... out of direct sunlight.
- .... where they won't be subject to unnecessary shock or vibration.
- .... where they won't be exposed to strong magnetic fields (such as those generated by motors, transformers or magnets).
- .... vertically, in their original cases.

## Main Unit

1. **For safety, DO NOT . . .**
  - ..... open the camcorder's chassis.
  - ..... disassemble or modify the unit.
  - ..... short-circuit the terminals of the battery pack. Keep it away from metallic objects when not in use.
  - ..... allow inflammables, water or metallic objects to enter the unit.
  - ..... remove the battery pack or disconnect the power supply while the power is on.
  - ..... leave the battery pack attached when the camcorder is not in use.
2. **Avoid using the unit . . .**
  - ..... in places subject to excessive humidity or dust.
  - ..... in places subject to soot or steam such as near a cooking stove.
  - ..... in places subject to excessive shock or vibration.
  - ..... near a television set.
  - ..... near appliances generating strong magnetic or electric fields (speakers, broadcasting antennas, etc.).
  - ..... in places subject to extremely high (over 40°C) or extremely low (under 0°C) temperatures.
3. **DO NOT leave the unit . . .**
  - ..... in places of over 50°C.
  - ..... in places where humidity is extremely low (below 35%) or extremely high (above 80%).
  - ..... in direct sunlight.
  - ..... in a closed car in summer.
  - ..... near a heater.
4. **To protect the unit, DO NOT . . .**
  - ..... allow it to become wet.
  - ..... drop the unit or strike it against hard objects.
  - ..... subject it to shock or excessive vibration during transportation.
  - ..... keep the lens directed at extremely bright objects for long periods.
  - ..... direct the eyepiece of the viewfinder at the sun.
  - ..... carry it by holding the viewfinder.
  - ..... swing it excessively when using the shoulder strap.
5. **This camcorder features a built-in head cleaner which automatically cleans the heads and head drum when a cassette is loaded or unloaded. If, however, the heads become dirty and cause blurriness or interruption in the playback picture, consult your nearest JVC dealer.**

### About moisture condensation . . .

- You have observed that pouring a cold liquid into a glass will cause drops of water to form on the glass' outer surface. This same phenomenon occurs on the head drum of a camcorder when it is moved from a cool place to a warm place, after heating a cold room, under extremely humid conditions or in a place directly subjected to the cool air from an air conditioner.
- Moisture on the head drum can cause severe damage to the video tape, and can lead to internal damage to the camcorder itself.

### Serious malfunctioning

If malfunctioning occurs, stop using the unit immediately and consult your local JVC dealer.

## SPECIAL NOTES ON VIDEO HEADS

### Dust and dirt on video heads

1. Always allow enough time for your camcorder to acclimatize to its environment before using it.
2. Do not use the unit in areas of high humidity. (Typical areas of high humidity are given below.)
  - From being used or stored in a very cold outdoor situation, then immediately being used in a warm indoor situation.
  - From being used or stored in a cool air-conditioned situation, then being used in a high-humidity outdoor situation.
  - Other areas where rapid large temperature changes can occur.
3. Taking care of your "C" format video cassette tapes.
  - Store the video cassette tapes in a vertical position, complete in their cassette cases.
  - During transportation, always store cassettes in their cassette cases.
4. Check recorded information at regular intervals. If the camcorder is equipped with a quick review facility, use this facility to check whether the picture is clear or not.
 

If the quick review or playback picture is not clear, then the video heads may be dirty.

### Note:

As a maladjusted tracking control can give similar symptoms to dirty video heads, please check that the tracking control of the unit is in the centre position.

### Cleaning the video heads

Accumulation of dirt and other particles on the video heads may cause the playback picture to become blurred or interrupted. Although this camcorder is equipped with a built-in head cleaner which automatically cleans the heads, reducing the likelihood of dirty heads, if such troubles are encountered, we recommend the use of the cleaning cassette specifically designed for JVC camcorders, model number TCC-2U. Please use the cleaning cassette as indicated below:




- ① After inserting the cleaning cassette, activate the Play mode for a maximum of 15 seconds (normally, 5 seconds is sufficient).
- ② Remove the cleaning cassette and check the playback picture with a previously good-recorded tape.
- ③ If the picture is clear, then recording on a new tape can begin when desired.
- ④ If the picture is not clear, repeat steps 1 to 3 up to two more times.
- ⑤ If the picture is still unclear, consult your local JVC dealer.

### Important Note:

If heads have become dirty, the associated tape will also be damaged, please do not use the tape again.

- A built-in head cleaner automatically cleans the video heads and head drum whenever a cassette is loaded and unloaded to reduce head clogging.
- Cleaning cassette TCC-2U is available from your JVC local dealer.

## GENERAL

Format	: S-VHS/VHS PAL standard
Power source	: DC 6V 
Power consumption	: 6.8 W
Signal system	: PAL-type
Video recording system	
Luminance	: FM recording
Colour	: Converted sub-carrier direct recording Conforms to S-VHS standard
Cassette	:  /  cassette
Tape speed	: 23.39 mm/sec
Recording time Max.	: 60 minutes (with EC-60 cassette)
Operating temperature	: 0°C to +40°C
Operating humidity	: 35% to 80%
Storage temperature	: -20°C to +50°C
Weight	: Approx. 860 g
Dimensions (Including viewfinder)	: 112 (W) x 112 (H) x 232 (D) mm

## CAMERA

Pick up	: 1/4" format CCD
Lens	: F1.6, f = 3.8 to 68.4 mm, 18:1 power zoom lens with auto iris and macro control, filter diameter 46 mm
Viewfinder	: Electronic viewfinder with 0.5" black/white CRT
White balance adjustment	: Auto/Manual adjustment

 
 
## VIDEO

Output	: 1 Vp-p, 75 ohms, unbalanced (via VIDEO out connector)
--------	---

## AUDIO

Output	: -8 dBs, 1 k-ohm (via AUDIO out connector)
External microphone input	: -68 dBs, high impedance, unbalanced with ø3.5 mm (MONO)

## C POWER ADAPTER/BATTERY CHARGER (AA-V11EK) SPECIFICATIONS

Power requirement	: AC 110 to 240 V~, 50/60 Hz
Power consumption	: 23 W
Output	
Charge	: DC 8.5 V 
VTR	: DC 6.3 V 
Charging system	: Constant current, peak detection, timer controlled
Dimensions	: 150 (W) x 42 (H) x 68 (D) mm
Weight	: Approx. 400 g

## CASSETTE ADAPTER (C-P7U) SPECIFICATIONS

Dimensions	: 188 (W) x 25 (H) x 104 (D) mm
Weight	: Approx. 240 g
Accessory	: "R6 (AA)"-size battery x 1

## Provided Accessories pg. 4

### Optional Accessories

- Battery Packs BN-V12U, BN-V22U, BN-V25U
- Car Battery Charger BH-V3E
- RF Unit RF-V5E
- Wireless Remote Control Unit RM-V704U or RM-V700U
- S-VHS-C Cassettes SE-C45/30
- VHS-C Cassettes EC-60/45/30
- Active Carrying Bag CB-V7U

Some accessories are not available in some areas. Please consult your nearest JVC dealer for details on accessories and their availability.

*E. & O. E. Design and specifications subject to change without notice.*

**JVC**

VICTOR COMPANY OF JAPAN, LIMITED



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>