



G910 Mechanical Gaming Keyboard

Setup Guide



Know your product

1. G-keys (programmable)
2. M-keys
3. MR-key
4. Game/Windows® key
5. Backlight key
6. Mute
7. Media keys
8. Volume
9. USB cable connector
10. Palm rests

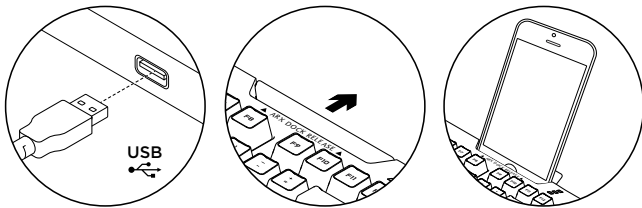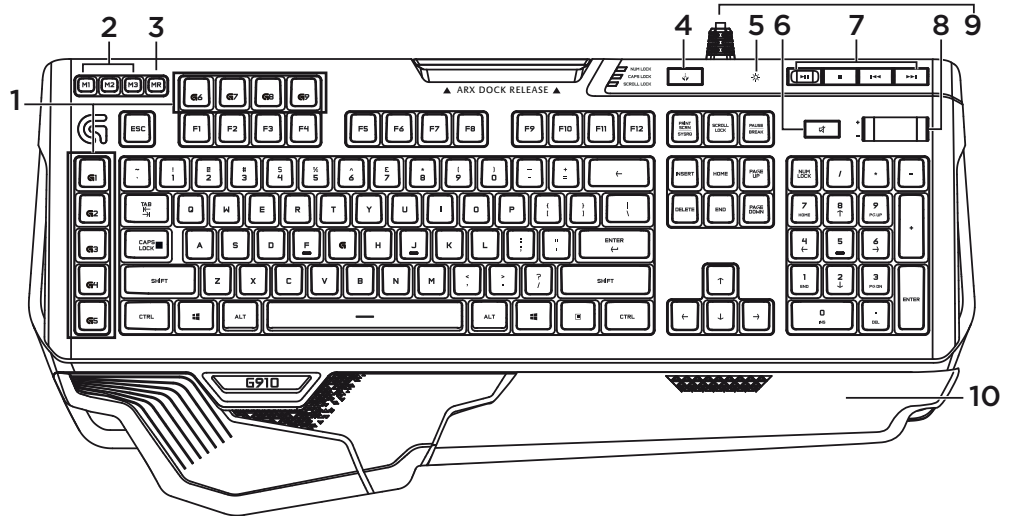

Set up your product

1. Turn on your computer.
2. Connect the keyboard to USB port.
3. Download and install the Logitech® Gaming Software from www.logitech.com/support/g910.

Visit Product Support

There's more information and support online for your product. Take a moment to visit Product Support to learn more about your new gaming keyboard.

Browse online articles for setup help, usage tips, or information about additional features. If your gaming keyboard has optional software, learn about its benefits and how it can help you customize your product.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

At Product Support, you'll find a wide selection of content:

- Tutorials
- Troubleshooting
- Support community
- Software downloads
- Online documentation
- Warranty information
- Spare parts (when available)

Go to www.logitech.com/support/g910

Product features

Programmable G-keys

- Nine programmable G-keys and three M-keys provide up to 27 unique functions per game.
- Customize the G-keys using the Logitech Gaming Software.

To record a macro:

1. Press the MR key.
2. Press a G-key.
3. Type the keys to be recorded.
4. Press the MR key.

To record a second macro to the same G-key, press M2 and repeat steps 1-4. For a third macro, press M3 and repeat steps 1-4.

Download and install the Logitech Gaming Software from www.logitech.com/support/g910.

Game/Windows key

This key disables the standard Windows key and Menu key to prevent the Windows Start menu from activating during a game, which might disrupt play. The game mode LED is lit during game mode.

Keyboard backlighting

- Turn backlighting on and off with backlighting button. Control brightness and color with LGS software.

Troubleshooting

Gaming keyboard does not work

- Check the USB connection.
- Do not use a USB hub.
- Try other USB ports on your computer.
- Reboot your system.

Need help programming the G-keys?

- Download and install the Logitech Gaming Software.
- Launch the software.
- Select Help (question mark) for assistance.

www.logitech.com/support/g910



www.logitech.com

www.logitech.com/support/g910

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>