



I6088

For 1 player / Ages 8 and up

INSTRUCTION MANUAL

P/N 823A5000 Rev.D

E

YES / NEW GAME - Use this button for the following:

Answer "yes" to a question or prompt

Wake the unit from "sleep mode"

Start a new game by pressing and holding

NO - Use to answer "no" to a question or prompt

SOMETIMES - Press to answer "depends" or "maybe" to a question or prompt

UNKNOWN - This answers irrelevant or "unknown" to a question or prompt.

UNDO - Pressing this button will allow you to go back to the last question and change your answer. You will not be able to UNDO any prior answers to previous questions.

SOUND - This button turns the sound on and off (a high tone indicates sound is on, a low tone when sound is off).

LIGHT - Switch turns back light on and off.

LEFT SIDE & RIGHT SIDE SCROLL BUTTON - Use these two buttons to move forward or backward through a menu, or return to a previous section. Pressing the LEFT-SIDE SCROLL will also increase the text scrolling speed. Pressing RIGHT SCROLL will slow it down.

RESET - When a blunt point is inserted, this button resets the game to its original settings.

SLEEP MODE - After 60 seconds of inactivity, the game will automatically shut down, going into "sleep mode". To turn it on again and resume your game, simply press the **YES / NEW GAME** button.


I KNOW WHAT YOU'RE THINKING!

You don't believe me, do you? Well, you soon will! Just think of an everyday object and I will ask you a few simple questions. Answer the questions honestly, and I will tell you what you're thinking! Scary, isn't it?

BUTTONS AND FEATURES

LEFT SIDE SCROLL - Press to increase speed of text and move backward through text

RIGHT SIDE SCROLL - Press to decrease speed of text and move forward through text

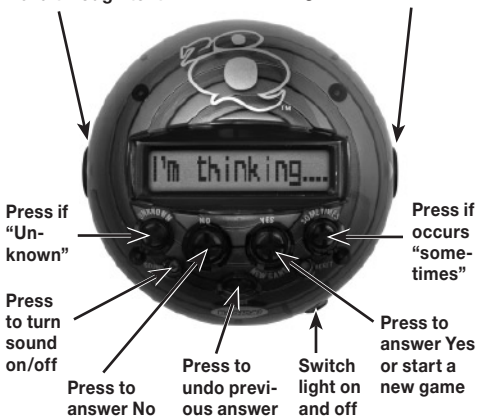

HOW TO PLAY

Although you'll never beat me, I'll tell you how to play anyway!

First, press the **YES / NEW GAME** button to begin a new game.

Next, I will ask if you're thinking of an: animal, vegetable, mineral, other, or unknown.

Use the **LEFT SCROLL** and **RIGHT SCROLL** buttons to select your choices. Then press the **YES / NEW GAME** button to enter your answer. Alternatively you can answer by pressing 'Yes' or 'No' to the relevant category.

Now I will ask you a series of questions. Answer honestly by pressing one of the answer buttons. Your answer would be yes, no, sometimes, or unknown.

After a series of 20 questions, I will try to guess what you're thinking. If I guess correctly, press the **YES / NEW GAME**. If for some strange reason, I guess wrong, I will ask you 5 more questions then guess again.

When I guess what you're thinking, I win! If all my guesses are wrong, you win. But don't worry, that will never happen.

Good Luck! You're going to need it!

BATTERY INSTALLATION

This game is powered by two (2) AAA (LR03) batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.

- Insert two (2) AAA (LR03) batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION

- **As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.**
- **Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.**
- **Do not dispose of batteries in fire.**
- **Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.**
- **Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.**
- **In an environment with radio frequency interference, the product may malfunction and require user to reset the product.**

MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or temperature extremes.
- Do not disassemble this game. If a problem occurs, press the Reset button or remove and replace the batteries to reset the computer, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- The supply terminals are not to be short circuited.
- Insert batteries with the correct polarity.

Please retain this for future reference.

RECYCLING - EUROPE

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, through re-using or recycling such equipment.

The crossed out wheellie-bin symbol on this product is to remind you that Waste Electrical and Electronic products should not be disposed of with household waste. If you are unable to re-use or recycle your product it should be disposed of at a civic amenity site.

While Radica toys comply with all relevant safety standards, we are obliged to tell you that some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

6 MONTH PRODUCT WARRANTY

(This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

THIS WARRANTY IS IN ADDITION TO YOUR STATUTORY RIGHTS.

Distributed by:

RADICA UK Ltd.

The Old Stables, Munns Farm,
Cole Green, Hertfordshire,
SG14 2NL, England



PLEASE RECYCLE



www.radicauk.com

Play on-line at www.20Q.net. Marketed under license from 20Q.net, Inc. All rights reserved.

RADICA: ®

20Q AND "I CAN READ YOUR MIND"

ARE TRADEMARKS OF 20Q.NET, INC.

USED UNDER LICENSE BY RADICA GAMES LTD.

© 2005 RADICA GAMES LTD.

PRODUCT SHAPE™

ALL RIGHTS RESERVED

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>