

# Barbie™ Dance Party **RADICA!**

E 1



TV NOT INCLUDED

MODEL 72044  
Barbie Dance Party  
For 1 player / Ages 5 and up

## INSTRUCTION MANUAL

P/N 82370930 Rev.A

### *Come on, let's dance!*

Hi! It's me, Barbie! And guess what? I'm having a dance party, and you're invited! Anyone can dance at my dance party. All you have to do is pick a song and follow my lead. It's easy and really, really fun! So come on! Let's have a party...a dance party!

## WARNING: EPILEPSY AND SEIZURES

### READ BEFORE OPERATING YOUR BARBIE DANCE PARTY

A few people may experience epileptic seizures when viewing flashing lights or patterns in our daily environment. These persons may experience seizures while watching TV pictures or playing video games. Players who have not had any seizures may nonetheless have an undetected epileptic condition.

Consult your physician before playing video games if you have an epileptic condition or experience any of the following symptoms while playing video games: altered vision, eye or muscle twitching, other involuntary movements, loss of awareness of your surroundings, mental confusion and/or convulsions.

### ADULT SUPERVISION IS RECOMMENDED WHEN INSTALLING BATTERIES.

### AN ADULT IS NEEDED TO CONNECT THE CABLE TO THE TV AND VCR.

## SETTING UP

### BATTERY INSTALLATION

On the back of the unit, loosen the screw on the battery compartment and insert four (4) "AA" batteries as indicated inside the compartment (alkaline batteries recommended). Replace the battery compartment door.

**NOTE:** Batteries in the unit should give you about 10 hours of game play (if alkaline batteries are used). The game will not operate normally when the batteries begin to run low. The screen may be blurred and resetting the game may not work. Be sure to install fresh batteries.

### TV CONNECTION

**Note:** To connect Barbie Dance Party directly to a TV, the TV must be equipped with either audio and video jacks or a Scart connection. These are

commonly found on either the front of the TV near the contrast, colour and picture adjustment controls or on the rear of the TV near the antenna near the cable/satellite jacks.

If your TV has audio and video input jacks, insert the yellow video plug from the Console into the video-in (Yellow) jack on your TV and the white audio plug into the left audio-in (white) jack. Then set the TV to the appropriate video input mode (see your TV's operating manual for details).


If you want to connect via the scart adaptor then plug the audio, video jacks into the scart block provided and plug this unit into the back of the TV. Then set the TV to the appropriate video input mode.

If your TV does not have audio and video input jacks, you may connect Barbie Dance Party through a VCR connected to your TV.

### CONNECTING TO A VCR

To connect Barbie Dance Party to your VCR, insert the yellow video plug from the Console into the video-in (Yellow) jack on your VCR and the white audio plug into the left audio-in (white) jack. Then set the VCR to the appropriate video input mode (see your VCR's operating manual for details).

### ADULT SUPERVISION IS NEEDED WHEN CONNECTING CABLES TO A TV AND VCR.

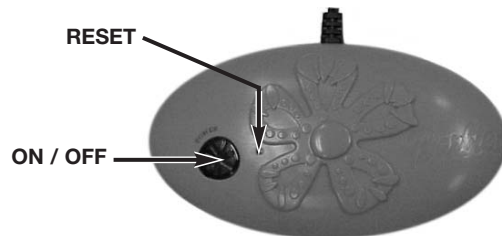

## FEATURES

**ON / OFF SWITCH** - This switch turns the unit on and off.

**PURPLE FLOWER** - Step on this to scroll up.

**RED FLOWER** - Step on this to scroll down.

**PINK FLOWER** - Step on this to enter a selection.

**BLUE FLOWER** - Step on this to cancel a selection or go back to the last screen.

**RESET** - Using a blunt object, press this button to reset the game. Just be careful, this will erase your current game.

## GETTING STARTED

When you turn the game on, the main screen is displayed. Step on the Pink Flower. This will show you where you can either Dance Now or select Hi Scores! If you press the Dance Now, this will take you to the song selection. If you press the Hi Scores, this will take to the song selection and show what you have scored on each song. Use the Purple and Red flowers to scroll up and down the list. Once your selection is highlighted, step on the Pink Flower to choose it.

## SELECTING A SONG

First, step on the Pink Flower. This will show you my list of really cool songs. Use the Purple and Red flowers to scroll up and down the list. Once your selection is highlighted, step on the Pink Flower to choose it.

## SKILL LEVELS


Beside each song title is one, two, three, or four little Hearts. The number of hearts indicate the skill level for the song. Choose whatever skill level you'd like to dance to. One Heart is the easiest, and four Hearts is the hardest. But don't worry, if you just follow my lead, we'll have a great time dancing, no matter what skill level you decide on!

## DANCING

As the song begins, you'll see me standing on a dance pad like yours. I'll do a dance step and call out which colored flowers I'm stepping on. When I'm done, it will be your turn to do the exact same move I just did. But don't worry if you can't remember the exact same pattern I danced to.

**HELPFUL HINT:** If you can't remember the exact pattern I did, the flowers you need to step on will light up with a yellow border. When it lights up yellow, step on that flower.

**NOTE:** It helps to keep your balance if you keep your feet in the center of the mat when I am doing my moves. Then use your feet to step on the flowers.

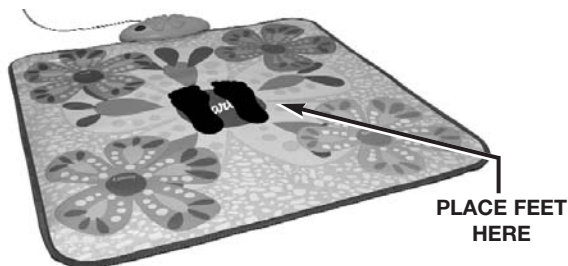

## DOUBLE MOVES

On some of the harder skill level songs, I'll sometimes tell you about a "Double" move. This is where I jump on two flowers at the same time. This can be really fun as you jump up and land on the same two colored flowers I did!

## SCORING

After the song is over, you will receive a score of one to ten hearts (ten being the best score you can get). Your score will depend on how closely you followed my dance steps. Your score will then be listed under each song title you have danced to until the game is turned off. To see what you have scored on previous songs, use the flowers to scroll to the Dance Now! Hi Scores! menu screen and select Hi Scores! Keep practicing, and I'm sure you'll be able to get ten hearts for every song in no time!

## BATTERY INSTALLATION

Barbie Dance Party is powered by four (4) AA batteries. Cross Reference for these batteries: LR6.

- Using a screwdriver, loosen the screw until the battery compartment door on the back of the product can be removed.
- Insert four (4) AA batteries (We recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

## ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

## CAUTION:

- **As with all small batteries, the batteries used with this product should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.**
- **Be sure you insert the battery correctly and always follow the product and battery manufacturer's instructions.**
- **Do not dispose of batteries in fire.**
- **Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.**

## MAINTENANCE

- Handle this product carefully.
- Store this product away from dusty or dirty areas.
- Keep this product away from moisture or extreme temperature.

- Do not disassemble this product. If a problem occurs, press the RESET button, or remove and replace the batteries to reset the computer or try new batteries. If problems persist, consult the Warranty information located at the end of this Instruction Manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

**Please retain this for future reference.**

## PRODUCT WARRANTY

(This product warranty is valid in the United Kingdom only)

All products in the **RADICA**® range are fully guaranteed for a period of 3 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 3 months, please telephone the UK Technical Support team: Tel. **0906 213 0001** (call cost 25p a minute).

**IMPORTANT:** Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

**YOUR STATUTORY RIGHTS ARE NOT EFFECTED.**

Distributed by:  
**RADICA UK Ltd.**  
The Old Stables,  
Munns Farm, Cole Green,  
Herts. SG14 2NL

[www.RadicaUK.com](http://www.RadicaUK.com)

**RADICA:**®  
**BARBIE DANCE PARTY IS A TRADEMARK**  
**OF RADICA GAMES LTD.**  
© 2001 RADICA GAMES LTD.  
PRODUCT SHAPE™  
PATENT PENDING  
ALL RIGHTS RESERVED

**BARBIE IS A TRADEMARK OWNED BY AND USED UNDER LICENSE FROM MATTEL, INC.**  
© 2002 MATTEL, INC.  
ALL RIGHTS RESERVED

XAVIX™ IS A TRADEMARK OF SHINSEDAI CO. LIMITED

POWERED BY **Xavix™** TECHNOLOGY

HELPLINE NUMBER  
**0906 213 0001**  
CALL COST 25P A MINUTE

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>