



MODEL 74004

For 1 player / Ages 8 and up

INSTRUCTION MANUAL

P/N 82379130 Rev.A

Sit down to a few hands with your new Draw Poker from Radica and experience all the thrills and excitement of high-stakes poker without the risk of losing your life savings. Faster dealing keeps the game moving as you try to draw the best hand you can.

Button Functions:


On•Deal•Draw – Press this button to turn the game on, deal your first five (5) cards (5 points will automatically be bet). After you HOLD the cards you want to keep, press this button again to DRAW new cards.

Hold (5) – Press these buttons according to which card you want to keep. Press these buttons again to release the HOLD on that card.

Sound – Press this button to turn the sound on or off.

High•Score – Press this button at any time to see the highest score achieved on this unit since the last time the computer was reset or the last time the batteries were installed or re-inserted.

Reset – Press this button to reset the game. This will erase the high score achieved on this unit.

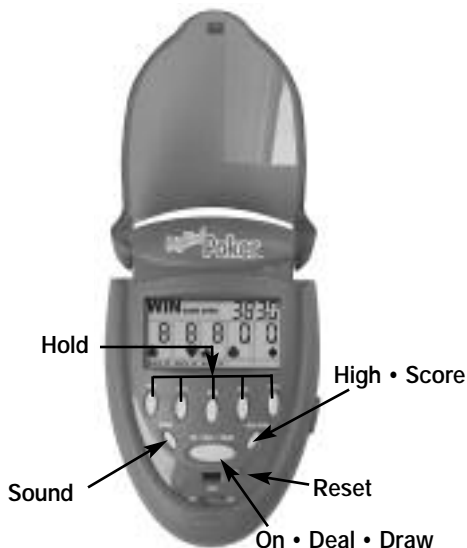

LIGHT - Slide the button to the left to turn the light on and right to turn off. *Remember to turn off the light after playing to save battery.*

PROTECTIVE LID - Press side button to open lid. The lid can be removed by popping off hinge points.

PLAYING THE GAME:

Turn on the game by pressing the **On•Deal•Draw** button.

Press the **On•Deal•Draw** button again to deal your first set of cards. Five (5) points are automatically bet.

Select the cards you wish to hold by using the **Hold** buttons, which are located directly below each card.

Royal Flush	_____	5000
Straight Flush	_____	250
4 of a Kind	_____	125
Full House	_____	40
Flush	_____	25
Straight	_____	20
3 of a Kind	_____	15
2 Pair	_____	10
Jacks or Better	_____	5

Press the **On•Deal•Draw** to receive your next set of cards. If you have a winning hand, your points will increase by the amount listed on the pay table on the back of your game.

NOTE: If your point total gets down to zero, 100 points is automatically added to your total. Maximum displayable score: 99,995.

SLEEP MODE:

Lighted Poker will go to sleep after one minute of non-activity. To wake the game, press the **On•Deal•Draw** button.

BATTERY INSTALLATION:

This game is powered by two (2) AAA batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION:

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.

- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.

Distributed in the U.K. by:
RADICA U.K. Ltd.
 The Old Stables, Munns Farm,
 Cole Green, Hertfordshire,
 SG14 2NL, England



Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm - 11 pm, Monday to Friday.

MAINTENANCE:

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, press the Reset button or remove and replace the batteries to reset the computer, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

6 MONTH PRODUCT WARRANTY

(This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

YOUR STATUTORY RIGHTS ARE NOT EFFECTED.



RADICA®
LIGHTED POKERIS A TRADEMARK OF
RADICA GAMES LTD.
 © 2003 RADICA GAMES LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED

Also available...



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>