



pocket wordhunt™



Model 73003


1 Players / Ages 8 and up

INSTRUCTION MANUAL

P/N 82373000 Rev.A

Test your vocabulary! Stretch your reasoning muscles! Do all of this and more with Word Hunt! Whether you're playing by yourself or challenging a friend, this game not only gives you hours of enjoyment, but lets you exercise your mind as well as your fingers!

FEATURES

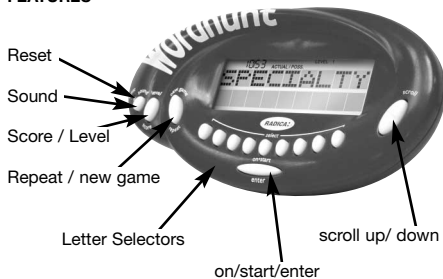

ON / START / ENTER - This button turns the game on, starts the game, or enters a selection.

NOTE: If there is no activity the game will automatically turn itself off. Press the ON / START / ENTER button to turn the game on again.

Score / LEVEL - Press this button to select skill levels 1, 2, or 3. Or you may choose "off," where there is no time limit.

SCORE = Percentage score

LETTER SELECT BUTTONS - While playing the game, press the button directly under the letter you wish to move.

SCROLL UP / DOWN - Use this button to scroll words previously entered.

Repeat/ NEW GAME - Press and hold down to start a New Game from the current level. Simply press down to repeat the same word you just played.

SOUND - This turns the sound "on" and "off."

RESET - Using a blunt object, press this button to reset the game.


Just be careful, this will erase your current game.

GETTING STARTED

Press the ON / START / ENTER button to turn the game on. Then press the Score / LEVEL button to select a skill level. Use the level button to toggle through the levels. Then press ON / START / ENTER to enter your selection.

Level 1 gives you the most amount of time, while Level 3 gives you the least. You may also choose "off" to play without a time limit.

LET'S PLAY!

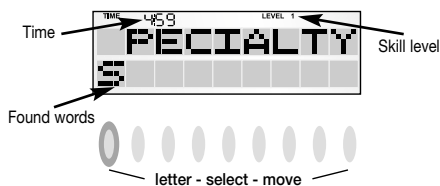

Once you've chosen a skill level, the game begins when a GIVEN WORD appears on the screen. Now you must see how many words you can create from the letters making

Use the LETTER SELECT BUTTONS to move letters from the Given Word to be added to the found words. Do this by selecting the first letter then press the LETTER SELECT BUTTON directly under it. This moves the letter from the Given Word to Found Words.

HELPFUL HINT: If you wish to "undo" a selection, simply press the LETTER SELECT BUTTON you used to move the letter down in the first place.

Once you have created a word from letters of the given word, press ON / START / ENTER to enter the new word. If it is an actual word, your score will increase. If it is not an actual word, no points will be awarded and the word invalid will flash.



In this example, 10 out of 53 words have been found.

HELPFUL HINT: After you enter each word, the timer will be temporarily replaced with numbers representing the amount of words you have created and the amount of possible words you can create.

While creating other words from the Given Word, you may see what words you have already created by pressing the SCROLL UP button.

The game is over when the timer runs out or once you have created all the possible words from the Given Word.

Scoring:

The amount of words you successfully find is divided by the amount of possible words giving you the %. For instance, if you found 5 out of 11 of the possible words your score would be 45%.

Hold down the NEW GAME to start a new game in the same skill level. You may also press the Score / LEVEL button to choose a different skill level.

BATTERY INSTALLATION

This game is powered by two (2) AAA (LR03) batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA (LR03) batteries we recommend alkaline as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or exploded if recharged, disassembled or heated.

MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or temperature extremes.
- Do not disassemble this game. If a problem occurs, press the Reset button or remove and replace the batteries to reset the computer, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- The supply terminals are not to be short-

circuited.

- Batteries are to be inserted with the correct polarity.

Please retain this for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

90-DAY LIMITED WARRANTY

(This product warranty is valid in the United States and Canada only)

Radica China Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover

damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica China Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid. Products returned after the 90-day period has expired will be repaired or replaced (at our option) for a service charge of US \$10.00. Payment must be made by check or money order. This extended service will only be available for one year from the date of purchase.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.



RADICA:®

POCKET WORDHUNT™ IS
A TRADEMARK OF
RADICA CHINA LTD
© 2002 RADICA CHINA LTD.
ALL RIGHTS RESERVED

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>