



# Radica pocket **Poker**



**I7008**

**For 1 player / Ages 8 and up**

## **INSTRUCTION MANUAL**

P/N 823A4500 Rev.D

For 15 years, Radica has consistently produced the best portable electronic Poker games. Classic Vegas style Video Poker is achieved through superior programming, graphics and pocket-size design. Pocket Poker will challenge your skills with two game modes. Draw Poker for classic play and Deuces Wild for extended Poker play. Lady luck will provide hours of fun anytime, anywhere.

The type of winning hands and points awarded are listed on the back of the game.

### **TO PLAY**



**E**

**SOUND button** - Press to turn the sound on/off.

#### **ON/DEAL/DRAW button**

- Press to turn ON the game (The game turns itself off after sitting idle for two minutes.)
- Press to **DEAL** the cards. 5 points are automatically bet for you.
- After you **HOLD** the cards you want to keep, press this button again to **DRAW** your new cards.

**HAND SCORE button** - When "GAME OVER" is flashing, press to change the screen between your current score and last hand. Your score is automatically calculated after each hand.

**HOLD buttons** - After the initial deal, press the HOLD button below each card you want to keep. Press HOLD again if you wish to delete the hold on that card.

**DRAW POKER/OFF/DEUCES POKER** - When "Game Over" is flashing, you may use the switch on the back to change between Draw Poker and Deuces Poker.

**Note:** Be sure to leave the switch in the 'Off' position for a few seconds before switching games. This allows the electronics to reset.

**Deuces Poker** - In Deuces Poker, card "2" is treated as the "multi-purpose" card. It helps to complete the winning hand in which the "2" will maximize the payout.

**RESET** - When a blunt point is inserted, this button RESETS the game to its original settings.

**SCORE** - If the player's point total gets down to zero, 100 points is automatically added to that total. Maximum Score: 99,995.

### **BATTERY INSTALLATION**

This game is powered by one (1) AAA (LR03) batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert one (1) AAA (LR03) batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

**ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.**

### **CAUTION**

- As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in

their mouths. If a battery is swallowed, consult a physician immediately.

- Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.
- Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.
- In an environment with radio frequency interference, the product may malfunction and require user to reset the product.

## MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, remove and replace the batteries to reset the game, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- The supply terminals are not to be short circuited.
- Insert batteries with the correct polarity.

Please retain this for future reference.

## RECYCLING - EUROPE

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, through re-using or recycling such equipment.

The crossed out wheellie-bin symbol on this product is to remind you that Waste Electrical and Electronic products should not be disposed of with household waste. If you are unable to re-use or recycle your product it should be disposed of at a civic amenity site.

While Radica toys comply with all relevant safety standards, we are obliged to tell you that some of

the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

## 90-DAY LIMITED WARRANTY (This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

**IMPORTANT:** Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed by:  
**RADICA USA Ltd.**  
13628-A Beta Road  
Dallas, TX 75244-4510



**RADICA:®**  
POCKET POKER IS A REGISTERED  
TRADEMARK OF RADICA GAMES LTD.  
© 1997 - 2006 RADICA GAMES LTD.  
PRODUCT SHAPE™  
ALL RIGHTS RESERVED

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>