



You will advance to the next trivia level for three more questions. If you complete all three trivia levels correctly, you will collect your extra credits and return to the slots.

## BANK CREDITS

Your Bank Credits are displayed at the bottom of the screen. Bets are subtracted from your Bank Credits with each spin. When your bank credit register is full, Bank Credits will be reset.

## HIGH SCORE

To see your highest score, press and hold the **HIGH SCORE** button. Your highest score will flash in the Bank Credits area at the bottom of the screen.

## SLEEP MODE

After 1 minutes of inactivity, Elvis will say "Bye Bye" and the game will go to sleep. To wake the unit and return to your game, press the **SPIN** button.

## RESETTING THE GAME

To reset the game, insert a small, blunt object into the small **RESET** hole on the front of the unit and press down gently. This will start a new game and erase all previously stored scores.

## BATTERY INSTALLATION:

This game is powered by two (2) AA batteries with adaptor (included) or two (2) C batteries. The battery compartment is located on the back of the game.

- Remove the battery door by pressing the tab down.
- Find the correct battery polarity (+/-) and insert two (2) AA batteries or two (2) C batteries (we recommend alkaline).
- Replace the battery door and close.

**Adult supervision is recommended when changing batteries.**

## CAUTION:

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.

## MAINTENANCE:

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, press the Reset button, or remove and replace the batteries to reset the game, or try new batteries. If problems persist, consult your warranty card for replacement instructions.
- Use only the recommended battery type.
- Do not mix old and new batteries.

- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

**Please retain this for future reference.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.



ELVIS AND ELVIS PRESLEY ARE REGISTERED TRADEMARKS WITH THE USPTO. © 2000 ELVIS PRESLEY ENTERPRISES, INC.

**RADICA:**®  
SLOT LOGO IS A TRADEMARK OF RADICA CHINA LTD.  
© 2000 RADICA CHINA LTD.  
PRODUCT SHAPE™  
ALL RIGHTS RESERVED

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>