 




PASSWORD JOURNAL[®]

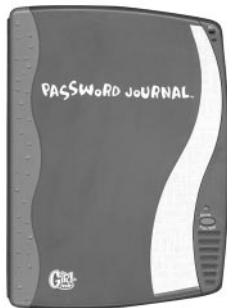

RADICA[®]
GIRL TECH[®]

PASSWORD JOURNAL IS A REGISTERED
 TRADEMARK OF RADICA GAMES LTD.
 © 2000 RADICA GAMES LTD.
 PRODUCT SHAPE™
 PATENTS PENDING
 ALL RIGHTS RESERVED



CUSTOMER SUPPORT LINE: 1-800-803-9611
 www.girltech.com

Model G9922
INSTRUCTION MANUAL

Download from Www.Somanuals.com. All Manuals Search And Download.

 
SETTING UP YOUR PASSWORD JOURNAL®

Remove the screw on the battery compartment door (located on the back of your Password Journal). Remove the battery compartment door and insert three (3) AA batteries (we recommend alkaline) with the negative (-) ends against the springs.

Remove the Reset Key from the battery compartment.

Replace the battery compartment door.

ADULT SUPERVISION IS RECOMMENDED WHEN INSTALLING BATTERIES.

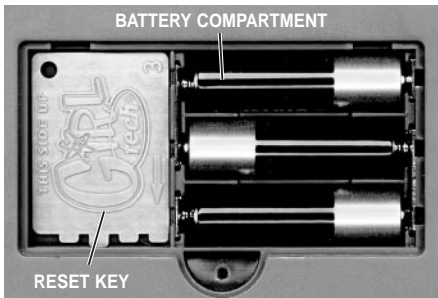

USING YOUR PASSWORD JOURNAL® GETTING STARTED

To open your Password Journal for the first time, insert the Reset Key, with the Girl Tech logo facing up, into the slot located on the

You will then need to select the Mode (Private, Friend, or Dual) that you would like to use by sliding the Mode switch to the desired position.

Private Mode - This mode is for those times when you don't want to share your diary secrets with others. In Private Mode, only you will be able to access Password Journal with your unique password. Short words like "popcorn" or "fun" work best.

Friend Mode - With Friend Mode, you can share your Password Journal with friends. You will need to pick both a Planet Password and a Clearance Code. Your Planet Password can be **Venus, Saturn, Mercury or Jupiter**. Your Clearance Code can be **Red, Blue, Yellow or Silver**.

Dual Mode - Dual Mode combines both Private and Friend Mode for extra security. You will need to choose your own password and select a Planet Password and a Clearance Code.

Depending on the mode you selected, you will then be prompted to "Record your Password" and/or "Record your Planet Password" and "Record your Clearance Code". Wait for the green Access light to illuminate then speak the appropriate password(s) into the microphone (Mic). Follow the voice prompts, remembering to wait for the green light before speaking.



until all passwords and/or Clearance Code have been accepted.

NOTE: When recording your password(s), make sure you are in a quiet place. Your Password Journal hears everything.

NORMAL USE

Press and hold the Access button. Depending on the mode you selected, you will be prompted for "Your Password Please" or "Your Planet Password Please". Wait for the green Access light, then speak the appropriate password clearly into the microphone (Mic). Continue following the voice prompts until all passwords have been accepted. Your Password Journal will open automatically.

CHANGING MODES AND PASSWORDS

Whenever you change modes, you will be prompted to record new passwords. At the voice prompts, record your new password(s) by speaking clearly into the microphone (Mic) as described earlier. To change your password(s) without changing modes, press and hold the Set Password button for about one second. This will erase your old password(s) and you will be prompted to record your new password(s).

LOCKING YOUR PASSWORD JOURNAL®

Firmly close the cover and your Password Journal will lock automatically.

 
SECURITY SWITCH

Security - Sliding this switch between "Hi" and "Lo" controls how precisely your Password Journal recognizes your voice. If you are experiencing problems with getting your journal to recognize your password(s), or if you will be sharing it with a friend, switching to "Lo" security may help.

RESET KEY

The Reset Key is located in the battery compartment. The Reset Key will open your Password Journal without asking for your password(s), just in case you forget them. Insert the Reset Key, with the Girl Tech logo facing up, into the slot located on the right side panel and your Password Journal will open automatically.

NOTE: Make sure to keep your key in a safe place or put it back in the battery compartment. **Never put it inside of the locking portion of your Password Journal.**

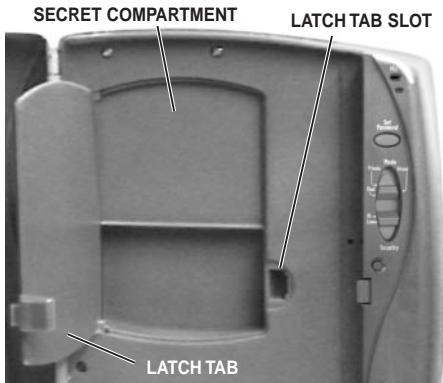

SECRET COMPARTMENT

The Secret Compartment is located under your Writing

Journal, is perfect for keeping small items, such as coins or a special note that you want to keep private. To open the Secret Compartment, push the Latch Tab toward the left until the door lifts open.

TROUBLESHOOTING

If you are having trouble getting your Password Journal to recognize your password, try switching to the Lo Security mode.

REPLACING THE BATTERIES

Remove the screw on the battery compartment door (located on the back of your Password Journal). Remove the battery compartment door. Remove the old batteries. Insert three (3) AA batteries (we recommend alkaline) with the negative (-) ends against the springs. You will have one minute to replace the old batteries before your password(s) are lost. Should you lose your password(s), you will need to re-enter them as described earlier.

Replace battery compartment door.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION:

- As with all small batteries, the batteries used with this game should be kept away from small children who may put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturers' instructions.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.

MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or temperature extremes.
- Do not disassemble this game. If a problem occurs, remove and replace the batteries or try new batteries. If problems persist, consult your warranty card for replacement instructions.
- Use only the recommended batteries for this game.
- Do not attempt to recharge non-rechargeable batteries.
- Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Remove worn out batteries from the game.
- The supply terminals are not to be short-circuited.
- Batteries must be inserted with the correct polarity.

Keep this manual because it contains important information.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

90-DAY LIMITED WARRANTY

This product is warranted by Radica Games, Ltd. for a period of 90 days from the original purchase under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games, Ltd. will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitations may not apply to you. This warranty gives your specific legal rights and you may also have other legal rights which may vary from state to state.

During this 90-day warranty period, the journal will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA. Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

Products returned after the 90-day period has expired will be repaired or replaced (at our option) for a service charge of US \$10.00. Payment must be made by check or money order. This extended service will only be available for one year from the date of purchase.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>