

RADICA

Pocket Poker



MODEL 75005

For 1 player / Ages 8 and up

INSTRUCTION MANUAL

P/N 82389700 Rev.A

Play the classic game of Draw Poker, or try playing deuces wild for some really exciting poker action! Try for 4-of-a-Kind, a Straight Flush, or even a Royal Flush.

The type of winning hands and points awarded are listed on the back of game.

TO PLAY



E

SOUND button - Press to turn the sound on/off.

ON/DEAL/DRAW button

- Press to turn on the game (The game turns itself off after sitting idle for two minutes.)
- Press to **DEAL** the cards. 5 points are automatically bet for you.
- After you **HOLD** the cards you want to keep, press this button again to **DRAW** your new cards.

HAND SCORE button - When "**GAME OVER**" is flashing, press to change the screen between your current score and last hand. Your score is automatically calculated after each hand.

After the initial deal, press the HOLD button below each card you want to keep. Press HOLD again if you wish to delete the hold on that card.

When "**Game Over**" is flashing, you may use the switch on the back to change between Draw Poker and Deuces Poker.

Note: If the player's point total gets down to zero, 100 points is automatically added to that total. Maximum Score: 99,995.

Deuces Poker - A switch is located at the back for switching between Draw Poker and Deuces Poker.


Note: Be sure to leave the switch in the 'Off' position a few seconds before switching games to allow the electronics to reset.

In Deuces Poker, card "2" is treated as the "multi-purpose" card. It helps to complete the winning hand in which the "2" will maximize the payout.

BATTERY INSTALLATION

This game is powered by one "AA" (LR6) battery.

1. Remove cover, press down and slide as shown.
2. Find correct battery polarity (+ -) and diagrams inside compartment.
3. Insert one AA battery (we recommend alkaline) as indicated inside the battery compartment.
4. Replace the battery compartment cover.

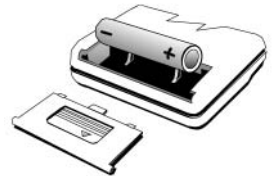

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or exploded if recharged, disassembled or heated.

MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, remove and replace the batteries to reset the game, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- The supply terminals are not to be short circuited.
- Insert batteries with the correct polarity.

Please retain this for future reference.

90-DAY LIMITED WARRANTY

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This

warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed in the U.S. by:
RADICA U.S. Ltd.
13628-A Beta Road
Dallas, TX 75244-4510



RADICA:[®]
POCKET POKER IS A REGISTERED
TRADEMARK OF RADICA GAMES LTD.
© 1997, 2004 RADICA GAMES LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>