

REMINGTON®

BODY GROOMER

BHT-500 Use & Care Guide

Encuentre la Guía de Uso en español en www.remington-products.com



IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Charger unit is not for immersion or for use in shower.
- Do not use an extension cord with this appliance.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNING


To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children and persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use the mini shaver on your scalp.
- Do not use attachments not recommended by the manufacturer.

- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and electrical power adaptor in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the groomer when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the appliance for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

SAVE THESE INSTRUCTIONS

Grooming System

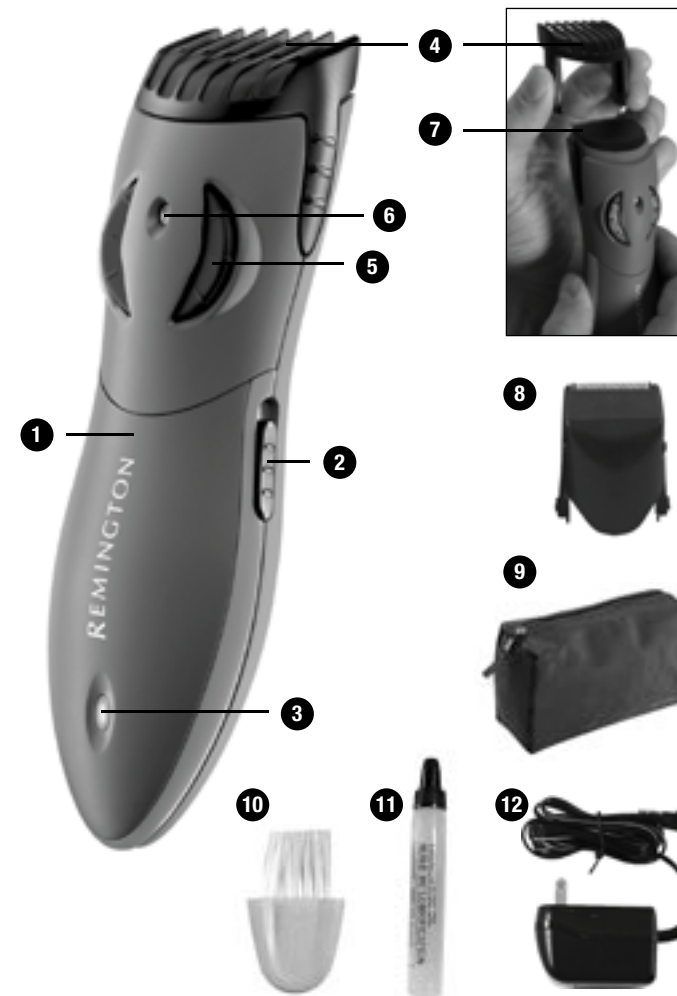

Body Groomer Checklist

- | | |
|---|-------------------------------------|
| 1. Groomer Body | 7. Cutting Assembly |
| 2. On/Off Switch | 8. Removable Foil Shaver Attachment |
| 3. Charging Indicator Light | 9. Storage Bag |
| 4. Removable & Adjustable Trimmer Comb Attachment | 10. Cleaning Brush |
| 5. 5-Position Thumb Wheel Trimmer Adjustor | 11. Oil Bottle |
| 6. Trimmer Length Indicator | 12. Electrical Power Adapter |

NOTE: The Adjustable Trimmer Comb has 5 length settings (1 = Extra Close; 5 = Long). When first becoming familiar with the Grooming System, begin with a higher numbered setting. Adjust cutting length as desired.

Before Using

Please refer to the safety instructions and warnings at the front of this manual before use.


Before using your Grooming System for the first time, charge the unit for 14-16 hours for optimal performance:

1. Connect the Power Adaptor cord to the bottom of Groomer Body.
2. Plug Power Adaptor into electrical outlet. The indicator light illuminates when the Groomer is charging.
3. This Groomer is intended for cordless operation only.

What To Use

Thumb Wheel Setting	Length
1	3mm (0.12")
2	5mm (0.20")
3	7mm (0.28")
4	8mm (0.31")
5	12mm (0.47")

How To Use

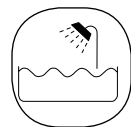

The groomer is a wet groomer, the hand-held part of which may be used in a bath or shower.

The Body Trimmer can be used in the shower or rinsed under water during cleaning. Therefore, to maintain performance of cutters, oil before each use and after rinsing.

TRIMMER GUARD ATTACHMENT

Remove Trimmer Guard Attachment to define hairline edges, holding trimmer at a right angle to skin and gently pressing. Edge and shape all body areas, as desired. To remove:

1. Be sure Groomer is in OFF position.
2. While holding Groomer in one hand, while holding Zoom Wheel with other hand, gently pull Trimmer Guard Attachment away from Groomer.
3. Replace Guard by repeating steps #1 and #2. (NOTE: Guard can only be placed on Groomer one way. If not fitting properly, simply remove and reverse).

ADJUSTABLE TRIMMER HEAD

The Grooming System is equipped with a 5-Position adjustable Trimmer Head to allow flexible Body Grooming. To use:

1. Be sure Groomer is in OFF position.
2. Use thumb wheel to set trimmer comb to desired length setting.
3. Slide On/Off Switch upward to power the Body Groomer.
4. Place flat top of trimmer comb gently against the skin.
5. When finished, turn power off by sliding On/Off Switch downward. Clean the Groomer and return it to the storage pouch.

FOIL SHAVER ATTACHMENT

First, remove Trimmer Comb Attachment by holding the Groomer in one hand with thumb firmly pressed against Thumb Wheel to prevent from turning. With opposite hand, gently pull Trimmer Comb Attachment off Trimmer. Remove cutting assembly by firmly pushing upward on blade with thumb. Use other hand to "catch" cutting assembly.

To add Foil Shaver Attachment, carefully align Shaver assembly with the Groomer Body. Slide Foil Shaver down toward Groomer until firmly securing into place.

To Operate:

1. Remove Foil Shaver protective cover.
2. Slide On/Off Switch upward to Power the Foil Shaver.
3. Hold shaving head to skin.
4. Stretch skin with free hand so hairs stand upright. Only apply light pressure on shaving head while shaving.
5. Shave in a direction opposite of hair growth.

Cleaning, Care & Maintenance

Always clean Grooming System attachments regularly to ensure maximum performance and a proper operating life. The Body Trimmer is washable so it can be used in the shower or rinsed under water during cleaning. Therefore, to maintain performance of cutters, oil before each use and after rinsing.

Cleaning Cautions

- Only the adjustable trimmer comb and cutter assembly may be removed from the trimmer for cleaning.
- Cleaning should be done with a soft brush, such as the brush supplied with the unit.
- Only use the light-grade oil supplied or a suitable alternative like sewing machine oil. These oils will not evaporate or slow down the blades.
- Do not use harsh or corrosive cleaners on the units or their cutters.
- Do not apply pressure or hard objects to cutters.
- Do not disassemble cutter assembly.
- There are no user serviceable parts.
- The handheld unit should be detached from the power supply cord before cleaning.

CLEANING TRIMMER ATTACHMENT WITH GROOMING BRUSH / WATER

- Thoroughly brush and blow out hair clippings from cutter system, attachment, and handle.
- Rinse the attachment under warm running water. Do NOT use extremely hot water as this might cause damage to components.

CLEANING FOIL SHAVER

- Do NOT oil foil shaver attachment as this is permanently lubricated.
- Press release buttons inward at sides of screen head.

- Remove head and shake out clippings. Blow off cutter assembly.
- Replace head, snapping in place to secure.

OILING BLADES & CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene nor solvent as these too will evaporate.

Troubleshooting

Q: WHAT IF THE CUTTERS DON'T MOVE WHEN TURNED ON?

A: The cutting unit may be dirty or clogged. Clean and lubricate the groomer as described previously.

Q: WHAT IF THE GROOMER DOESN'T WORK AT ALL WHEN TURNED ON?

A: The groomer might simply need charging. Follow instructions for charging as described previously. Should charging prove unsuccessful, contact customer service at 1-800-736-4648 for assistance.

Q: WHAT IF THE GROOMER FAILS TO HOLD A CHARGE?

A: Fully discharge the groomer by running until completely stopping. Next, follow recharging instructions described previously. If time between recharging cycles fails to increase, the battery might require replacement. Contact customer service at 1-800-736-4648 for assistance.

Battery Removal

NOTE: Always recycle or properly dispose of batteries according to Local and State requirements.

1. Unplug groomer from outlet to avoid risk of electrical shock.
2. Remove rear groomer cover by first prying the rubber panel from the product with a flat head screwdriver.
3. Next, pry the back panel from the product with a flat head screwdriver. This will expose the batteries.
4. With wire cutters, clip the wires leading to the batteries.



5. Remove the batteries from the product. Contact your local authorities for proper disposal.

CAUTION: THESE NICKEL-CADMIUM BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH STATE AND LOCAL REGULATIONS.

Do not burn or mutilate, as they may burst or release toxic materials. Do not short-circuit, as this may cause burns.

The EPA-certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates Spectrum Brands, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life when taken out of services in the United States or Canada. The RBRC® program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERYSM for information on Ni-Cd battery recycling and disposal bans/restriction in your area. Spectrum Brands, Inc.'s involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

120 VAC 60 Hz

Questions or comments: Call 800-736-4648 in U.S. or 800-268-0425 in Canada or visit www.remington-products.com

REMINGTON is a Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries.

©2008 SBI 03/08 Job# CS35969

Dist By: Spectrum Brands, Inc., Madison, WI 53711

MADE IN CHINA

T22-26464



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>