

REMINGTON®
TITANIUM
MICROSCREEN™ 700



*Use and
Care Guide*

MS-5100
(not shown)
MS-5200

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink while it is plugged in.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not use an extension cord or a voltage converter with this appliance.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as is described in this manual. Do not use attachments not recommended by manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not plug or unplug this appliance when your hands are wet.
- Do not wrap the cord around the appliance.
- Always attach the plug to the appliance, then to the outlet. To disconnect, turn all controls to OFF, then remove plug from outlet. Detach removable power cords from appliances for storage.
- Do not use this appliance with a damaged or broken screen or cutters, as injury may occur.

KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS




Contents

English1
 Spanish13
 French25

Product Features

Shaver Parts

   - (A) Screen & cutter assembly
- (B) Pop-up mini-foil
- (C) Mini-foil push tab (on back)
- (D) Beard-lifting fins
- (E) 3-position trimmer
- (F) Trimmer push tab
- (G) ON/OFF button
- (H) POWER RESERVE button (MS5200 only)
- (I) Head release button (one on each side)
- (J) Charging indicators (MS5200 only)
- (K) Head guard
- (L) Cleaning brush
- (M) Travel pouch

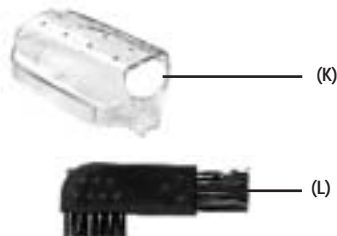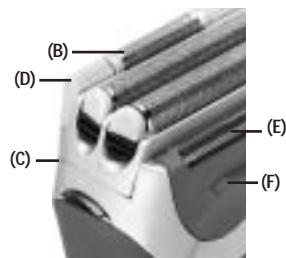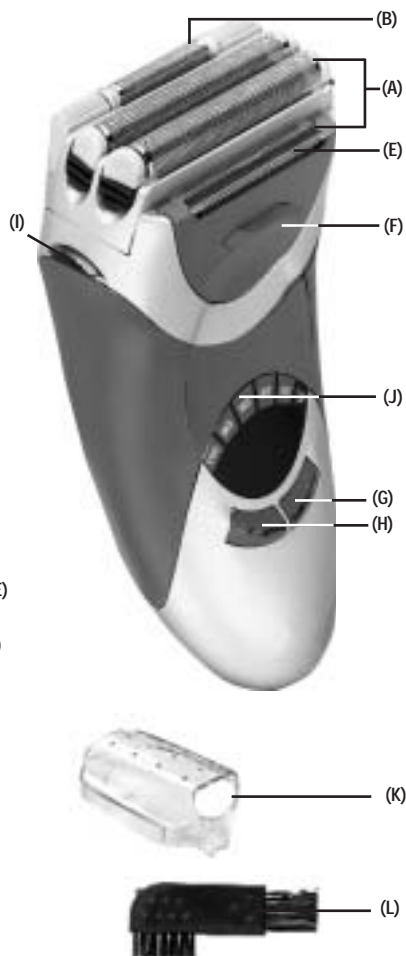

Titanium MicroScreen® 700


Congratulations on your purchase of a premium Remington® shaver. The MicroScreen® 700 has Revolutionary Titanium Shaving Technology.

Which model is yours?

	Power system	Washable	Run time	Power reserve	Complete battery gauge	Worldwide voltage	Pop up mini foil
MS-5100	Cordless	X	55 min				X
MS-5200	Cord/cordless	X	55 min	5 min	X	X	X

Power Reserve (MS-5200 only)

 MicroScreen® shavers will run 55 minutes on a single charge. If those 55 minutes end in the middle of a shave, you can push the Power Reserve button to get an extra 5 minutes of power. While using the Power Reserve, the plus sign on the Power Reserve button will glow green. The Power Reserve button will not activate the shaver if there is any charge left on the battery.



Complete Battery Gauge (MS-5200 only)

When the shaver is on, the battery gauge displays the amount of charge remaining, in 20% increments. When only 20% of the charge remains, the red recharge warning light illuminates. The indicator lights turn off when the shaver is off. You can find out how much charge is left on your shaver by pushing the Power Reserve button while the shaver is off.



Worldwide Voltage (MS-5200 only)

The MS-5200 features worldwide automatic dual voltage conversion, providing AC current between 100-240 volts AC, 50-60 Hz. Just plug it in to the local outlet (you may need an adapter plug) and use as usual. Your shaver will convert automatically to the local current requirements.



How to Use

Charging

Before using your shaver for the first time, put it on charge for 24 hours.

To Charge Your Shaver

The MS5100 and MS5200 can be recharged by plugging it into the cord directly.

- Use only the charging adapter supplied with the shaver.
- Make sure your shaver is turned off.
- Connect the cord to the shaver, then plug the charging adapter into the electrical outlet. A charging indicator light will come on.
- Your shaver cannot be overcharged, so you can leave it plugged in and charging between shaves.
- To preserve the life of the batteries, let them fully run out every six months, then recharge them for a full 24 hours.

- Cord/cordless rechargeable shavers (MS5200 only) can run directly off the cord if necessary. They will not recharge while you are shaving, so after shaving with the cord, turn the unit off and set it aside to charge. Cord/cordless shavers should not be used strictly as cord-operated shavers, as continued cord-only use will result in reduction of battery life.
- If your shaver's charge runs out in the middle of a shave, you can push the power reserve button to get an extra 5 minutes of power, on the MS5200.

NOTE: If your shaver battery is completely discharged or the shaver has not been used for a long time, the shaver may not start when operated using the cord. If this happens, charge the shaver for approximately five minutes before shaving.

Removing the Headguard

Before operating your shaver, remove the headguard, which protects the screen and cutter assembly. Simply push up from the front or the back until it pops off.



! Always keep the protective head guard on the shaver head and keep the trimmer in the OFF position when the shaver is not in use.

Operating the Trimmer

Your shaver is equipped with a 3-position trimmer. Use the trimmer push tab to extend or retract the trimmer.



1. Completely retracted (down), the trimmer is out of the way and off, for when you want to use the screens alone. Press the trimmer down with your thumb to get it into this position.
2. In the middle position, the trimmer works with the screens, cutting the longer, hard-to-shave hairs so the screens can get in extra close. Slide the trimmer into the position level with the foils.
3. Fully extended (up), the trimmer can be used to trim your sideburns and mustache. Slide the trimmer into the top position, above the foils.

Operating the Pop-up Mini-foil

Your shaver is equipped with a 2-position mini-foil. Use the mini-foil push tab to extend or retract the mini foil.

1. Completely retracted (down), the mini-foil works with the 2 large screens to provide a close and comfortable shave.
 2. Fully extended (up), the mini-foil can be used to provide a close shave for small or difficult-to-reach areas, for a detailed look.
- ! Do NOT retract the mini-foil by pressing down directly on the screen. This could permanently damage the screen.

Usage Tips

Adjusting to your new shaver

As with every shaver, your shave will improve over time. So allow about three weeks to develop an effective shaving style and for your beard to adjust to the new shaver. The adaptation period may take a little longer if your skin is sensitive, or if you alternate between shaving methods.

To help smooth the transition to your new shaver, Remington has applied a special lubricant to the shaver's screens and cutters. The lubricant looks like fine, white or gray powder, and disappears with use.

Before you begin

- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Make sure your face is clean and dry before starting.
- Always use a clean, dry shaver.



To shave

 
Push the ON/OFF button. Hold the shaver so all of the screens touch your face at the same time. This allows the shaver to work the way it was designed for the closest shave and minimum wear. Avoid holding the shaver at an angle so only one screen touches the skin at a time. This will distort the screen and could cause skin irritation.



Shave with short, circular strokes. Use your free hand to stretch your skin. This encourages your whiskers to stand out, making it easier for them to enter the cutting chamber.



Never press hard. Pressing only flattens your whiskers, making it harder for them to enter the cutting chamber. It will also wear out the cutting surface more quickly.



For an Even Better Shave...

Remington® Pre-Shave Powder Stick (SP-5) can help maximize your shaver's performance. Just rub the product over your beard and it absorbs moisture and facial oils, helping set up the hairs so they enter the cutting chamber more easily. It makes shaving quicker and more comfortable.

Maintenance

Replacing Cutters and Screens

To prevent inadvertent damage to the cutters and screens, do not attempt to remove them from the head assembly unless you are replacing them. Removal instructions are included with the cutter and screen replacement packages.

To replace a cutter assembly that is removed unintentionally:

1. Hold the cutter in the middle. The blades will not cut your fingers, so no special handling techniques are necessary.
2. Align the cutter so the little bar on the bottom meets the opening in the clip.
3. Press down on the center of the cutter until it snaps into place. Do not push down on the ends of the cutter, as you may bend the cutter, reducing its ability to cut cleanly.
4. Do not separate the cutter's blades from the plastic pieces they are attached to, as this may damage the assembly.



When is it time to replace your screens and cutters?

Because they are subject to daily use, the cutters and screens of your shaver will wear and eventually require replacement to maintain a close, comfortable shave. It is very important to replace your screens and cutters when necessary to ensure a close, comfortable shave without irritation.

Depending on your shaving technique and habits, the screens will usually last 6 months; the cutters, 12 months. If you are replacing the cutters, it's a good idea to replace the screens at the same time.

Here are some signs that your screens and cutters need replacing:

Irritation: As screens get worn, you may notice that your skin feels more sensitive after a shave, particularly when you apply aftershave.

Pulling: As cutters wear, your shave may not feel as close and you may feel your shaver is pulling at your whiskers.

Wear-through: You may notice that the cutters have worn through the screens.

The replacement part for this shaver is model SP-95 (screens) and SP-96 (screens and cutters).

U.S. residents:

To order shaver accessories call 800-736-4648, visit www.remington-products.com, or visit your local retailer.

Canadian residents:

To order shaver accessories, please call 800-268-0425 or visit www.remington-products.com

Disposal

Battery Removal

 
When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver without removing the batteries.

CAUTION: DO NOT PUT IN FIRE OR MUTILATE YOUR BATTERIES WHEN DISPOSING AS THEY MAY BURST OR RELEASE TOXIC MATERIALS. DO NOT SHORT CIRCUIT AS IT MAY CAUSE BURNS. DISPOSE PROPERLY IN ACCORDANCE WITH YOUR LOCAL AND STATE REQUIREMENTS.


! Make sure shaver is unplugged before you begin, to avoid a possible electric shock hazard.

Only follow these instructions when you are ready to dispose of your shaver, as your shaver will no longer be operable.


1. Press the two side buttons and pull off the shaver head assembly. Remove the cutter blades by pulling up.

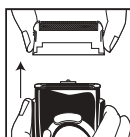

 2. Remove the 4 outer screws from inside the shaver head. Loosen the top assembly from the body.

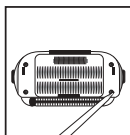

 
3. Remove the screw from the back of the shaver near the power port.

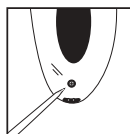

4. Remove the two side panels to allow removal of 2 more screws.



 5. Pry off the back cover of the shaver, starting at the gap below the power port.

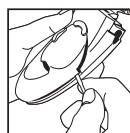

6. Cut or break the wires attached to the battery on the right.

7. Pry both of the batteries loose from the foam adhesive tape on the printed circuit board.

8. Cut or break the wires connecting the batteries to the printed circuit board.

Performance Guarantee

Full Two-Year Warranty

Rayovac Corporation warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Rayovac Corporation, Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648.

Warranty excludes:

- Screens and cutters

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

RAYOVAC CORPORATION SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES

RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Performance Guarantee

Rayovac Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Rayovac Corporation will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

100-240 VAC 50/60 Hz (MS-5200)
120 VAC 60 Hz (MS-5100)

Questions or comments:

Call 800-736-4648 in U.S. or
800-268-0425 in Canada.
Or visit www.remington-products.com

REMINGTON and MICROSCREEN are trademarks of Rayovac Corporation.

©2005 RAYOVAC CORPORATION
03/05 Job# CS27660
Rayovac Corporation
800-736-4648

T22-17031

MADE IN CHINA



RE
TU
MICF



REMINGTON®

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>