 


REMINGTON® MicroFlex™

Congratulations

You are now the owner of one of the finest shaving instruments available today...and thank you for letting Remington play a part in keeping you well groomed. We're proud of our products and the technology that keeps them performing dependably and efficiently. Your Remington® MicroFlex™ Shaver is designed to provide you with a closer, faster more comfortable shave for years to come.

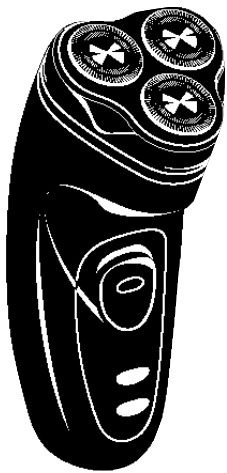

For best shaving performance, it is recommended that you use your new shaver daily for two to three weeks to allow time for your beard and skin to adjust.

**Customer Service
Number**
1-800-736-4648
call between 8:30 A.M.-
4:30 P.M.E.S.T.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical shaver, basic precautions should always be followed including the following. Read all instructions before using this shaver.

DANGER

To reduce the risk of electric shock:

- Do not place or store shaver where it can fall or be pulled into a tub or sink.
- Do not place in water or other liquid.
- Do not reach for a shaver that has fallen into water, unplug immediately.
- Except when charging, always unplug this shaver from the electrical outlet immediately after using.
- Unplug this shaver before cleaning.
- Do not use while bathing or in a shower.

WARNING

To reduce the risk of burns fire, electric shock, or injury to persons:

- A shaver should never be left unattended when plugged in, except when charging your rechargeable shaver.
- Close supervision is necessary when this shaver is used by, on, or near children or invalids.

- Use this shaver only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this shaver if it has a damaged cord or if it is not working properly, if it has been dropped or damaged, or has been dropped into water. Return the shaver to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this shaver with a damaged or broken cutter or head, as facial injury may occur.
- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.
- Do not plug or unplug shaver when hands are wet.
- Always store your shaver and cord in a moisture-free area. Make sure your cord is disconnected from the shaver.
- "Household Use Only".

SAVE THESE INSTRUCTIONS

Getting Used To Your Shaver

As with every shaver, your shaver will improve over time. So allow about three weeks to develop an effective shaving style and for your skin to adjust to the new shaver. The adaptation period may take a little longer if your skin is sensitive, if you are switching from a different way of shaving, or if you alternate between shaving methods.



To Shave

Push the on/off button locking bar inward and push upward on the on/off button to actuate the shaver for shaving. (Locking bar on rechargeable models only.)



To Trim

To use the Easy-View™ pop-up trimmer, simply push the trimmer button up. The trimmer will pop-up for use. Hold the shaver as shown in the illustration. To conserve battery energy (on recharge-

able shavers only), it is recommended to use the trimmer only when needed for trimming. When through using, push the trimmer button downward to lock into the off position.



Trim Sideburns

Simply touch the comb-edge of the trimmer to the desired line for neat, clean sideburns.



Trim mustache

Hold shaver at desired trim line for a quick easy, professional trim. The trimmer can also be used to trim the upper edge of your moustache.

Shaving Tips and Instructions

For a smoother, more comfortable, moisture free shave, use a Remington® Pre-Shave Powder Stick. For those who prefer a liquid, use the non-greasy Remington® Pre Shave Lotion, specially formulated with a unique suspended powder and aloe for extra conditioning and protection.

Tips For Use

- Clean your shaver frequently.
- Always keep the protective headguard on the cutter head and keep the trimmer in the "off" position when the shaver is not in use.
- Before using, make sure that the cutter head assembly is in locked position.
- Wait at least 15 minutes after getting up before shaving.
- Thoroughly cleanse and dry skin prior to shaving.
- Your R-850 cord/cordless shaver should not be used strictly as a cord-operated shaver, as continued cord only use will result in reduction of battery life.

Operation Instructions

 
The MicroFlex™ shaver needs no adjustments to the heads or cutters before you shave. The floating heads will automatically adjust to the contours of your face. It is not necessary to apply pressure while shaving...let the shaver glide lightly on your skin. This gentle touch makes shaving easier and helps avoid possible skin irritation.

Cleaning & Maintenance



Cleaning Your Shaver

TO ASSURE SMOOTH, EFFICIENT PERFORMANCE, IT IS IMPORTANT TO CLEAN YOUR SHAVER. Cleaning your Remington® MicroFlex™ Shaver is easy.

Simply pull the head assembly out from the shaver by placing fingers on rib areas of head assembly. Using the brush supplied, clean the internal part of the head assembly and the hair pocket area, where 3 shaver spindles are located. "At Least Once A Week".

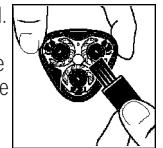

For more complete cleaning, remove the cutter retainer assembly from the head assembly by unscrewing the center screw knob and clean with brush. After cleaning put the cutters back in position. Place the cutter retainer back into position. **Important!** Make sure to align the two locating holes in the Cutter Retainer assembly with the pins in the Head Frame Assembly. (See below). Then tighten centerscrew knob to lock cutters into place. Put head assembly onto the shaver simply by pushing in onto the shaver. Replace the plastic headguard after cleaning. When removing the headguard or placing it back onto the shaver, do not apply pressure to floating cutter surface as you may damage them. **Never clean the shaver or replace the cutters while it is plugged into electrical outlet.**

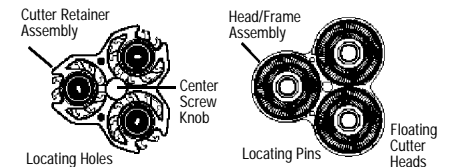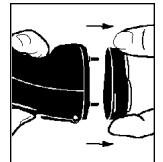  

When is it time to replace your heads and cutters?

 
It is very important to replace your heads and cutters when necessary to insure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed.

Irritation:

As the heads get excessively worn there may be some skin irritation. This would be especially noticed when applying After Shave lotion.

When the cutters wear you may feel a sense of "pulling" and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.



Shaver Parts

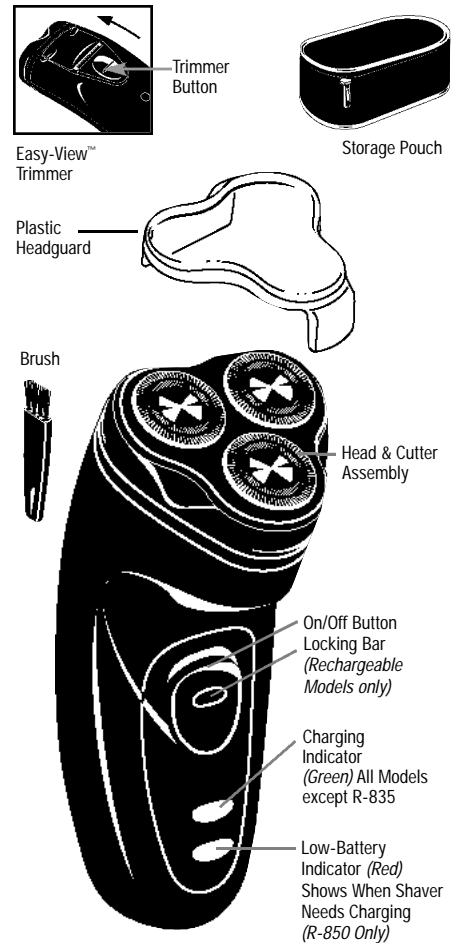

Battery Removal (Corded/Cordless and Cordless Rechargeable Models Only)



  When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your local and state requirements.

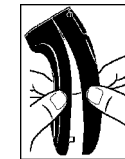

The following procedures should be followed for battery removal:

- Make sure your shaver is unplugged from any outlets, so you don't risk an electrical shock.
 - Remove the Head Assembly by gently lifting the assembly away from the shaver.
 - Using a small Phillips head screwdriver, remove the screws from the upper and lower back of the shaver.
 - Pull or gently pry the the shaver halves apart, exposing the battery.
 - Hold each battery in place and very carefully slide the clips from the terminals on each battery.
 - Lift or pry the battery out of the shaver.
- CAUTION: THESE NICKEL-CADMIUM BATTERIES MUST BE RECYCLED OR DISPOSED IN ACCORDANCE WITH STATE AND LOCAL REGULATIONS.** Do not burn or mutilate, as they may burst or release toxic materials. Do no short-circuit, as it may cause burns.

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates Remington is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC® program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERY™ for information on Ni-Cd battery recycling and disposal bans/restriction in your area. Remington involvement in this program is part of our commitment to preserving our environment and conserving our natural resources."

MODEL R-850 Corded/Cordless Rechargeable Operation contains a green charging indicator and red low-battery indicator to show when shaver needs recharging. Worldwide voltage 100-240 volts, A.C., 50-60 Hz

MODEL R-845/R-842 Cordless Rechargeable Operation with charging indicator. Worldwide voltage 100-240 volts, A.C., 50-60 Hz

MODEL R-835 Corded operation, single voltage 120 volts, A.C., 60 Hz

All worldwide voltage models have automatic voltage conversion Shaver will automatically adjust to any worldwide A.C. voltage between 100 and 240 volts, A.C., 50-60 Hz. Do not connect to direct current "D.C. Voltage".

To Charge (Models R-842, R-845, R-850)

MODEL R-850 has a red low-battery indicator to show when shaver needs recharging. This also indicates approximately 5 to 6 minutes of shaving time left when indicator first comes on. Prior to using your shaver for the first time, put it on charge for 24 hours. To charge your shaver:

- Slide the On/Off Button to the "Off" position.
- Connect the cord to the shaver and then to the electric outlet. The Charging Indicator light will glow green, indicating your shaver is charging.
- Your shaver cannot be overcharged, so you can leave it plugged in and charging between shaves.
- Use only the cord supplied with shaver. The R-842 and R-845 are designed for cordless operation only. Plugging in the cord will not provide the power to shave. The R-850, on the other hand, comes with a special feature that allows you to shave while your shaver is plugged in. Just follow the steps above to plug in the cord. Turn on the shaver by pressing on the Locking Bar and sliding the On/Off Button upward. Your shaver will not recharge while you are shaving, so after shaving, leave it plugged in so it can be recharged.

Corded Operation

Connect cord to shaver and then to electrical outlet. Make sure shaver is turned off before plugging cord into outlet.

Remington® Money-Back Offer

If within 30 days after you have purchased your Remington® MicroFlex™ Shaver, you are not satisfied with your shaver and would like a refund, just return your shaver, together with the sales receipt, to the retailer from whom the shaver was purchased. Remington will reimburse all retailers who accept shavers within 30 days from date of purchase. If you have any questions regarding this money-back guarantee, please call 1-800-736-4648.

Full One-Year Warranty

Remington warrants that your product, except as noted below, is, on date of purchase, free from defect in material and workmanship. Remington will correct any such defect without charge if you return the complete product either in person or by mail, postage paid, to a Remington Company-owned Service Center or Authorized Service Dealer within one year after date of purchase.

Do not return the product to the retailer from whom the product was purchased.

This warranty does not cover damage by accident, misuse, abuse or by affixing an unauthorized accessory or alteration to the product, or by connection of the product to any but the specific current and voltage indicated in an accompanying instruction booklet, or by any other conditions beyond our control. REMINGTON SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES.

ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO ONE YEAR FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. Some states do not allow the exclusion limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so that the above limitations and exclusions may not apply to you.

No responsibility obligation, or liability is assumed for the installation or maintenance of this product.

Warranty service must be performed by a Remington Company-owned Service Center or Authorized Service Dealer and damage or loss of any kind resulting from servicing by any other person is not covered under warranty. Enclosed is a listing of Company-owned Service Centers. Authorized Service Center Dealers may be found in the yellow pages of your directory. If you wish, you may mail the product, postpaid, to Remington Products Company, L.L.C., 60 Main Street, Bridgeport, CT 06604 Attention: Service Department.

U.S. Warranty Service

In the United States, service is provided by our Company-owned Service Centers and over 300 Authorized Service Dealers. The addresses of our Company-owned Service Centers are enclosed. For the address of your nearest Authorized Service Dealer, please consult the Yellow Pages under "Shaver - Electric - Repair." If you wish, you may mail the product, postpaid, to Remington Products Company, L.L.C., 60 Main Street, Bridgeport, CT 06604, Attention: Service Department.

International Warranty Service

Service under the Remington warranty can be obtained outside the United States by Remington-Authorized Distributors and Service Dealers. Please consult your local telephone directory for the nearest location.

For questions or comments, please write:

Remington Products Company, L.L.C.
P.O. Box 1536,
Horsham, PA 19044-6536
Attention: Consumer Affairs



Questions or Comments: Please call 1-800-736-4648.



Visit us at <http://www.remington-products.com>

REMINGTON
PRODUCTS COMPANY, L.L.C.
60 Main Street Bridgeport, CT 06604

Remington, Easy-View,
Fast-Track and MicroFlex are
trademarks of Remington
Corporation, L.L.C.
© 1998 R.P.C., L.L.C.
7/98
Part No. 12642

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>