

 
**REMINGTON**

**MicroFlex<sup>®</sup>**  
TCT™

**How to get a great shave  
from your Remington<sup>®</sup>  
MicroFlex<sup>®</sup> TCT™**

Thank you for buying this premium shaver  
from Remington<sup>®</sup>

Inside you'll find tips on using and caring for  
your shaver to get the best shave possible.

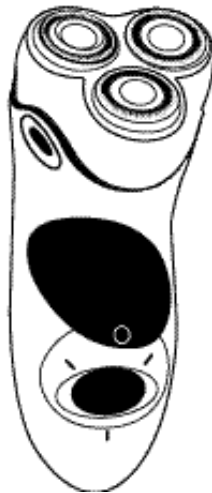

Washable

Model Numbers

R-9100  
R-9200  
R-9250  
R-9300  
R-9350  
R-TCT

## IMPORTANT SAFETY INSTRUCTIONS

When using an electric shaver, basic precautions should always be observed, including the following. Read all instructions before using this shaver.

### DANGER

#### To reduce the risk of electric shock:

- Do not reach for a shaver that has fallen into water. Unplug immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store shaver where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this shaver from the electrical outlet immediately after using.
- Unplug this shaver before cleaning.

### WARNING

#### To reduce the risk of burns, fire, electric shock, or injury to persons:

- A shaver should never be left unattended when plugged in, except when charging your rechargeable shaver.
- Close supervision is necessary when this shaver is used by, on, or near children or invalids.

- Use this shaver only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this shaver if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the shaver to a service center for examination and repair.
- Never drop or insert any object into any opening on the shaver.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this shaver with a damaged or broken head or cutter, as facial injury may occur.
- Always attach plug to shaver, then to outlet. To disconnect, turn all controls to "Off", then remove plug from outlet, then detach power cord from the shaver for storage.
- Always store your shaver and cord in a moisture-free area. Make sure your cord is disconnected from the shaver.
- Do not plug or unplug shaver when hands are wet.
- For household use only.

**SAVE THESE  
INSTRUCTIONS**

## Getting a Close, Comfortable Shave


Congratulations on your purchase of a premium Remington® MicroFlex® TCT™ Shaver. Your new Remington® MicroFlex® TCT™ is the only Rotary Shaver with Total Closeness Technology™ (TCT™). The MicroFlex® TCT™ has more blades, RPM's and flexing head action\* than any rotary, to shave your entire face including the tough spots like your neck and around your chin.  
*\* More flexing head action as measured by vertical movement at the center of head.*

As with every shaver, your shave will improve over time. So allow about three weeks to develop an effective shaving style and for your beard to adjust to the new shaver. The adaptation period may take a little longer if your skin is sensitive, or if you alternate between shaving methods.


## The Best Technique

It's simple to get a great shave from your new shaver. Here are a few tips for getting the closest shave possible:

### Always use a clean, dry shaver.

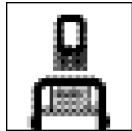

**Make sure that the cutter head assembly is in the locked position.**

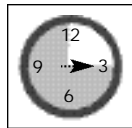

**Wait at least 15 minutes after getting up before shaving, to ensure the face is free of puffiness that may be present from sleeping.**



**Make sure your face is clean and dry before starting.**

## To Shave



**Push the on/off button to activate the shaver for shaving.**



**The MicroFlex® TCT™ needs no adjustments to the heads or cutters before you shave. The floating heads will automatically adjust to the contours of your face. It is not necessary to apply pressure while shaving...let the shaver glide lightly on your skin. This gentle touch makes shaving easier and helps avoid possible skin irritation.**



**Use short, circular strokes. Use your free hand to stretch your skin. This encourages your whiskers to stand out, making it easier for them to enter the cutting chamber.**



## To Trim

To use the Easy-View® pop-up trimmer, simply push the trimmer button up. The trimmer will pop-up for use. Hold the shaver as shown in the illustration. To conserve battery energy (on rechargeable shavers only), it is recommended to use the trimmer only when needed for trimming. When through using, push the trimmer button downward to lock into the off position.



## Trim Sideburns

Simply touch the comb-edge of the trimmer to the desired line for neat, clean sideburns.



## Trim Mustache

Hold shaver at desired trim line for a quick, easy, professional trim. The trimmer can also be used to trim the upper edge of your mustache.

•Always keep the protective headguard on the cutter head and keep the trimmer in the "off" position when the shaver is not in use. The headguard must be put on with the rear tab to the back of the shaver.

## For a Better Shave...


To help maximize your shaver's performance, consider using the Remington® Pre-Shave Powder Stick (SP-5) or the Pre-Shave Lotion with Aloe (SP-6). Just rub over your beard. Both absorb moisture and facial oils, helping set up the hairs so they enter the cutting chamber more easily. They make shaving quicker and more comfortable.

## Cleaning your shaver:

TO ASSURE OPTIMAL PERFORMANCE, IT IS RECOMMENDED THAT YOU CLEAN YOUR SHAVER AFTER EACH USE. The cutting system of this shaver was designed to be cleaned by rinsing under warm running water or by brushing.


Cleaning your Remington® MicroFlex®TCT™ Shaver is easy. (NOTE: With the R-9300/-9350/R-TCT model, the brush icon will blink to remind you to clean your shaver.)

■ Open the hairpocket by squeezing on both buttons and rotating away from the body of the shaver. You may blow out the stubble thoroughly, or rinse the shaver head in water. Rinse both sides of the head assembly.

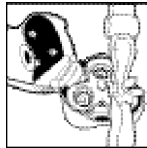


## ■ At Least Once a Week:

For more complete cleaning, remove the cutter retainer assembly from the hairpocket by turning the center knob approximately 1/4 turn counter clockwise. Hold cutter retainer assembly as shown, and remove head by turning approximately 1/8 turn in the direction shown. Brush clean both the head and the cutter. Reassemble head to cutter retainer assembly by aligning and turning head 1/8 turn in the opposite direction. Repeat this process for each of the 3 heads. Clean each head and cutter set one at a time to prevent mixing cutter components. (These should be kept as sets). After cleaning, place cutter retainer assembly in the hairpocket, and secure by turning center knob approximately 1/4 turn clockwise.

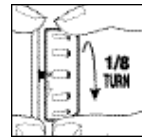

**Caution:** Never put the shaver completely under water. Do not use any aggressive cleansing agent as this may destroy the shaver coatings.

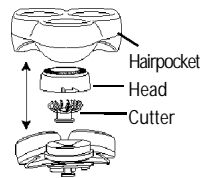

■ To clean and lubricate your shaver's cutters and head assembly, apply Remington® Shaver Saver® (SP-4) Lubricant. The lubricant helps remove hair clippings while reducing wear. A quick spray after each shave keeps your shaver operating at peak performance.

**Caution:** Do not remove or replace the head assembly while shaver is running or plugged into an electrical outlet as it may cause damage to the unit's cutters.

■ Worn or damaged parts should be replaced with Remington® replacement parts only.

## When is it time to replace our heads and cutters?

It is very important to replace your heads and cutters when necessary to insure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed. (NOTE: R-9300/-9350/R-TCT cutter icon, R-9200 & R-9250- the yellow LED- will blink when it is time to replace the cutters.)

## Irritation:

As the heads get excessively worn there may be some skin irritation. This would be especially noticed when applying After Shave lotion.

When the cutters wear you may feel a sense of "pulling" and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

## Charging

Prior to using your shaver for the first time, put it on charge for 24 hours.

### To charge your shaver:

- Make sure your shaver is turned off.
- Connect the cord to the shaver and then the charging adapter to the electric outlet. A charging indicator light will come on.
- Your shaver cannot be overcharged, so you can leave it plugged in and charging between shaves.
- Use only the charging adapter supplied with the shaver.
- The R-9100/-9200/-9300/-9250/-9350/R-TCT come with a special feature that allows you to run the shaver directly off the cord. Your shaver will not recharge while you are shaving, so after shaving directly from the cord, turn the unit off and set aside to charge.
- The R-9100/-9200/-9300/-9250/-9350/R-TCT will provide up to two weeks worth of shaving after a one hour charge or a single shave after five minutes of charging.


### Model R-9100

has a green indicator light to show whether the shaver is either fully charged or charging. A red low-battery indicator illuminates to show when the shaver needs recharging. This also indicates approximately 5 minutes of shaving time left when indicator first comes on.

### Model R-9200/-9250

features a green lighted fuel gauge that displays the amount of charge remaining in 20% increments. When only 20% of the charge remains, the recharge red warning light illuminates.

### Model R-9300/-9350/R-TCT

has an LCD display numeric indicator to show shaver charge status in minutes remaining. When the Plug icon  comes on, it indicates approximately 5 to 6 minutes of shaving time left.

## Troubleshooting:

- If your R-9100/-9200/-9300/-9250/-9350/R-TCT shaver battery is completely discharged or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this condition occurs, charge the shaver for approximately five minutes before shaving.
- Your R-9100/-9200/-9300/-9250/-9350/R-TCT cord/cordless shaver should not be used strictly as a cord-operated shaver, as continued cord only use will result in reduction of battery life.
- In order to preserve the life of the batteries, they should be fully discharged every six months and then fully charged for 24 hours.

## World Wide Voltage (all MicroFlex® TCT™ models)

You can take your shaver with you when you travel to just about anywhere in the world. Your MicroFlex® TCT™ shaver features worldwide automatic dual voltage conversion providing AC current between 100-240 volts AC, 50-60 Hz. Just plug it in to the local outlet (you may need an adapter plug) and use as usual. Your shaver will convert automatically to the local current requirements.

## Battery Removal:

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements.

## THE FOLLOWING PROCEDURE SHOULD BE FOLLOWED FOR BATTERY REMOVAL:

- To avoid a possible electric shock hazard, unplug cord from electric outlet and shaver.
- Open the head assembly by pressing the head release buttons and lifting the head assembly. Pull the entire head assembly off of the shaver assembly.
- Push the trimmer button up to open the trimmer.



- Remove the trimmer assembly by squeezing the sides as shown in the picture.



- Using a small Phillips head screwdriver, remove the 3 screws from the back of the shaver.

- Pull or gently pry the shaver halves apart, exposing the battery.



- Pry the lower battery clip off.

- Lift or pry the batteries out of the shaver.


- Cut the wires on both ends of each battery and remove them from the shaver.



CAUTION: DO NOT PUT IN FIRE OR MUTILATE YOUR BATTERIES WHEN DISPOSING AS THEY MAY BURST OR RELEASE TOXIC MATERIALS. DO NOT SHORT CIRCUIT AS IT MAY CAUSE BURNS. DISPOSE PROPERLY IN ACCORDANCE WITH YOUR LOCAL AND STATE REQUIREMENTS.

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates Remington Products Company, L.L.C. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC® program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERY™ for information on Ni-Cd battery recycling and disposal bans/restriction in your area. Remington Products Company, L.L.C.'s involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

# Shaver Parts

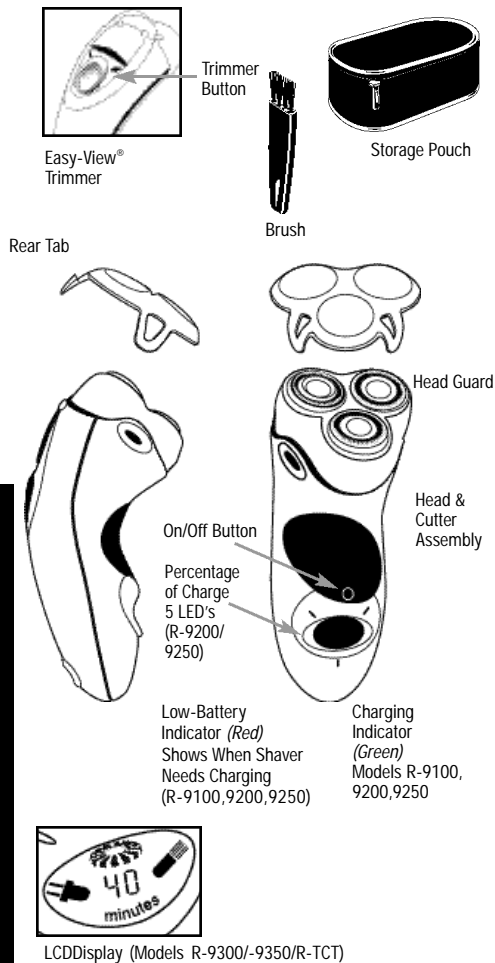

## Remington® MicroFlex® TCT™ Models

Which model is yours?

**R-9100**  
(2 LEDs)

Cord and cordless operation, rechargeable with charging and low battery indicator lights, and 1-hour quick charge feature. World wide voltage: 100-240 volts, AC 50-60 Hz.

**R-9200 & R-9250**  
(7 LEDs)

Cord and cordless operation, rechargeable with percentage of charge and cutter replacement, low battery (7 LED's) indicator lights and 1-hour quick charge feature. World wide voltage: 100-240 volts, AC 50-60 Hz.

**R-9300/ R-9350/ R-TCT**  
(LCD Display)

Cord and cordless operation, rechargeable 1-hour quick charge feature. Smart Shaver LCD with shaving time remaining indication, low battery, cleaning and cutter replacement cons. World wide voltage: 100-240 volts, AC 50-60 Hz.

# Performance Guarantee

## Remington® Money-Back Offer

If within 30 days after you have purchased your Remington® MicroFlex® TCT™ Shaver, you are not satisfied with your shaver and would like a refund, just return your shaver, together with the sales receipt, to the retailer from whom the shaver was purchased. Remington will reimburse all retailers who accept shavers within 30 days from date of purchase. If you have any questions regarding this money-back guarantee, please call 1-800-736-4648 in the U.S. and 905-470-9400 in Canada.

## Full Two-Year Warranty

Remington warrants that your product, except as noted below, is, on date of purchase, free from defect in material and workmanship. Remington will correct any such defect without charge if you return the complete product either in person or by mail, postage paid, to a Remington Company-owned Service Center or Authorized Service Dealer within two years after date of purchase.

Do not return the product to the retailer from whom the product was purchased.

This warranty does not cover damage by accident, misuse, abuse or by affixing an unauthorized accessory or alteration to the product, or by connection of the product to any but the specific current and voltage indicated in an accompanying instruction booklet, or by any other conditions beyond our control. REMINGTON SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES. IN ADDITION, THIS WARRANTY DOES NOT COVER THE FLEXIBLE HEAD AND CUTTER ASSEMBLY ON OUR ROTARY TYPE SHAVERS.

ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. Some states do not allow the exclusion limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so that the above limitations and exclusions may not apply to you.

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

Warranty service must be performed by a Remington Company-owned Service Center or Authorized Service Dealer and damage or loss of any kind resulting from servicing by any other person is not covered under warranty. Enclosed is a listing of Company-owned Service Centers. Authorized Service Center Dealers may be found in the yellow pages of your directory. If you wish, you may mail the product, postpaid, to Remington Products Company, L.L.C., 60 Main Street, Bridgeport, CT 06604 Attention: Service Department.

**U.S. Warranty Service**

In the United States, service is provided by our Company-owned Service Centers and over 300 Authorized Service Dealers. The addresses of our Company-owned Service Centers are enclosed. For the address of your nearest Authorized Service Dealer, please consult the Yellow Pages under "Shaver - Electric - Repair." If you wish, you may mail the product, postpaid, to Remington Products Company, L.L.C., 60 Main Street, Bridgeport, CT 06604, Attention: Service Department.

**International Warranty Service**

Service under the Remington warranty can be obtained outside the United States by Remington-Authorized Distributors and Service Dealers. Please consult your local telephone directory for the nearest location.

For questions or comments, please write:  
Remington Products Company, L.L.C.  
50 Commerce Drive  
Trumbull, CT 06611-5403  
Attention: Consumer Affairs



 **Questions or Comments: Please call**  
**1-800-736-4648 in the U.S. or 905-470-9400 in Canada.**  
Visit us at <http://www.remington-products.com>

Remington, MicroFlex, TCT, Total Closeness Technology, Easy-View and Shaver Saver are trademarks of Remington Corporation, L.L.C.  
© 2001 R.P.C., L.L.C. Job #501-079 7/01 Part No. 12642  
U.S. Patents: 5,390,416; 5,408,749 and Patents Pending  
Canada Patents: 1,748, 2,091,039 and Patents Pending:



Remington Products Company, L.L.C.  
60 Main Street  
Bridgeport, CT 06604

Remington Products (Canada) Inc.  
61 Amber Street  
Markham, Ontario L3R 3J7

**MADE IN CHINA.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>