

REMINGTON®

REMINGTON
SOLUTIONS

HEALTHY STYLES, LESS DAMAGE

Use and Care Guide



Model TI-2000

Please Read Prior to Use

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER. DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off.

To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

2

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Spectrum Brands, Inc.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. **Do not wrap the cord around the appliance.**
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Do not use an extension cord.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Household use only.
- Never block the air openings of the appliance or place it on a soft surface, such as bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
- Do not place appliance on any surface while it is operating.
- Do not use in countries with 220/240 volt electrical systems –use only with 110/120 volt electrical systems.
- Do not operate with a voltage converter.
- Connect this appliance to a properly grounded outlet only.
- Do not use an extension cord with this appliance.

 
SAVE THESE INSTRUCTIONS

3

Product Features



- Ceramic heat
- Ionic conditioning
- Titanium style finish
- Lightweight
- Low noise
- 2 heat/speed settings
- Cool shot
- Fast air concentrator
- 1875 watts
- 6 foot cord with hang loop



Ionic Conditioning

Negative ions prevent static and frizz, giving hair a more healthy-looking shine.



Ceramic Heat

Ceramic emits far-infrared, radiant heat to help dry water molecules inside the hair strand. This fast and efficient process helps prevent heat damage to the outer cuticle for less frizz and shine.

4

How to Use

BASIC DRYING TECHNIQUES

1. Gently towel dry hair to remove excess water. Avoid rubbing hair with towel – this creates split ends and frizziness. Detangle hair with a wide-toothed comb.
2. Set dryer to high heat and speed. Remove some of the additional moisture from your hair by briskly blow drying it all over, using your fingers to "comb" through hair.
3. When hair is almost dry, lower the heat and speed setting and begin to style.
4. Divide hair into manageable sections. Begin at the nape of your neck and brush hair, following the movement of the brush with the dryer. Continue working your way up your scalp, then to the sides and the front, drying small sections at a time.
5. Once your desired style is achieved, push the Cool Shot button to set the style with a cool flow of air.

FOR STRAIGHT, SMOOTH HAIR

With the dryer turned off, attach the concentrator to the end of the dryer. Use a large, round brush or paddle brush to brush hair from underneath. Pull hair down until the hair is fully extended and taut. Run the dryer slowly down the length of the hair several times until dry. Repeat with all sections of hair until it is completely dried. Lock in the style with the Cool Shot button.

FOR CURLY HAIR

Use dryer on a low heat and speed setting and move it quickly about your head. As you dry your hair, scrunch it with your favorite styling product or twirl strands of hair around your fingers to add definition. When finished drying, lock in the style with the Cool Shot button.

FAST AIR CONCENTRATOR

The fast air concentrator is ideal for straightening hair and precision styling. To attach, turn the dryer off and simply snap the concentrator onto the dryer nozzle.

HAIR CARE TIPS

- Keep the dryer about 8 inches away from your head to avoid burning scalp or damaging hair.
- Always keep the dryer pointed down the hair shaft to smooth the cuticle and create a silky, shiny style.
- To help prevent heat damage and add shine, spritz damp hair with a heat protection spray before blow drying.
- To create a style with lots of body, apply volumizing mousse to towel-dried hair. Distribute it evenly from roots to ends, then blow dry as usual. Hair will be soft, shiny and full of volume.
- For a super smooth, salon-like blow dry, finish by running a straightening iron over dried hair.
- For a quick touch-up between shampoos, mist hair to dampen it, then style with dryer.

5

Cleaning and Maintenance

Maintenance Instructions

The dryer needs minimum maintenance to ensure the best performance and long life.

- Keep all intake openings clear of dust accumulation. See "Cleaning Instructions" below. No other maintenance or lubrication is required.
- If the cord becomes twisted due to use, periodically straighten it. Store appliance and cord where they will not be damaged. Do not wrap cord around dryer.
- Do not attempt to repair the appliance yourself.

Cleaning Instructions

The air filter should be cleaned regularly, since a dirty or clogged filter will impair the efficiency of the dryer.

1. To clean air filter, make sure dryer is turned off and unplugged.
2. Use a soft bristle brush to gently remove any particles that are lodged in filter.
3. If the unit is dirty, wipe it with a damp cloth.

6

Storage

When not in use, unplug the unit. Allow it to cool, and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance, as this will cause the cord to wear prematurely and break. Handle cord carefully, and avoid jerking, twisting, or straining it, especially at plug connections.

Warranty

Full Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS

PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

120VAC 60Hz

Questions or comments:

Call 800-736-4648 in U.S.

Or visit www.remington-products.com

REMINGTON is a trademark of ROVCAL, INC.

©2005 ROVCAL, INC.
11/05 CS#29753

T22-20645

Dist. by: Spectrum Brands, Inc.,
Madison, WI 53711

MADE IN CHINA



7



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>