

REMINGTON®

protect & shine™

triple protection straightener

Use and Care Guide



1

Even heating

Black ceramic

2

Less frizz

Ionic conditioning

3

Less hair breakage

Teflon® coating



S-1003

S-1006

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off.

To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. **Do not wrap the cord around the appliance.**
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician.

Do not attempt to defeat this safety feature.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.



KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Product Features

Thank you for purchasing the Remington® Protect & Shine™ triple protection straightener. This unique flat iron combines optimum styling features with cutting-edge protection. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.

Key Features

Triple Protection:

1 Even heating

Black ceramic

2 Less frizz

Ionic conditioning

3 Less hair breakage

Teflon® coating


Display:

The Liquid Crystal Display (LCD) indicates the heat setting with a series of bars.

Automatic shutoff:

This styler is equipped with automatic shutoff. This safety feature turns the unit off after 60 minutes, in case you accidentally leave it on after styling your hair. Before turning itself off the LCD will flash for 10 seconds, giving you the chance to stop the shutoff process. While the LCD is flashing, simply press the +/- button to use the styler for another 45 minutes. If no button is pressed, the unit will turn itself off when the LCD stops blinking.

- (A) Teflon® plus black ceramic coating
- (B) Ionic conditioning
- (C) Ready light
- (D) Graphic heat setting display
- (E) +/- Temperature controls
- (F) ON/OFF button
- (G) Swivel cord
- (H) Closing lock

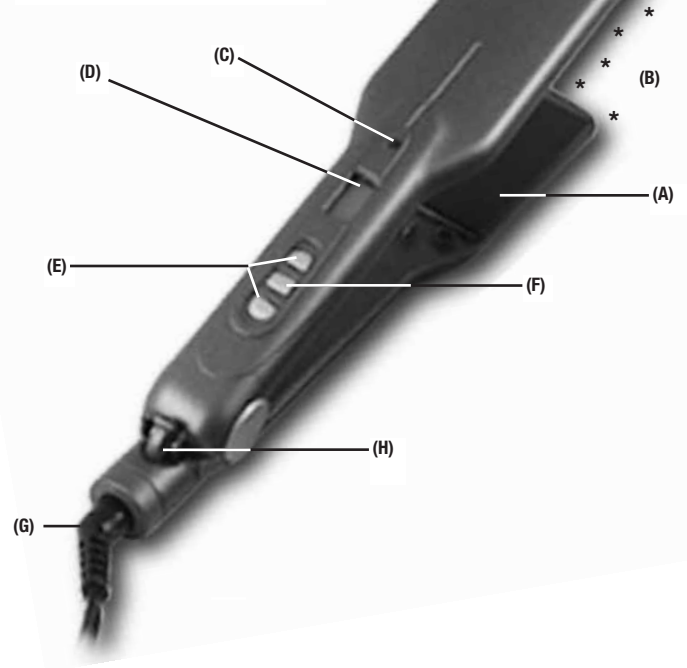

How to Use

Heat Settings

Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct temperature setting for your hair type.



Setting	Hair Type
A. 1-2 FINE	Very fine, fragile, damaged hair
B. 3-4 NORM	Normal, easy to straighten hair
C. 5-6 THICK	Thick, difficult to straighten hair

Closing Lock

This professional flat iron has a closing lock to make the unit easier to store. To lock the iron, simply squeeze the plates together and flip the switch down to the locked position. To unlock, flip the switch up in to the unlocked position. NOTE: Do not heat the unit in the locked position.

Straightening Your Hair

1. Hair should be dry and free of tangles before using the straightening iron.
2. Plug the straightener into an electrical outlet. Press and hold the ON/OFF button until the unit turns on and the LCD lights up.
3. Adjust the temperature using the +/- buttons. The ready light will flash while the unit heats up, then glow steadily when it has reached the selected temperature.
4. Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with underneath layers first.
5. Test the styler on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

NOTE:

- If you find that you need a higher setting while straightening your hair, simply adjust the temperature by pressing the "+" button. The unit will beep when it reaches the new temperature.

Usage Tips

- While straightening your hair, if you find that you need a lower setting, adjust the temperature by pressing the "-" button. Because the unit is already hot, it may take a few minutes to cool off. It will beep when it cools to the lower temperature.
6. Take a small section of hair and pull hair down and away from your scalp, and hold it taut.
7. Starting at the roots, clamp hair firmly between the plates and run the styler down the entire hair strand, from root to tip, in one smooth stroke. Do not hold it in one area for a long period of time or damage to hair may occur.
8. Repeat with all sections of your hair, working with the underneath layers first, then the top and sides.
9. When you are finished styling, press and hold the ON/OFF button to turn the unit off, unplug it, and allow it to cool before storing.

Maintenance

Cleaning

Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required.

Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

Performance Guarantee

Full Two-Year Warranty

Rayovac Corporation warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Rayovac Corporation, Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

RAYOVAC CORPORATION SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Rayovac® Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Rayovac Corporation will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

120 VAC 60 Hz

Questions or comments:

Call 800-736-4648 in U.S.
Or visit www.remington-products.com

REMINGTON and PROTECT&SHINE are trademarks of Rayovac Corporation. TEFLON® is a registered trademark of E.I. du Pont de Nemours and Company and is used under license by Rayovac Corporation.

©2005 RAYOVAC CORPORATION
01/05 Job# CS27430
Rayovac Corporation
800-736-4648

T2207808



MADE IN CHINA

REMINGTON®

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>