

REMINGTON

wet 2
next generation ceramic straightener
dries as it straightens
straightTM

*Use and
Care Guide*



3X
PROTECTION

The ultimate defense
against damage

S-8000i

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

2

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it is plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Keep the cord away from heated surfaces.
- Do not wrap the cord around the appliance.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).

- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Never use while sleeping.
- The plates of this appliance are hot when in use. Do not let eyes and bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.



KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Contents

English	1
French.....	11

3

Product Features

Thank you for purchasing the Remington® wet2straight™ straightener. This unique styler combines optimum styling features with cutting-edge protection. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.

Key Features

Unique steam vent and channel design: Unique steam vents and channels allow this styler to be safely used on wet or dry hair. The channels extract moisture from damp hair and allow steam to escape through the vents, drying hair and sealing the cuticle at the same time. Creates salon straight, shiny hair in less time, with less damage.

Display:

The Liquid Crystal Display (LCD) indicates the heat setting numerically and with a circle of bars. A steam icon appears when you have selected a setting appropriate for use on wet hair – settings of 16 and higher.

Automatic shutoff:

This styler is equipped with automatic shutoff. This safety feature turns the unit off after 60 minutes, in case you accidentally leave it on after styling your hair. Before turning itself off the LCD will flash for 10 seconds, giving you the chance to stop the shutoff process. While the LCD is flashing, simply press the +/- button to use the styler for another 45 minutes. If no button is

pressed, the unit will turn itself off when the LCD stops blinking.

Automatic worldwide voltage

This appliance contains a special electronic circuit that automatically converts it for worldwide usage – from 100 to 240 volts AC, 50 to 60 Hz. Just plug it into the local outlet and use it as normal; the styler will automatically adjust to the local current. (You may need an adapter to allow the plug to fit into the local outlets, however.)

3X Protection:

3X Protection products from Remington® have an exclusive Teflon® plus Ceramic coating and Ions for the ultimate defense against damage for superior shine.

1. Teflon® coating:

Non-stick Teflon® coating glides through any type of hair, preventing static, stickiness, and build-up of mousses, gels, and hair sprays for smooth, shiny results – every time.


2. Ceramic coating:

Ceramic protects against damaging hot spots with high, even heat to lock in moisture and create long-lasting styles.

3. Ionic conditioning:

Negative ions are created, neutralizing positive ions to reduce static and the frizzies, leaving your hair looking shiny and healthy.

- (A) Steam vents and channels
- (E) Teflon® ; Ceramic coating
- (C) Ionic conditioning
- (D) LCD display
- (E) Steam icon
- (F) Numerical heat setting indicator
- (G) Graphic heat setting indicator
- (H) +/- Temperature controls
- (I) ON/OFF button
- (J) Swivel cord
- (K) Closing lock

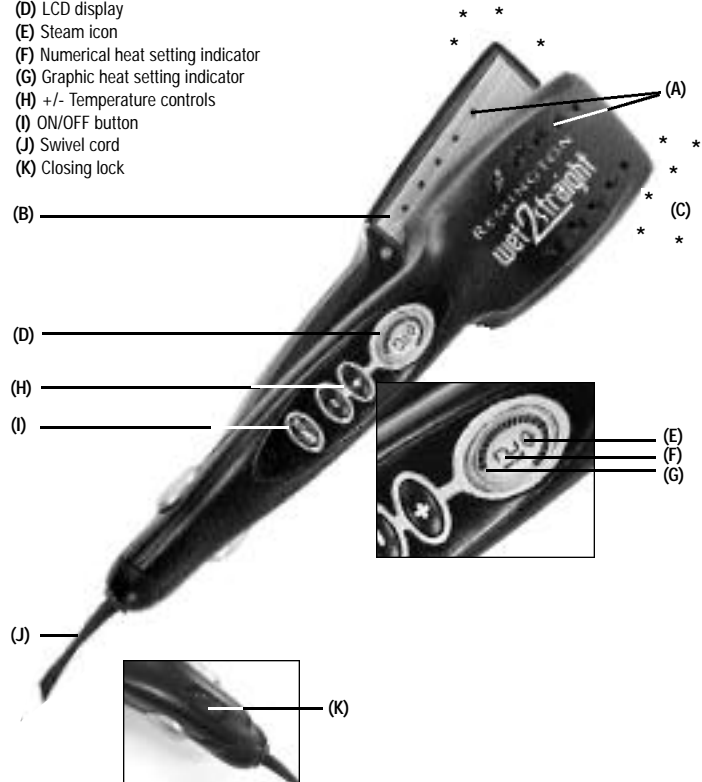

How to Use

Heat Settings

Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct temperature setting for your hair type.



Setting	Hair Type
A. 1-4	Dry Hair. Very fine, fragile or damaged hair
B. 5-8	Dry Hair. Normal, easy to straighten hair
C. 9-12	Dry Hair. Thick, difficult to straighten hair
D. 13-16	Damp Hair. Very fine, fragile or damaged hair
E. 17-20	Wet Hair. Normal, easy to straighten hair
F. 21-25	Wet Hair. Wavy or thick, difficult to straighten hair
G. 26-30	Wet Hair. Coarse, highly resistant hair in good condition

Locking Switch

This professional straightener has a locking switch to make the unit easier to store. To lock, simply squeeze the plates together and push the switch to the lock position. To unlock, slide the switch to the unlock position. NOTE: Do not heat the unit in the locked position.

Usage Tips

Straightening Your Hair

1. Gently towel dry hair to remove excess water. Avoid rubbing hair with a towel, as this creates split ends and frizziness. Detangle hair with a wide-toothed comb.
2. Plug the straightener into an electrical outlet. Press and hold the ON/OFF button until the unit turns on and the LCD lights up.
3. The straightener will initially heat to setting 15. Adjust the temperature using the +/- buttons. The bars on the LCD will flash while the unit heats up, then glow steadily when it has reached the selected temperature. The styler will beep three times when it is ready for use.
4. Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with underneath layers first.
5. Test the styler on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

NOTE:

 - If you find that you need a higher setting while straightening your hair, simply adjust the temperature by pressing the "+" button. The unit will beep when it reaches the new temperature.
 - While straightening your hair, if you find that you need a lower setting, adjust the temperature by pressing the "-" button. Because the unit is already hot, it may take a few minutes to cool off. It will beep when it cools to the lower temperature.
6. Take a small section of hair and comb through it with a fine-toothed comb. Pull hair down and away from your scalp, and hold it taut.
7. **Hold the straightener with the LCD and steam vents facing away from your scalp.** Starting at the roots, clamp hair firmly between the plates and run the styler down the entire hair strand, from root to tip, in one smooth stroke. Do not hold it in one area for a long period of time or damage to hair may occur.
8. To speed up drying at the roots, you may wish to run the styler over the first few inches of hair nearest the root several times. Repeatedly run the unit smoothly down the entire strand until hair is fully dried. **(NOTE: The unit may make a steaming/hissing noise when used on damp hair. This is okay! The unique design of this styler will channel the moisture away from hair and out the steam vents.)**
9. Repeat with all sections of your hair, working with the underneath layers first, then the top and sides, until hair is fully dried.
10. When you are finished styling, press and hold the ON/OFF button to turn the unit off, unplug it, and allow it to cool before storing.

Maintenance and Troubleshooting

Cleaning

Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required.

Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

Error Messages

rE

Your straightener will display an "rE" message if it has a recoverable error or malfunction. If this happens, turn the unit off, unplug it, and allow it to cool for 10–15 minutes. Then plug it in and turn it on again. If the message displays again, call 800-736-4648 in U.S. or 800-268-0425 in Canada.

1E, 2E, 3E

If the LCD displays a "1E", "2E" or "3E" message, turn the unit off and unplug it. Do not attempt to use it. Call 800-736-4648 in U.S. or 800-268-0425 in Canada.

Performance Guarantee

Full Two-Year Warranty

Rayovac Corporation warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Please call 800-736-4648 or 800-268-0425 in Canada for details.

RAYOVAC SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Rayovac Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Rayovac will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 or 800-268-0425 in Canada.

120-240 VAC 50-60 Hz

Questions or comments:

Call 800-736-4648 in U.S. or 800-268-0425 in Canada.

Or visit www.remington-products.com

Remington and wet2straight are trademarks of Rayovac Corporation. Teflon is a registered trademark of E.I. du Pont de Nemours Company and is used under license by Rayovac Corporation.

Patent Pending

©2004 R.C.
6/04 Job# WPC04-038 Part#15706



Rayovac Corporation
800-736-4648

MADE IN CHINA

Rayovac Canada Ltd.
800-268-0425

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>