

REMINGTON®

caresetter®
ionic hairsetter

Use and Care Guide

HEAT UP
WITH LID
OPEN



20
Soft, velvety rollers
3 sizes color-coded rollers and clips

KF-20i

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER

To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

2

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Spectrum Brands, Inc.
- Never operate this appliance if it has a damaged cord or plug; if it is not working properly; if it has been dropped, damaged, or dropped into water.
- Keep the cord away from heated surfaces.
- Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not touch the posts that hold the rollers. They are hot.
- Keep lid open when heating rollers.



KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

3

Product Features

Thank you for purchasing the Remington® brand Care Setter® Ionic Hair Setter. This unique hair setter combines optimum curling features with an exclusive wax core and ions to provide your hair the ultimate protection, superior shine and long lasting curl. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.

- Ionic conditioning creates negative ions reducing static and the frizzies for healthy, shiny hair.
- **IMPORTANT – OPEN LID WHEN IN USE.**
- Twenty rollers come in three sizes: 6 extra large, 10 large, 4 medium. Perfect for most hair types and styles.
- Soft, velvety-smooth surface provides gentle heat transfer.
- Plastic comfort clips are easy to use and hold rollers in place.
- Ring around post indicates correct roller placement.

Key Features

Ready

Heats up fast and ready dot changes color when rollers reach optimal setting temperature.

Set

Exclusive wax core rollers retain heat energy - perfect for creating beautiful long-lasting curls.

 
 
Style

Extra large, large and medium roller sizes for different lengths of hair and hair styling versatility.

- 1 **Soft protection**
Velvety rollers reduce damage
- 2 **No frizz, more shine**
Ion conditioning
- 3 **Beautiful curls that last**
Wax core retains heat longer
- 4 **Easy handling**
Cool-touch ends

Setter

- (A) Ready dot
- (B) On-indicator light
- (C) Velvety rollers
- (D) Cool-touch end rings
- (E) Color coded clips

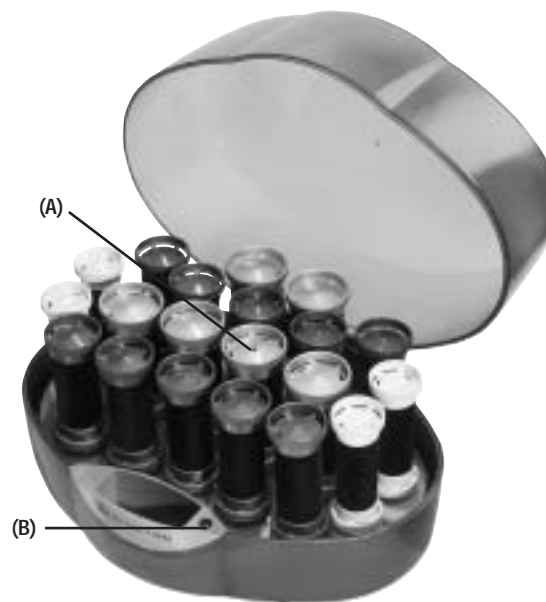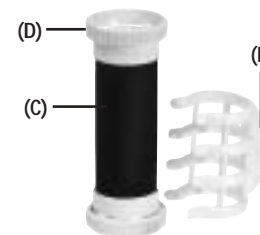

How to Use

Long and Wavy

For long, voluminous, smooth waves, use the large or extra large rollers. Roll the top, front layer of hair back to your crown, using one roller. Next, use three other large or extra large rollers to roll the remaining hair in three equal sections on the back and sides of the head. Roll the hair under, up the nape of the neck. Leave rollers in place for about five to ten minutes. Unwind, don't pull, the rollers out in the order you put them in, and let the curl cool for a minute to set. Lean forward and brush hair through. Toss head back and smooth, brushing top to one side and turning ends under.

Short and Chic

Use two or three of the medium sized rollers to roll the top, front layer of your hair back to the crown. Then randomly, place the remaining medium or large sized rollers around the back and sides of the head, rolling all the curlers under. Leave rollers in place for approximately ten minutes. Unroll curlers in the order that you put them in, let the curl cool for a minute to "set" and then use your fingers to separate and shape. Spritz hair for extra hold.

The Flipped Bob

Use a large or extra large sized roller on a large section of the hair on your crown to give height. Roll the hair back and under to crown. Next, take large sections all around the sides of your head, and roll up so the hair will flip out. You should roll curlers up to the level of the top of your ear. Leave rollers in place for approximately ten minutes. Unroll curlers in the order that you put them in, let the curl cool for a minute to set. Next, brush hair out, using your hand to shape the flip outward. Spritz for extra hold.

Quick Touch-Ups – To add some fullness before an evening out, here are some tips:

Short Hair: Use a few medium sized rollers in the front section of hair, and mist with hair-spray. Remove after just 30 seconds to add fullness. Let cool, and separate curls with finger.

Medium Hair: Use several large sized rollers to add more flip to your bob, rolling ends of hair so hair flips out. Mist with hair-spray, and remove after about 1 minute. Remove rollers, let cool, and brush hair to smooth.

Long Hair: Use several extra large sized rollers to curl ends under. Remove after 1 minute, let cool, and brush through.

Care Setter® Ionic Hot Rollers

- Before setting, hair should be dry or only slightly damp, never wet. Plug cord into outlet. When red dot on large roller top turns black, they are ready to use.

ROLLERS TAKE APPROXIMATELY 12-14 MINUTES TO HEAT TO OPTIMAL CURLING TEMPERATURE

Get Ready

- Section hair and comb it smooth. Roll hair as usual, in the direction of desired style. Secure each roller with the correct size clip. FOR CURLS: Start end of hair on roller and continue to wind toward the roots. FOR MORE VOLUME: Start rolling hair at the roots; and then wrap the end of hair around the roller.



Get Set

- Once the entire head is set, wait until rollers are cool, then unwind. Start with the rollers you placed in first. The time the roller is left in the hair regulates the curl size: the longer the time, the tighter the curl and the longer the curl will last. Unplug the unit. Rollers will remain curling active for ten minutes.



Go!

- To release secured roller, remove each clip and roller gently. Unwind, never pull. Let each new curl spring back into position and cool for a moment. Then rush out hair and style. **Spritz hair for extra hold.**



Maintenance and Storage

Operating Instructions

1. This appliance is designed to work on ordinary household current only (120 volts, 60 cycles AC). It is not intended for commercial use.
2. Place the unit on a hard, flat, heat resistant surface.
3. **Open lid** and plug cord into outlet.
Please note that damage to the unit could occur if heated with the lid closed. When unit is heated, follow instructions shown for use. When finished applying rollers in hair unplug unit and allow to cool before closing lid or storing away.

4. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Never try to defeat this safety feature.
5. **IMPORTANT – OPEN LID WHEN IN USE.**

Maintenance Instructions

1. Clean unit with damp cloth only. No other maintenance is required.
2. Rollers may be cleaned with a damp cloth and mild detergent or soap.
3. Store appliance and cord where they will not be damaged.
4. **Do not wrap cord around appliance.**
5. Do not attempt to repair the appliance yourself.

Storage

When not in use, unplug the unit. Allow it to cool, and store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance this will cause the cord to wear prematurely and break, thus voiding warranty. Handle cord carefully for long life, and avoid jerking, twisting or straining it, especially at plug connections.

Performance Guarantee

Full Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

120-240 VAC 50-60 Hz

Questions or comments:

Call 800-736-4648 in U.S.

Or visit www.remington-products.com

 
 
 
REMINGTON and CARE SETTER are registered trademarks of ROVICAL, INC.

©2005 ROVICAL, INC.
05/05 CS#28113
Spectrum Brands, Inc.
Madison, WI 53711
800-736-4648

MADE IN CHINA

T22-17780





Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>