

**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description	Ref. No.	Catalog No.	Description
1	41502	Set Screw 3/16" - 18 x 3/4"	16	24747	Cord (115V)
2	41507	Nose Piece	†17	39707	Power Unit, Charger, Battery (115V)
3	41512	Spiral Ring (2)		44902	Power Unit, Charger, Battery (240V-Export)
4	41517	Hand Grip		41197	Power Unit, Charger, Battery (220V-Europe)
5	41522	Sleeve	18	39717	Battery Pack - K-38-B
6	41532	Clamp Spring (2)		41207	Battery 220/240V
7	41537	Booster Spring (2)		39712	Charger - K-38-B
8	41542	Captive Screw (4)		41202	Charger 220V
9	41547	Drum Front w/Gasket		44952	Auto Charger 12 VDC
10	47252	Gasket	20	55247	Cable Chuck
11	41552	Drum Liner	21	55257	Chuck Adapter
†12	41557	Drum Back	22	55252	Spacer
*13	76775	Screw (Left Hand Thread)	23	60025	Set Screw
†14	61980	Power Unit (115V)	—	41562	Decal Package K-38
	84430	Power Unit (230V-Export)	—	41567	Decal Package K-38-B
	44462	Power Unit (220V-Europe)	—	55242	Chuck Assy. Kit Includes Ref. No. 20, 21, 22
15	61100	Switch (115V)			
	84685	Switch (230V-Export)			
	44467	Switch (220V-Europe)			



†See Service Notes

†Service Notes

Ref. No. 11 & 13: To remove drum back from power unit, first remove left hand screw Ref. 12. Strike unit as shown in figures below to unscrew drum.

Ref. No. 16: See Model 3350 for component parts

†Chuck conversion: When converting to cable chuck Ref. 19, remove springs Ref. 6 & 7.

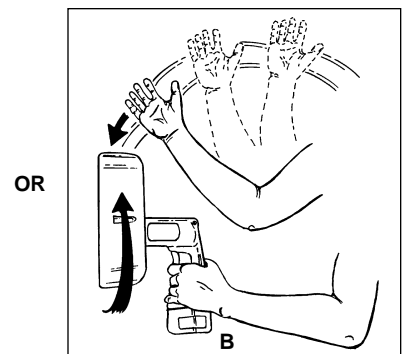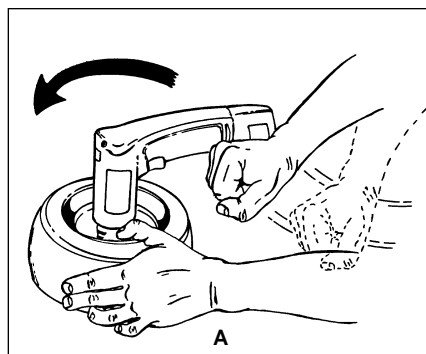

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>