


SINGER

DSX

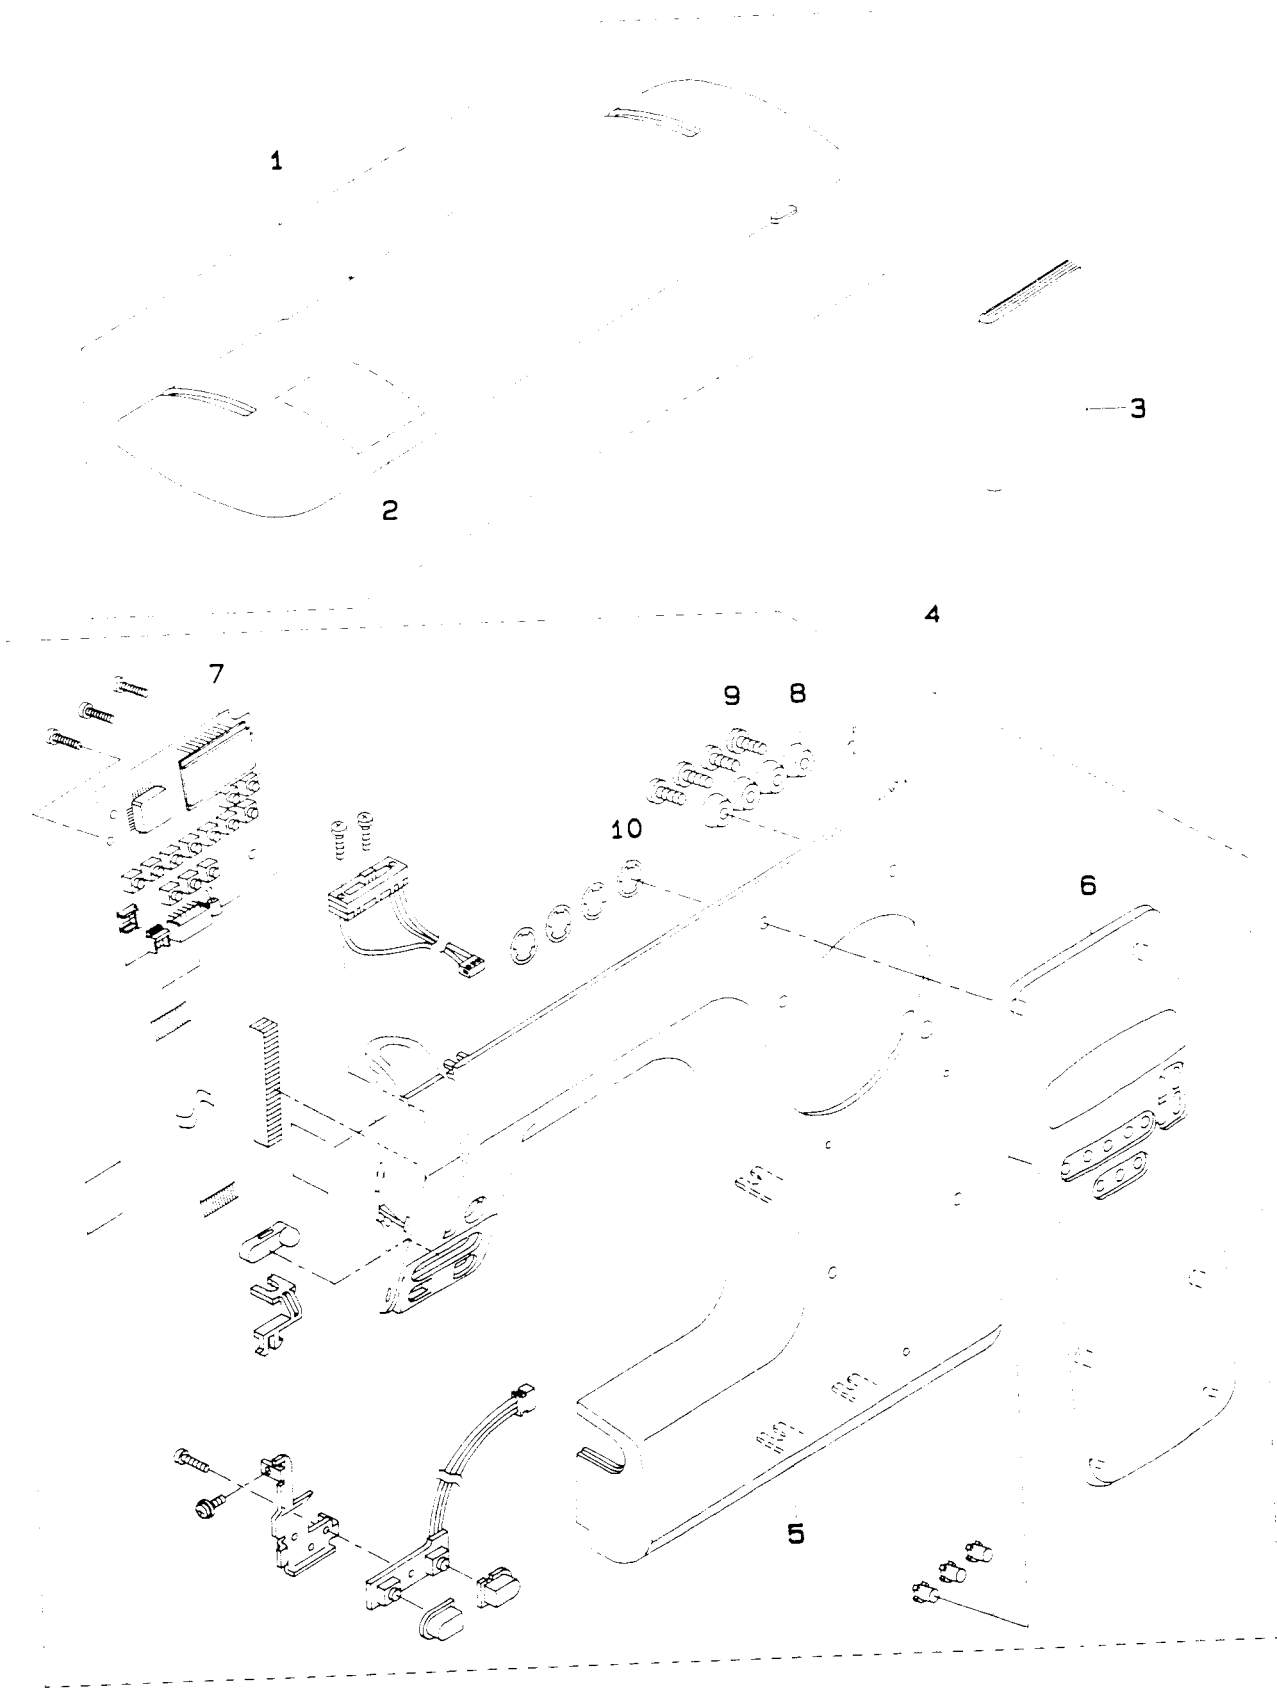

Ref No.	Note	Part No.	Part Description	Qty
1		385367	Upper cover (asm.)	1
2		385368	Thread winding label	(1)
3		385363	Instruction manual	1
4		385369	Front panel (asm.)	1
5		385370	Front panel	(1)
6		385371	Pattern display panel (asm.)	(1)
7		385372	Indicator circuit board (asm.)	(4)
8		385373	Collar	(4)
9		283522	Screw	(4)
10		283334	Push nut	

★ REFER TO THE LE/SX PARTS LIST FOR PARTS NOT INCLUDED IN THIS LIST.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>