



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY NEX-VG10E. You'll find the answers to all your questions on the SONY NEX-VG10E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY NEX-VG10E
User guide SONY NEX-VG10E
Operating instructions SONY NEX-VG10E
Instructions for use SONY NEX-VG10E
Instruction manual SONY NEX-VG10E

SONY 4-279-232-12(1)

Interchangeable Lens Digital HD
Video Camera Recorder

Operating Guide
E-mount

- Table of Contents
- Getting Started
- Recording/Playback
- Editing
- Using the Menu
- Connecting with another device
- Troubleshooting
- Additional Information
- Quick Reference

NXCAM AVCHD i-INTUITIVE L PROGRESSIVE

Memory Stick XDC CAMD HDMI

NEX-FS100E/FS100P/FS100EK/FS100PK



[Your user manual](#)
[SONY NEX-VG10E](#)

Manual abstract:

29 Adjusting manually .31 Adjusting the iris . 31 Adjusting the gain . 31 Adjusting the shutter speed 32 Adjusting the white balance 33 Adjusting the black balance . 34 Audio setup 35 Recording sound via the supplied microphone 36 Recording sound from an external audio device 36 Adjusting the volume 37 Setting the headphone sound. 37 Useful functions 38 Customizing the picture quality (Picture profile) . 38 Acquiring location information (GPS) 43 Setting time data . 44 Recording with the SMOOTH SLOW REC function. 45 Recording with the Slow & Quick Motion function 46 Reviewing the most recently recorded scene (Last Scene Review). 48 Assigning the functions to the ASSIGN buttons .

48 Continued , 5 Table of Contents (Continued) Playback 50 Viewing still images . 52 Changing/checking the settings in your camcorder . 54 Changing the screen. 54 Displaying recording data (Data code). 54 Displaying the settings in your camcorder (Status check) .

55 Connecting a monitor or a TV 56 Editing Protecting recorded images (Protect) 58 Capturing still images from a movie . 59 Dividing a movie . 60 Deleting movies and still images 61 Copying movies/still images . 62 Formatting the recording media . 63 Preventing data on recording media from being recovered . 64 Repairing the image database file . 65 Using the Menu Operating the menu . 66 Menu items 68 (CAMERA SET) menu 71 Settings to adjust your camcorder to the recording conditions (GAIN SET/STEADYSHOT, etc.) (REC/OUT SET) menu . 73 Recording settings, input and output settings (REC SET/VIDEO OUT) (AUDIO SET) menu . 74 Settings for the audio recording (AUDIO FORMAT/XLR SET, etc.) (DISPLAY SET) menu . 76 Display settings (MARKER/DISPLAY OUTPUT, etc.) (TC/UB SET) menu . 79 Time code settings (TC PRESET/UB PRESET, etc.

) (OTHERS) menu 80 Settings while recording or other basic settings (AREA SET/BEEP, etc.) 6 Connecting with another device Saving images on an external media device 83 Creating a high definition image quality (HD) disc with a DVD writer .85 Creating a standard definition image quality (SD) disc with a recorder, etc.86 Saving images with a computer .87 Table of Contents Troubleshooting Troubleshooting 89 Warning indicators and messages .97 Additional Information Recording time of movies .99 Using your camcorder abroad 101 File/folder structure on the memory card and the flash memory unit .102 Maintenance and precautions 103 About the AVCHD format 103 About GPS 103 About the memory card 104 About the "InfoLITHIUM" battery pack . 105 About charging the battery pack 106 About handling of your camcorder . 107 Specifications .

110 Quick Reference Identifying parts and controls .114 Screen indicators 120 Index .121 7 Getting Started Step 1: Checking supplied items Make sure that you have following items supplied with your camcorder. The number in the parentheses indicates the number of that item supplied. A/V connecting cable (1) (p. 56, 86) All models AC Adaptor/Charger (AC-VLI) (1) (p. 15) USB cable (1) (p. 87) USB Adaptor Cable (1) (p. 83) Large LCD viewfinder (1) (p. 13) Power cord (mains lead) (1) (p. 15) Large eyecup (1) (p. 13) Rechargeable battery pack (NP-F770) (1) (p. 15, 105) Wind Screen (1), Microphone (ECM-XM1) (1) (p. 11) Wireless Remote Commander (RMT-845) (1) (p. 119) Handle (1) (p. 10) A button-type lithium battery is already installed. Component video cable (1) (p. 56) 8 Grip (1) (p. 12) NEX-VG10EK/FS100PK Zoom lens (E 18-200 mm F3.5-6.3 OSS) (1) (p. 18) Flash memory unit jack cover (1) (p. 25) Getting Started Lens hood (1) (p. 20) Body cap (attached to the camcorder) (1) (p. 18) Front lens cap (1), rear lens cap (1) (attached to the lens) (p. 18) Accessory shoe plate (1) (p. 15) Connecting cord (DK-415) (1) (p. 17) CD-ROM "Content Management Utility" (1) CD-ROM "Manuals for Interchangeable Lens Digital HD Video Camera Recorder" (1) Operating Guide (2) 9 Step 2: Attaching the supplied accessories Attaching the lens See page 18 for information on attaching the lens. The NEX-VG10E/FS100P does not come with the E 18-200 mm F3.5-6.3 OSS lens. Please use appropriate lenses (sold separately). 2 While pressing the screw down, turn it clockwise to fasten the handle..



[Your user manual](#)
[SONY NEX-VG10E](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>