


# Technika

EXCLUSIVELY FROM **TESCO**

CR-109IDAB

## Owner's Handbook

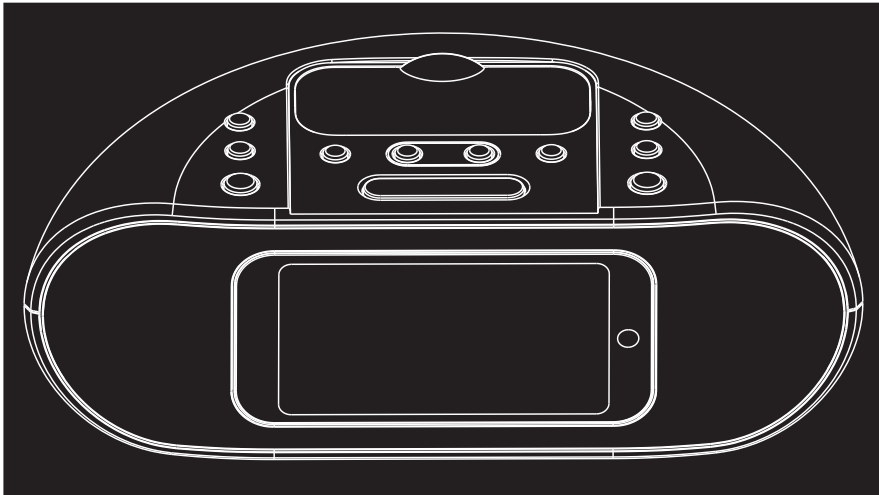

Clock radio with dock for iPod





## IMPORTANT SAFETY INFORMATION



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Do not use this apparatus near water.

Clean only with a slightly damp cloth.

Do not block any ventilation openings.

Install in accordance with the manufacturer's instructions.

Do not install or operate near any heat sources such as radiators, stoves, or other apparatus that produce heat.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**Warning:** To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.

No naked flame sources such as candles should be placed on the product.

**Caution:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

**Caution:** Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

### IMPORTANT

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### ELECTRICAL INFORMATION

Use this appliance only with the supplied AC Adaptor. Using non-approved power supplies will void the warranty.

**Mains Supply:** The mains operating voltage of the AC Adaptor is marked on a rating plate on the AC Adaptor.

The means of disconnecting this appliance from the mains supply is the AC adaptor. This should be unobstructed and readily operable at all times.

## INDEX

### INDEX

Important safety information .....	1
Introduction .....	2
Unpacking .....	2
Controls & Connections.....	3
Display features .....	4
Remote control.....	5
Getting started .....	6
Setting the clock.....	8
DAB reception.....	6
Selecting a source.....	8
FM reception.....	8
Radio presets .....	8
Docking or connecting an iPod .....	9
Playing an iPod.....	10
Playing Aux sources .....	10
Using the alarms.....	11
DAB Settings menu.....	12
FM settings menu.....	14
Sleep function .....	14
Troubleshooting .....	15
Care & Maintenance.....	15
Specifications .....	15
Warranty .....	15

## INTRODUCTION

The CR-109IDAB is a full-function remote controlled iPod docking station with DAB and FM radio and dual alarms.

The clock/radio function features a large-format backlit display for easy night reading.

## PRELIMINARIES

### UNPACKING

Carefully unpack the unit. If it is damaged, please return it to your nearest Tesco store for replacement. Remember to take your purchase receipt with you.

Retain the User Handbook. If you pass the unit on to a third party make sure you pass on the handbook.

We suggest you retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

### CONTENTS

The carton should contain:

- The CR-109IDAB iPod dock
- AC adaptor
- Remote control with battery
- Set of 8 x iPod adaptors
- Operating Manual


If any items are missing or damaged, contact your nearest TESCO store for a replacement. Have your receipt ready when you call. Retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

### LOCATION


Place the unit on dry stable surface away from heat and damp and where it is unlikely to fall or be knocked over.

## CONTROLS & CONNECTIONS

TOP VIEW

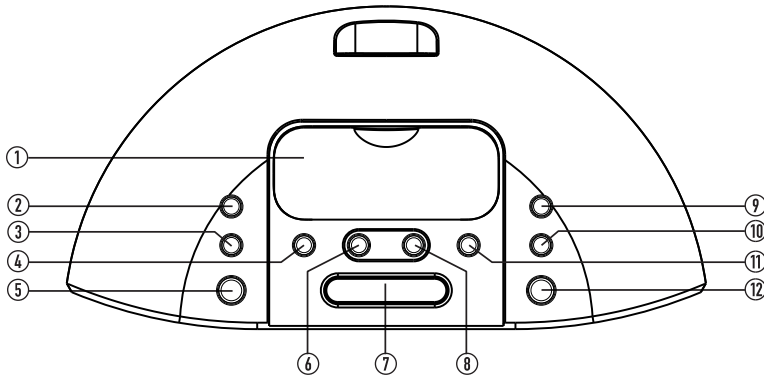


FRONT VIEW

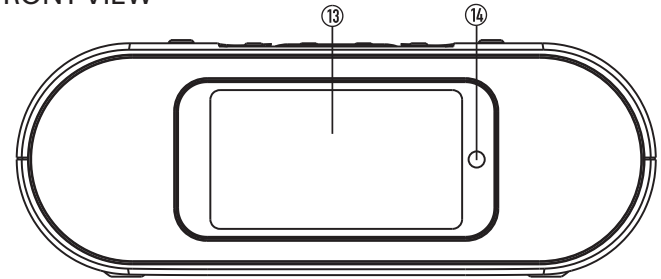

- |                        |                       |
|------------------------|-----------------------|
| ① iPod docking bay     | ⑩ Down button         |
| ② Menu/Standby button  | ⑪ ►►/Preset button    |
| ③ Function button      | ⑫ Select/Enter button |
| ④ ◀◀ /Info button      | ⑬ Display window      |
| ⑤ ►►/Scan button       | ⑭ Remote control eye  |
| ⑥ Volume down button   | ⑮ DAB/FM aerial       |
| ⑦ Snooze/Dimmer button | ⑯ Aux in jack         |
| ⑧ Volume up button     | ⑰ DC input jack       |
| ⑨ Up button            | ⑱ Headphone jack      |

BACK VIEW

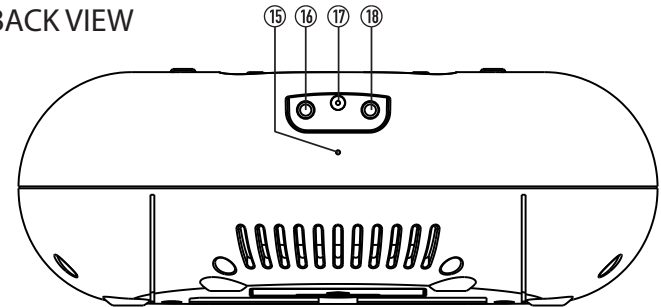

## DISPLAY FEATURES

### TIME DISPLAY



The display shows the current time and date when set to Standby.

### VOLUME DISPLAY



When changing the volume level, the display shows a volume bargraph.

### SNOOZE DISPLAY




When Snooze has been set after the alarm has sounded, the remaining snooze time counts down at the bottom of the display.

### DISPLAY LAYOUT



- ① Alarm 1 set symbol
- ② Alarm 2 set symbol
- ③ Sleep symbol
- ④ Time display
- ⑤ Station name/Source display
- ⑥ Info display

## REMOTE CONTROL

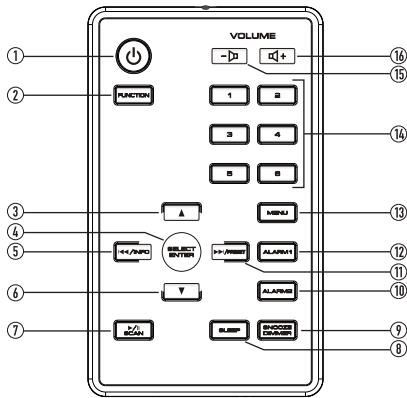

- ① Standby button
- ② Function button
- ③ Up button
- ④ Select/Enter button
- ⑤ ◀◀/Info button
- ⑥ Down button
- ⑦ ▶▶/Scan button
- ⑧ Sleep button
- ⑨ Snooze/Dimmer button
- ⑩ Alarm 2 button
- ⑪ ▶▶/Preset button
- ⑫ Alarm 1 button
- ⑬ Menu/Standby button
- ⑭ Numeric keypad
- ⑮ Volume down button
- ⑯ Volume up button

## REMOTE CONTROL BATTERIES


### BEFORE FIRST USE

Before using the remote control, the battery (supplied) must be fitted.

### FITTING/REPLACING THE BATTERY

When fitting or replacing the battery in the remote control, refer to the diagram below.

1. Press the catch across.
2. While holding the catch, open the battery door.
3. Fit the battery observing polarity as shown. When replacing the battery, use only the same CR2025 type specified.

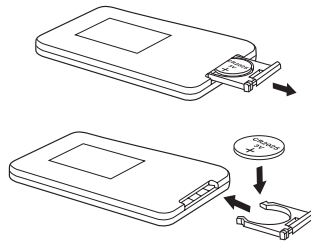

## BATTERY DISPOSAL

Dispose of used batteries with regard to the recycling regulations in your area. Do NOT short circuit batteries or throw them into water, the general rubbish or in a fire.

Weak batteries can leak and damage the remote control. Replace them in good time!

## GETTING STARTED

### DAB/FM AERIAL

Before using your radio for DAB or FM reception, unwrap and fully extend the aerial wire. You may need to adjust the position of the aerial wire for maximum signal strength.

### CONNECTING POWER

Before connecting the power, check that the mains voltage on the rating plate of the AC adaptor is the same as the voltage in your area.

- Plug the DC cord from the AC adaptor into the DC jack on the back of the unit.
- Plug the AC adaptor into the wall socket and switch the mains power on.

*The unit is now ready for use.*

NOTE:- The AC adaptor may become warm during operation - this is normal.

When first connected to the power, the clock and calendar display will show 'zeros'.



### SETTING THE CLOCK

The clock on your radio is automatically set when first used from the time signal broadcast with DAB radio stations.

If a DAB station is not available, the clock may be set manually via the MENU system (see page 14).

## POWER CONTROL

### STANDBY CONTROL

**To turn the radio on:**

- Press the **MENU/STANDBY** button on the top panel or the red  button on the remote control.

*The display will light and the radio will switch on.*


**To turn the radio off:**

- Press and **hold** the **MENU/STANDBY** button on the top panel or press the  button on the remote control **briefly**.

*The radio will switch off. The clock will continue to run whilst mains power is connected.*

### INITIAL SCAN

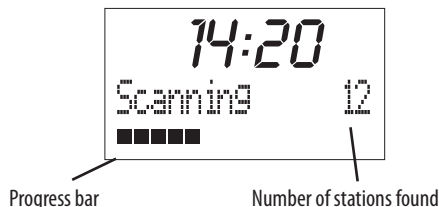

When your radio is switched on for the first time the scanning display will be shown while the scanning process takes place:



The radio scans all usable stations (full scan) and stores them alphanumerically - 1 Radio, 2 Radio, AA Radio, AB Radio... The initial scan will take a few minutes. After the scan, the clock will be set and the radio will display the name of the first station in the sequence. To select this station, press the **SELECT/ENTER** button. To browse for another station, refer to the next section.

## BROWSING FOR A STATION

 
### To browse for another DAB station

- Press the **UP** or **DOWN** button on the top panel (or the  or  button on the remote control) repeatedly to browse through the station list.
- When you find a station you want to play, press the **SELECT/ENTER** button.


*After a short delay, the radio will tune to the station.*

## ADJUSTING THE VOLUME

### To increase the volume:

- Press the **VOLUME +** button on the top of the unit (or the  button on the remote control).

### To decrease the volume:

 - Press the **VOLUME -** button on the top of the unit or the  button on the remote control.

*When the volume is adjusted the display will change to show the current volume setting on a bargraph.*





## DAB SCANNING

### RE-SCANNING FOR DAB STATIONS

When first used, your radio scanned the DAB band for available stations. The station services found were then stored in your system's memory.

You can re-scan the band at any time if you move to a different area or just to refresh the stored list of available stations.

#### To scan for DAB stations manually:

- Select the DAB band.
- Press the ►II/SCAN button on the top panel or remote control.

*The scanning process will take a few minutes. The number of services found during the scan will be shown at the right side of the display.*

After the scan, the radio will display the name of the first station in the sequence. To select this station, press the **SELECT/ENTER** button or continue to browse for another station as described on the previous page.

## DISPLAY DIMMER

The display brightness can be switched between high and low settings by pressing the **SNOOZE/DIMMER** button on the top panel or remote control.

## DAB DISPLAY MODES


### DISPLAY MODE OPTIONS

The bottom line of the display can be switched to show different items of information that may be transmitted with a DAB station.

Choosing the information display:

Press the ◀◀/INFO button on the top panel or remote control repeatedly to change the information displayed while playing a DAB radio station.

The full range of display options are shown below. Some stations may not broadcast all of these options.

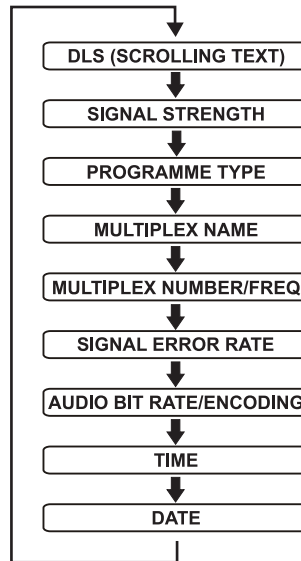

**DLS (Dynamic Label Segment):** This is a scrolling message giving real-time information - song titles, news headlines, etc.

**SIGNAL STRENGTH:** This setting will display a signal strength bargraph. The longer the bargraph, the stronger the signal. Setting the display to show signal strength is useful when setting up the aerial for the strongest signal.

**PROGRAMME TYPE:** This describes the style of the programme being broadcast.

**MULTIPLEX NAME:** DAB Digital radio stations are broadcast in multiplexes. Each multiplex is a bundle of radio stations transmitted in a single frequency. There are national and local multiplexes; local ones contain stations specific to your area. This option displays the name of the multiplex name that contains the station you are listening to.

**MULTIPLEX NUMBER/FREQ:** This option will display the multiplex number and frequency that contains the station you are listening to.

**SIGNAL ERROR RATE:** This option will display the level of signal errors in the current broadcast. The lower the number, the better the quality of the signal.

**BIT RATE:** DAB allows broadcasters to vary the BIT RATE (or the amount by which an audio signal can be compressed) depending on the type of broadcast. This enables the amount of stations on a multiplex to be maximised. Speech and News are often broadcast at a lower Bit Rate; music needs a higher Bit Rate for good fidelity.

**TIME AND DATE:** Time and date are updated by broadcasted information.

## SELECTING A SOURCE

### SOUND SOURCES

You can choose to listen to the following sources -

- DAB radio
- FM radio
- iPod (when docked)
- Aux source (when connected via the rear panel AUX jack).

### Selecting a source:

- Press the **FUNCTION** button on the top panel or remote control repeatedly to scroll through the available sources.

## LISTENING TO FM RADIO

Your radio can also receive FM band radio stations and display RDS data (where broadcast).

### To change to the FM band

- Press the **FUNCTION** button repeatedly to select FM mode.

### To auto-tune to FM stations

- Press and **hold** the **UP** or **DOWN** button on the top panel (or the **▲** or **▼** button on the remote control) to search for the next station in the band.

*The radio will search in the direction indicated and the tuning frequency will be displayed whilst searching.*

*When a usable station is detected the radio will stop tuning and play the station. If RDS data is present, the station name and scrolling radio text will be displayed. If RDS data is not present, the tuned frequency will be displayed.*

### To manually tune to FM stations

- Press the **UP** or **DOWN** button on the top panel **briefly** (or the **▲** or **▼** button on the remote control) to tune the band in 50kHz steps.

### STEREO/MONO RECEPTION

You can set your radio to switch automatically between stereo and mono FM reception (Mono/Stereo mode) or to receive in mono only (Mono Only mode). Setting to Mono Only mode may improve sound quality in areas where a weak aerial signal results in a high level of background noise. FM audio mode selection is made via Audio Setting in the FM menu. Refer to the FM Settings Menu section on page 14 for more details of the FM menu.

## STATION PRESETS

### DAB and FM presets

Your radio can store up to 10 of your favourite stations as presets on both the DAB and FM bands for quick recall. The remote control includes direct access number keys for Presets 1 to 6. For this reason you may prefer to store your most-used stations in Presets 1 to 6.

### To quick store preset 1 to 6

- Tune to the station you want to store as a preset.
- Press and **hold** one of the **NUMBER** buttons on the remote control.

### To recall a preset 1 to 6

- Press one of the **NUMBER** buttons on the remote control **briefly**.

The preset station will be tuned. If the preset location selected is empty, then the radio will continue to play the last selected station.

### To store any preset 1-10 (top panel or remote control)


- Tune to the station you want to store as a preset.
- Press the **►/PRESET** button.
- Press the **▲/UP** or **▼/DOWN** button repeatedly to find the preset number you want to store.
- Press and **hold** the **SELECT** button to confirm and store the preset.

### To recall any preset 1-10

- Press the **►/PRESET** button.
- Press the **▲/UP** or **▼/DOWN** repeatedly to find the preset number you want to play.
- Press the **SELECT** button **briefly** to play the preset.


## iPod ADAPTORS

Before docking your iPod you must first check if your iPod has a docking connector. Early iPod models do not have one and cannot be docked to your unit. The docking connector is located on the base of the iPod as shown below.

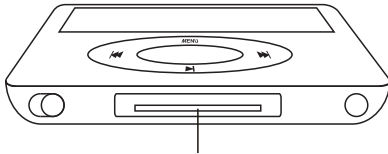

Docking Connector

Before docking your iPod, you must first fit the correct iPod adaptor to the docking bay. Each iPod adaptor matches the shape of a particular iPod and is necessary to ensure that your iPod is securely held when docked.

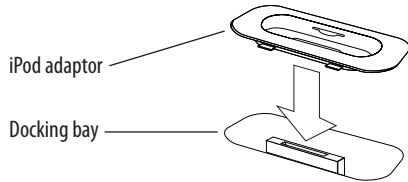

### FINDING THE CORRECT iPod ADAPTOR

Your iPod docking system is supplied with a selection of docking adaptors that are compatible with several models in the iPod range. Refer to the table of iPod models in the next column which lists the adaptor numbers, compatibility and instructions for obtaining an adaptor for unlisted models.

NOTE: Do not dock an iPod without fitting the correct adaptor, you may damage the iPod and your unit.

## SELECTING AN ADAPTOR

### LIST OF SUPPLIED ADAPTORS

- ③ iPod mini (4GB or 6GB)
- ④ iPod, 4th gen. with a B&W display and clickwheel with legends on wheel (20GB or 30GB)
- ⑤ iPod, 4th gen. with a B&W display and clickwheel with legends on wheel (40GB)
- ⑦ iPod photo, with a colour display (40GB or 60GB)
- ⑧ iPod nano 1st gen. with flat sides.
- ⑨ iPod video 5th gen. (30GB or 60GB) and iPod Classic (80GB or 120GB).
- ⑩ iPod video 5th gen. (80GB) and iPod Classic (160GB).
- ⑪ iPod nano 2nd. gen with round sides.

### Other iPod models with dock connectors

Your iPod may have been supplied, packed with a standard dock adaptor. If so, this can be used as the docking bay on your unit is compatible with adaptors supplied by Apple.


### If you don't have a dock adaptor

If your iPod was not supplied with a standard dock adaptor, you can buy one from Apple on-line. To determine the exact model of your iPod, refer to this web-link - <http://support.apple.com/kb/HT1353>. You can then browse the iPod accessories page on the Apple website to find an adaptor for your iPod model that can be purchased on-line.

Once you have located the correct adaptor for your iPod, press it gently into the iPod Docking Bay before attempting to dock your iPod.

## CONNECTING OTHER iPod MODELS (INC SHUFFLE)

If you own an iPod Shuffle, a model without dock connector or prefer to connect your iPod by cable, you can connect the sound output to the AUX jack on the rear panel.

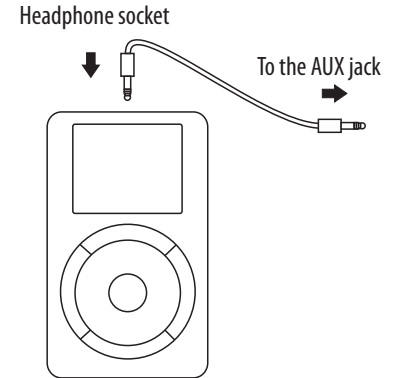

- Using a 3.5mm stereo jack to jack cable (not supplied), connect one end of the cable to the headphone socket of the iPod, and the other end to the AUX jack on the back panel.
- To listen to your iPod, follow the instructions on page 10 for playing equipment connected to the AUX jack.

NOTE:- The volume control of the iPod must be turned up when playing through the AUX jack.

NOTE:- An iPod connected to the AUX jack cannot be operated from the remote control and will not be activated by the alarm.

## DOCKING AN iPod

### DOCKING YOUR iPod

#### To dock your iPod:

- Switch off the power.
- Check that the correct iPod adaptor is fitted to the docking bay.
- Locate the iPod on the Docking Connector and press it gently home.
- The unit will switch on and the iPod will start to play.

#### To remove your iPod from the dock:

- Grip the iPod at the sides.
- Lift the iPod gently from the dock.

## CHARGING AN iPod

When an iPod is docked, the iPod will begin to charge automatically.

NOTE:- The iPod will charge at all times that the radio is connected to mains power.

## PLAYING FROM AN iPod

Once an iPod is docked, you can operate your iPod functions from the controls on the top panel or the remote control.

### Playback functions:

- Press the **▶||/SCAN** button to toggle between Play and Pause mode at any time.
- Press the **▶▶/PRESET** or **◀◀/INFO** button to select the previous or next track on your iPod.

### iPod menu functions:

When an iPod is docked and playing you can navigate the menus from the keys on the top panel or remote control.

- To move up through the iPod menu, press **MENU** on the remote control.
- To scroll up and down options displayed on the iPod menu, press the **UP** or **DOWN** button.
- To select menu items, press the **SELECT/ENTER** button on the remote control.

## AUX SOURCES

The AUX input may be used to connect sound sources with a Line or Headphone analogue output to play through your unit. These may include -

- iPod models that cannot be docked to the unit
- MP3 players
- CD walkman players
- Tape walkman players
- Personal computers or laptops

### Connecting to the AUX jack

- Connect a stereo 3.5mm jack cable (not supplied) between the headphone or LINE/AUX output of the personal audio player and the AUX jack on the back panel.

### Playing the AUX source

- Press the **FUNCTION** button repeatedly to select AUX mode.

*AUX will be displayed.*

- Set your personal audio player/computer to **PLAY**.
- Set the listening volume to the level you want with the volume controls on the radio or remote control.

If there is no sound or if the volume level is not loud enough, you may need to increase the volume setting on your personal audio player/computer.

## USING THE ALARMS

### SETTING THE ALARMS

You can set two completely separate alarm times (ALARM 1 and ALARM 2) and activate either or both of them to wake you with a buzzer, radio, or music from a docked iPod. You can also pre-set the station preset and volume settings that the alarms will wake you with.

The alarms are set from the remote control or from within the Settings Menu (see page 12).

#### Checking and changing alarm settings:

All alarm settings are made through the Alarm menu.

NOTE:- Once you have completed the settings they must be saved before leaving the menu or the changes will be lost.


#### Checking Alarm 1 settings:

- Press the **ALARM1** button on the remote control.
- 'Alarm detail' will appear on the display.*
- Press the ▲ button to scroll through and display the current alarm settings in the sequence shown in the next column.

#### To make a change to a setting:

1. Scroll to the setting you want to change.
2. Press the **SELECT/ENTER** button.
3. Press the ▲ or ▼ button to scroll through the options available for that setting (or times when clock setting).
4. When you have finished changing the setting, press the **SELECT/ENTER** button to return to the Alarm Menu.
5. Repeat the previous four steps to change each setting as required.

\*NOTE:- When changing the Preset setting, choose the 'Last listened' option to wake to the last station you played.

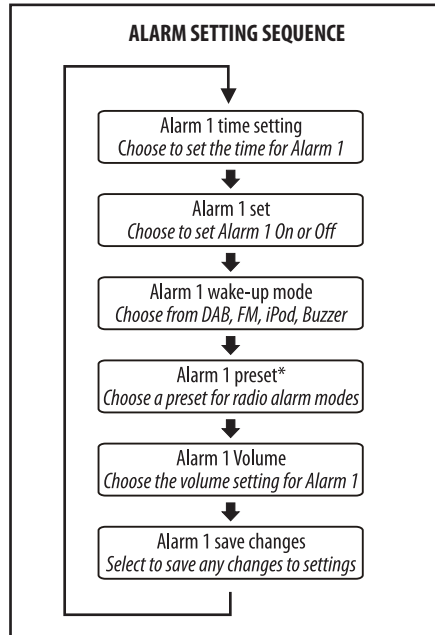

#### Saving changes:

If you have made changes to settings and want to save them, select the 'Save' option and press **SELECT/ENTER**.

The display will confirm with the words 'Alarm saved'.

#### Setting Alarm 2:

- Press the **ALARM2** button on the remote control to open the Alarm menu and view the settings for Alarm 2.
- If you want to change the settings, follow the five step procedure for Alarm 1.

### SETTING THE ALARM TO WAKE YOU

#### To set the alarm to wake you:

- Check that the Alarm 1 or Alarm 2 symbols are displayed as required. If not, set the Alarm(s) On as described in the Alarm menu section.
- If you have set either wake up mode to 'iPod', make sure that your iPod is docked.
- Set the radio to Standby (or set the SLEEP function).

*The radio will switch off and the time and date will be displayed with the Alarm Symbol(s).*

#### WHEN THE ALARM WAKES YOU

When the alarm sounds you can choose to set snooze, which will reset the alarm for a further 9 minutes, or to switch it off.

#### To set snooze:

- To set snooze, press the **SNOOZE/DIMMER** button when the alarm sounds.

*The alarm will stop and the alarm indicator and the snooze time will count down on the display. After 9 minutes the alarm will sound again.*

#### To switch off the alarm:


- To switch off the alarm, press and **hold** the **MENU/STANDBY** button.

*The unit will set to Standby.*

#### ALARM REPEAT

The alarm(s) will sound at the same time(s) each day until turned off via the Alarm Menu.

# ADVANCED OPERATION - DAB SETTINGS MENU

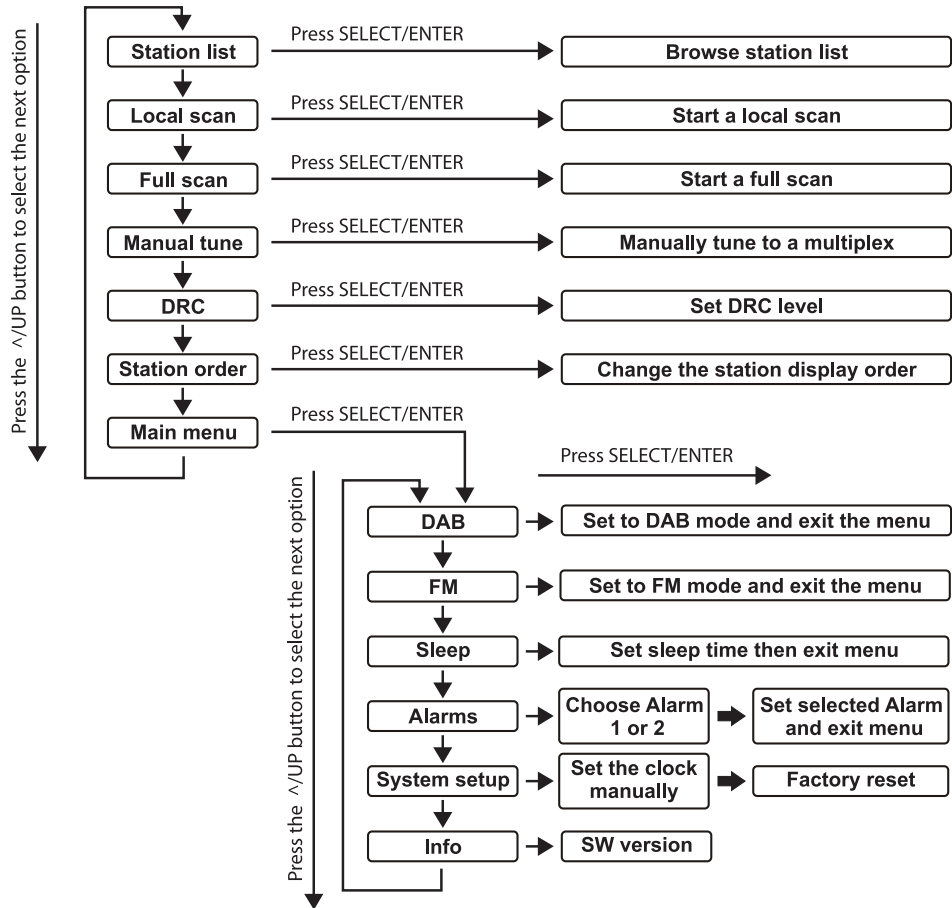

## DAB SETTINGS MENU (contd.)

### DAB SETTINGS MENU

Your radio has some additional features and options that may be reached through the Settings Menu.

#### To enter the DAB Settings Menu:

- Set to DAB mode.
- Press the **MENU//STANDBY** button on the top panel or the **MENU** button on the remote control.

*A complete map of the menu is shown on the previous page. To scroll through available options, press the **▲** or **UP** buttons. To choose an option from the menu, press the **SELECT/ENTER** button as indicated.*

### MORE DETAIL OF THE DAB SETTINGS MENU OPTIONS

**STATION LIST:** Selecting Station List will exit the Settings Menu to browse the DAB station list. Stations may be selected from the list by pressing the **SELECT/ENTER** button.

**FULL AND LOCAL SCANS:** Select one of the scanning options to re-scan the DAB bands and refresh the station list. A Local Scan will scan only the bands used in the locality of the radio. A full scan will scan all bands.

**MANUAL TUNING:** Manual tuning enables you to search the band manually, stepping through the multiplex numbers to check if any have usable signal strength. Manual tuning is not necessary in normal operation where scanning will have automatically established a station list of all useable stations.

**DRC:** DRC is Dynamic Range Compression. Enabling DRC may improve the sound of DAB radio when listening in a noisy room.

**STATION ORDER:** You can select this option to change the way that DAB station names are displayed. You can choose from Alphanumeric, Ensemble or Valid.

Alphanumeric will sort all the station names into alphanumeric sequence.

Ensemble will group the station names together within the ensemble groups that they are transmitted.

Valid will exclude any stations from the list that are no longer valid within broadcast ensembles in your area.

**MAIN MENU/DAB:** This option will exit the settings menu to play DAB radio.

**MAIN MENU/FM:** This option will exit the settings menu to play FM radio.

**MAIN MENU/SLEEP:** Choose this option to set the Sleep time from within the settings menu. Note that this option enables Sleep time to be set from the top control panel of the unit if the remote control is not available.

**MAIN MENU/ALARMS:** Choose this option to view or change the settings of Alarm 1 or Alarm 2 from within the settings menu. Note that this option enables Alarm settings to be checked or changed from the top control panel of the unit if the remote control is not available.

**MAIN MENU/SYSTEM SETUP/TIME SETUP:** This menu option enables the clock to be set manually if there is no available DAB transmission.

**MAIN MENU/SYSTEM SETUP/FACTORY RESET:** This option will restore all settings to 'factory original'. All clock and alarm times, station lists and any stored preset stations will be cleared. After factory reset the radio will automatically re-scan the DAB band when first used.

**MAIN MENU/INFO/SW VERSION:** This option will display the version number of the control software currently installed in your radio. This will be helpful to a technician who is servicing the radio.

## FM SETTINGS MENU


### FM SETTINGS MENU

There are also some menu settings that are specific to FM radio operation. These settings may be changed through the Settings Menu.

#### To enter the FM Settings Menu:

- Set to FM mode.
- Press the **MENU//STANDBY** button on the top panel or the **MENU** button on the remote control.

A map of the menu is shown below. To scroll through available options, press the **▲** or **UP** buttons. To choose an option from the menu, press the **SELECT/ENTER** button.

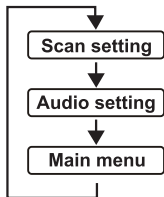

### MORE DETAIL OF THE FM SETTINGS MENU OPTIONS

**SCAN SETTING:** With this menu option you can set the scanning sensitivity of the FM radio to two different levels- 'Strong stations only' or 'All stations'. Setting to 'Strong stations only' will exclude weaker stations resulting in a quicker scan. If you set to 'All stations' the scan will stop at every station detected, even if the signal is weak.

**AUDIO SETTINGS:** This option enables you to set the radio to receive FM in Auto mode (Mono/Stereo) or in Mono only. This may be useful if the signal is weak and the broadcast is noisy.

## SLEEP FUNCTION

### SLEEP TIMER

You can set the Sleep timer to play music for a set period while you are falling asleep.

#### To set the sleep timer:

- Play your choice of music.
- Press the **SLEEP** button on the remote control repeatedly to cycle through the sleep time options of 15 minutes, 30 minutes, 45 minutes, 60 minutes or OFF (sleep off).

*The music will continue to play for the time you selected, then the unit will set to Standby.*

NOTE:- Sleep time can also be set through the Settings Menu if the remote control is not available.

## HEADPHONES

There is a headphone output jack on the back panel of the radio. If headphones are connected to this socket for private listening, the speakers will cut out automatically.



## CARE AND MAINTENANCE

### CARE AND CLEANING

All care and cleaning operations should be carried out with the unit unplugged from the mains power.

The surface of the unit can be cleaned with a barely damp cloth and then dried carefully. Never use abrasives, abrasive cloths or chemical solvents.

## TROUBLESHOOTING

### Poor quality radio reception

The aerial signal may not be adequate. Try repositioning the aerial while watching the signal strength. Signal strength can be displayed by tuning to a DAB station and pressing the **◀/INFO** button

### Alarm not sounding

Check that you set Alarm 1 or Alarm 2 on in the alarm setting sequence. When the alarms are on, the Alarm 1 or Alarm 2 symbol will be displayed.

### Alarm sound not audible or too loud:

Change the alarm volume setting. This setting is changed in the 'alarm setting' sequence.

### No sound/low volume from AUX source:

Check that the volume control is turned up on the AUX source.

### Poor quality radio reception when an iPhone is docked:

You may need to set the iPhone to 'airplane' mode when docked.

## WARRANTY & SPECIFICATIONS

### SPECIFICATIONS

Supply Voltage, Current : 9V ---, 1A

AC Adaptor input:..... 100-240V ~, 0.5A max.

Output power..... 1.2W x 2

Frequency range ..... 174.928-239.200MHz (DAB)  
87.5-108MHz (FM)

Net Weight:..... 1.08kg



Class II construction double insulated.

This product must not be connected to earth.



UK: Waste electrical products/batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities see [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products/batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

### WARRANTY

Your Tesco appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please contact the TESCO electrical help line on 0845 456 6767. Please have your original purchase receipt with you when you call. This warranty in no way affects your consumer rights.





# Technika

Tesco Stores Ltd,  
Delamare Road, Cheshunt, Herts, EN8 9SL

▲ **Technika Helpline: 0845 456 6767** (Calls cost up to 4p per minute from a BT landline, other providers may vary)

CR-1091DAB V0.3

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>