

# Projection Alarm Clock

model 13020 / 13026



## CONTENTS

Unpacking Instructions .....	2	Placement Guidelines .....	8
Package Contents .....	2	Using the Alarm Clock.....	9
Product Registration .....	2	USB Charging.....	9
Features & Benefits: Sensor.....	2	Using the Projector.....	10
Features & Benefits: Alarm.....	3	Backlight Settings .....	10
Setup .....	5	Troubleshooting .....	11
Sensor Setup .....	5	Care & Maintenance.....	12
Alarm Setup .....	6	Specifications.....	13
Setup Preferences .....	7	FCC Information .....	13
Intelli-Time Clock.....	7	Customer Support .....	14
		Warranty.....	14

**Questions?** Contact Customer Support at (877) 221-1252 or visit [www.AcuRite.com](http://www.AcuRite.com).

**SAVE THIS MANUAL FOR FUTURE REFERENCE.**

# ACURITE®

Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

## Unpacking Instructions

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove.

## Package Contents

1. Alarm clock
2. Outdoor sensor
3. Power adapter
4. Instruction Manual

## IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

### PRODUCT REGISTRATION

Register online  
to receive 1 year  
warranty protection

[www.AcuRite.com](http://www.AcuRite.com)

UP NOW

SUPPORT

Support Forum

Archived Products

▶ Register a Product


## Features & Benefits



## OUTDOOR SENSOR

- 1. Integrated Hanger**  
for easy placement.
- 2. Wireless Signal Indicator**  
Flashes when data is being sent to the display unit.
- 3. Battery Compartment**
- 4. A-B-C Switch**  
ID code that must match display's A-B-C switch to ensure units synchronize.
- 5. Battery Compartment Cover**

## Features & Benefits

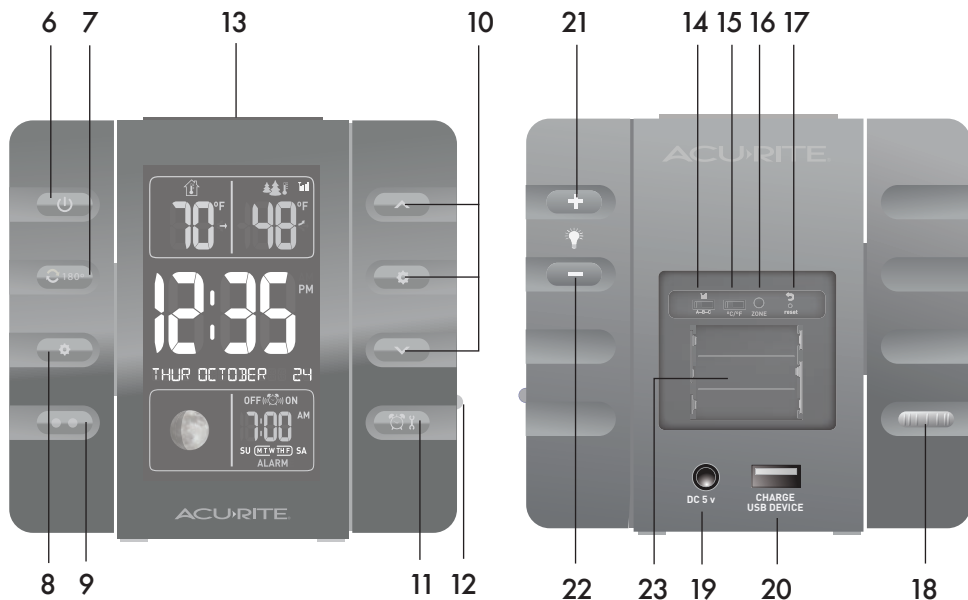

### FRONT OF ALARM

- 6. Projector Power On/Off**
- 7. Flip Projection 180°**  
for versatile viewing angles.
- 8. Projection Information**  
Toggle between time, indoor temperature or outdoor temperature
- 9. Projection Color**  
Toggle between red or amber.
- 10. UP, SET & DOWN Buttons**  
for setup preferences.
- 11. Alarm Setup**
- 12. Alarm On/Off Button**
- 13. Snooze Button**

### BACK OF ALARM

- 14. A-B-C Switch**  
ID code that must match sensor's A-B-C switch to ensure units synchronize.
- 15. °C/ °F Switch**  
Select degrees Celsius or degrees Fahrenheit temperature units.
- 16. Zone Button**  
Set time zone preference.
- 17. RESET Button**  
Full reset to factory defaults.
- 18. Projector Focus**  
Adjust the size and focus of the projected image.
- 19. DC 5v Power Input**
- 20. USB Charging**  
for compatible smartphones.
- 21. + Brightness Button**  
Increase display brightness.
- 22. - Brightness Button**  
Decrease display brightness.
- 23. Battery Compartment**
- 24. Battery Compartment Cover**  
(not shown)

# Features & Benefits



## 1. Current Indoor Temperature

Arrow icon indicates direction temperature is trending.

## 2. Current Outdoor Temperature

Arrow icon indicates direction temperature is trending.

## 3. Intelli-Time® Clock

Pre-programmed to the correct time and automatically updates for Daylight Saving Time.

## 4. Intelli-Time® Date

Pre-programmed to the correct date.

## 5. Moon Phase

## 6. Alarm On/Off

## 7. Alarm Set Time

## 8. Alarm Days Active

Indicates daily alarm or weekday-only alarm setup.

## Sensor Setup

### 1 Set the A-B-C Switch

The A-B-C switch is located inside the battery compartment. It can be set to A, B or C. However, you must select the same letter choices for both the sensor and the display unit in order for the units to synchronize.

### 2 Install or Replace Batteries

AcuRite recommends high quality alkaline or lithium batteries for the best product performance. Heavy duty or rechargeable batteries are not recommended.

The sensor requires lithium batteries in low temperature

conditions. Cold temperatures can cause alkaline batteries to function improperly. Use lithium batteries in the sensor for temperatures below  $-4^{\circ}\text{F}$  /  $-20^{\circ}\text{C}$ .

1. Slide off the battery compartment cover. Take note of the A-B-C switch setting inside the battery compartment for display unit setup.
2. Insert 2 x AA batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
3. Replace the battery cover.



**LITHIUM BATTERIES**  **$-40^{\circ}\text{F}$**  ( $-40^{\circ}\text{C}$ ) (70°C)  **$158^{\circ}\text{F}$**

**ALKALINE BATTERIES**  **$-4^{\circ}\text{F}$**  ( $-20^{\circ}\text{C}$ ) (70°C)  **$158^{\circ}\text{F}$**

# Alarm Clock Setup

## 1 Set the A-B-C Switch


Locate the A-B-C switch inside the battery compartment. Set the A-B-C switch to A, B or C. You must select the same letter choices for both the display unit and the sensor in order for the units to synchronize.

## 2 Plug in Power Adapter

For the best performance, plug in the power adapter as the main power source for this product.

## 3 Install or Replace Backup Batteries

1. Remove the battery compartment cover.
2. Insert 3 x AA alkaline batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
3. Replace the battery cover.

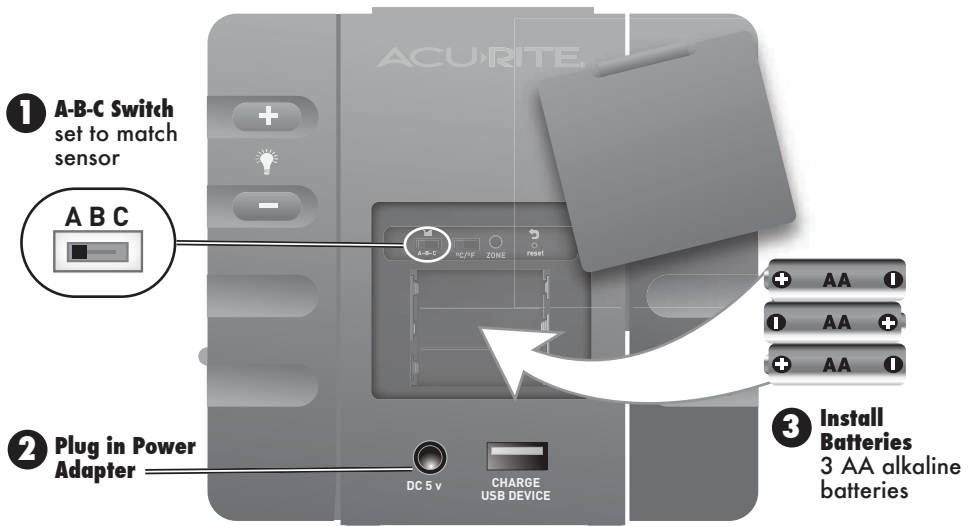

**IMPORTANT:** Batteries are a backup power source to preserve records in the event of a power outage. **Power adapter recommended as the primary power source to enjoy the full functionality of the product.**



**PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.**

**BATTERY SAFETY:** Clean the battery contacts and also those of the device prior to battery installation. Remove batteries from equipment which is not to be used for an extended period of time. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the device. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

## Intelli-Time® Clock

Intelli-Time clock and calendar are pre-programmed to the correct time and date, and update automatically for Daylight Saving Time. All you need to do is select your time zone using the "ZONE" button.

### Set the Time, Date & Language

Press and hold the "⚙️" button, located on the right side of the display, to enter SET MODE. Once in set mode, the preference you are currently setting will blink on the display.

To adjust the currently selected (flashing) item, press and release the "▲" or "▼" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the "⚙️" button to adjust the next preference. The preference set order is as follows:

LANGUAGE (English or French)  
TIME ZONE (PST MST CST EST AST HAST AKST)  
AUTO DST (Automatically adjust time -/+ on DST dates)  
CLOCK HOUR  
CLOCK MINUTE  
CALENDAR MONTH  
CALENDAR DATE  
CALENDAR YEAR

You will automatically exit SET MODE if no buttons are pressed for 5 seconds. Enter setup mode at any time by pressing the "⚙️" button.

### Manual Clock Quick-Adjust

Self-timed clocks may drift by a few minutes over time. You can adjust the time using the "Quick Adjust" feature.

To access "Quick Adjust" mode, press AND HOLD the "▲" OR "▼" buttons for at least 8 seconds. The minutes will flash to indicate they can be adjusted.

Press the "▲" or "▼" buttons to adjust the minutes. After 3 seconds of inactivity, any adjustments will be saved and the clock will return to normal operation.

## Placement for Maximum Accuracy

AcuRite sensors are sensitive to surrounding environmental conditions. Proper placement of both the display unit and outdoor sensor are critical to the accuracy and performance of this product.



### Alarm Clock Placement

Place alarm clock in a dry area free of dirt and dust. To help ensure an accurate indoor temperature measurement, be sure to place the display away from heat sources or vents.




### Outdoor Sensor Placement

Sensor must be placed outside to observe outdoor conditions. Sensor is water resistant and is designed for general outdoor use, however, to extend its life place the sensor in an area protected from direct weather elements.

Hang the sensor using the integrated hang holes or hanger, or by using string (not included) to hang it from a suitable location, like a well covered tree branch. The best location is 4 to 8 feet above the ground with permanent shade and plenty of fresh air to circulate around the sensor.

## Important Placement Guidelines

- To ensure accurate temperature measurement, place units out of direct sunlight and away from any heat sources or vents.
- Display unit and outdoor sensor must be within 330 ft (100 m) of each other.
- To maximize wireless range, place units away from large metallic items, thick walls, metal surfaces, or other objects that may limit wireless communication.
- To prevent wireless interference, place both units at least 3 ft (.9 m) away from electronic devices (TV, computer, microwave, radio, etc.).

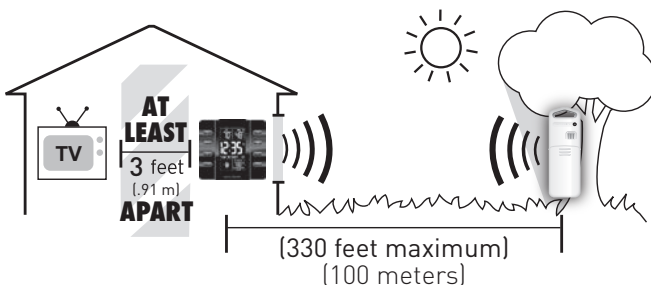

## Setup is Complete

The sensor will now synchronize with the alarm clock. It may take a few minutes for synchronization to complete.



## Using the Alarm Clock

### Set Alarm Time

Press and release the “🕒” button to enter ALARM SET MODE.

To adjust the currently selected (flashing) item, press and release the “^” or “v” buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the “🕒” button to adjust the next preference. The preference set order is as follows:

ALARM CLOCK HOUR

ALARM CLOCK MINUTE

ALARM EVERY DAY or WEEKDAY ONLY SELECTION

You will automatically exit ALARM SET MODE if no buttons are pressed for 5 seconds. Enter setup mode at any time by pressing the “🕒” button.

### Momentary Backlight

During power adapter use, press the Snooze button for momentary backlight at 100% brightness. During battery-powered use, press any button for momentary backlight.

### Moon Phase

Track the phases of the moon, conveyed through simple lunar phase icons.



NEW



WAXING  
CRESCENT



1ST  
QUARTER



WAXING  
GIBBOUS



FULL



WANING  
GIBBOUS



3RD  
QUARTER



WANING  
CRESCENT

### USB Charging

Charge your mobile device by plugging your device's USB power cord (not included) into the USB charging port on the back of the alarm clock.

USB charging is only available during power adapter use; USB charging is not active when operating on battery-power only.

Note: Follow the manufacturer's instructions for your mobile device(s) to determine compatibility with the USB charging feature on this product. Some devices may not support USB charging or may require a higher power rating than this product provides. Observe the charging status on your device. Ensure your device is working properly before attempting to charge.




## Using The Projector

The projector can be rotated to project the time, indoor temperature, or outdoor temperature on a wall or on the ceiling.

Press the projector power button “” to turn the projector ON/OFF.

Press the “ 180°” button to flip the projection image 180° for use on a ceiling or wall.

Press the “” button, located on the left side of the display, to select the information you want to be projected:

CURRENT TIME

INDOOR TEMPERATURE ()

OUTDOOR TEMPERATURE ()

Press the color selection button () to choose between a RED or AMBER projection.

If the projected information is hard to read or blurry, use the “FOCUS” dial on the back of the projector to make the projected image clearer.

NOTES:


- Do not stare into the projector lens directly!
- Do not touch the projector lens.
- Some rough surfaces will not display the projection clearly.

## Display Backlight

Display backlight has 6 brightness levels: 100% (default), 70%, 50%, 30%, 10% and 5%. The backlight will be ON 100% intensity by default, you may adjust the backlight using the dimmer control buttons located on the back of the unit.

**BATTERY POWER NOTE:** The display unit is intended to be plugged in during use with included AC power adaptor; batteries are optional for maintaining settings in case of a power outage. Please note that to conserve backup battery power, the projector and display illumination only activate momentarily for 10 seconds at a time when the unit is powered by batteries alone. The display dimmer option is only available when the unit is plugged in.

# Troubleshooting

<p><b>No outdoor sensor reception</b></p> 	<p>If the wireless signal indicator shows no bars:</p> <ul style="list-style-type: none"> <li>• Relocate the display unit and/or the outdoor sensor. The units must be within 330 ft (100 m) of each other.</li> <li>• Make sure both units are placed at least 3 feet (.9 m) away from electronics that may interfere with the wireless communication (such as TVs, microwaves, computers, etc).</li> <li>• Use standard alkaline batteries (or lithium batteries in sensor when temperature is below -4°F/-20°C). Do not use heavy duty or rechargeable batteries. NOTE: It may take up to 20 minutes for display unit and sensor to synchronize after batteries are replaced.</li> </ul>
<p><b>Alarm clock display seems dark or hard to read</b></p>	<ul style="list-style-type: none"> <li>• Verify power adapter is plugged in.</li> <li>• Increase brightness using +/- buttons, located on the back of the clock.</li> <li>• The optimum viewing angle for this product is from slightly above it.</li> </ul>
<p><b>Alarm clock screen not working</b></p>	<ul style="list-style-type: none"> <li>• Check that the batteries are installed correctly. Batteries may need to be replaced.</li> <li>• Reset the display by pressing the reset button, located on the back of the display unit. Time and date will need to be entered after a reset.</li> </ul>
<p><b>Inaccurate temperature</b></p>	<ul style="list-style-type: none"> <li>• Make sure both the display unit and sensor are placed out of direct sunlight and away from any heat sources or vents (see page 8).</li> </ul>
<p><b>Outdoor temperature is flashing or showing dashes</b></p>	<p>Flashing of the outdoor temperature is generally an indication of wireless interference.</p> <ol style="list-style-type: none"> <li>1. Bring both the sensor and display unit indoors and remove at least one battery from each.</li> <li>2. Make sure the A-B-C switch on both units match.</li> <li>3. Reinstall the battery in the outdoor sensor.</li> <li>4. Reinstall the battery in the display unit.</li> <li>5. Let the units sit within a couple feet of each other for about 20 minutes to gain a strong connection.</li> </ol>

**If your AcuRite product does not operate properly after trying the troubleshooting steps, visit [www.AcuRite.com](http://www.AcuRite.com) or call (877) 221-1252 for assistance.**

# Care & Maintenance

## Display Unit Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.


## Outdoor Sensor Care

Clean with a soft damp cloth. Do not use caustic cleaners or abrasives.

## Replace Intelli-Time Clock Battery

Intelli-Time technology is powered by a pre-installed coin-cell battery that stores the time and date settings. The battery has a shelf life of several years. To replace the Intelli-Time battery:

1. Locate the coin cell battery compartment door on the back of the display unit. Unscrew and remove the compartment cover.
2. Insert 1 x CR2032 coin cell battery into the battery compartment, as shown. Install battery with "+" positive terminal facing OUT.
3. Screw in the battery cover.

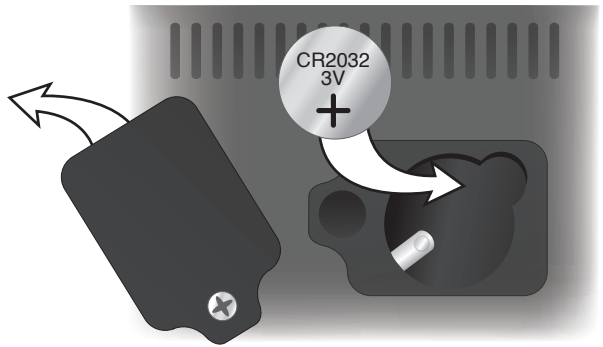

**WARNING: THIS PRODUCT CONTAINS A BUTTON-CELL BATTERY. IF SWALLOWED, IT COULD CAUSE SEVERE INJURY OR DEATH IN JUST 2 HOURS. SEEK MEDICAL ATTENTION IMMEDIATELY IF INGESTED.**



# Specifications

<b>TEMPERATURE RANGE</b>	Outdoor: -40°F to 158°F; -40°C to 70°C
	Indoor: 32°F to 99°F; 0°C to 37°C
<b>WIRELESS RANGE</b>	330 ft / 100 m depending on home construction materials
<b>OPERATING FREQUENCY</b>	433 MHz
<b>POWER</b>	Display: 5v power adapter 3 x AA alkaline batteries (optional)
	Sensor: 2 x AA alkaline or lithium batteries
<b>DATA REPORTING</b>	Outdoor data: 16 second updates Indoor data: 60 second updates

# FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

1- This device may NOT cause harmful interference, and

2- This device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation of the device.

## Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252



info@chaney-inst.com

24/7 support at [www.AcuRite.com](http://www.AcuRite.com)

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Support User Forum
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

## IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

### PRODUCT REGISTRATION

Register online  
to receive 1 year  
warranty protection

[www.AcuRite.com](http://www.AcuRite.com)

UP NOW

SUPPORT

Support Forum

Archived Products

▶ Register a Product

## Limited One Year Warranty

At AcuRite, we proudly uphold our commitment to quality technology. Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase.

We recommend that you visit us at [www.AcuRite.com](http://www.AcuRite.com) for the fastest way to register your product. However, product registration does not eliminate the need to retain your original proof of purchase in order to obtain warranty benefits.

Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase. Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. Transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This

warranty will not be breached, and Chaney will give no credit for products it manufactures which have received normal wear and tear, been damaged (including by acts of nature), tampered, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney.

The above-described warranty is expressly in lieu of all other warranties, express or implied, and all other warranties are hereby expressly disclaimed, including without limitation the implied warranty of merchantability and the implied warranty of fitness for a particular purpose. Chaney expressly disclaims all liability for special, consequential or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Chaney further disclaims all liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of Chaney's products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to assume for Chaney any other liability in connection with the sale of its products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this paragraph, and the preceding paragraph, unless done in writing and signed by a duly authorized agent of Chaney. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For in-warranty claims: Chaney Instrument Co.  
965 Wells St., Lake Geneva, WI 53147



# ACURITE®



Weather  
Stations



Temperature  
& Humidity



Weather  
Alert Radio



Kitchen  
Thermometers  
& Timers



Clocks

*It's More than Accurate, it's ACURITE®.*

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™.

**[www.AcuRite.com](http://www.AcuRite.com)**

©Chaney Instrument Co. All rights reserved. AcuRite is a registered trademark of the Chaney Instrument Co., Lake Geneva, WI 53147. All other trademarks and copyrights are the property of their respective owners. AcuRite uses patented technology. Visit [www.AcuRite.com/patents](http://www.AcuRite.com/patents) for details.

Printed in China  
13020 INST 112713

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>