



myPDFmanuals

 
You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX B2100-4-M. You'll find the answers to all your questions on the AEG-ELECTROLUX B2100-4-M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX B2100-4-M
User guide AEG-ELECTROLUX B2100-4-M
Operating instructions AEG-ELECTROLUX B2100-4-M
Instructions for use AEG-ELECTROLUX B2100-4-M
Instruction manual AEG-ELECTROLUX B2100-4-M

COMPETENCE B2100-4

Built-In Electric Oven

User information

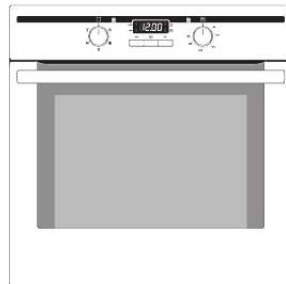

[Your user manual](#)
[AEG-ELECTROLUX B2100-4-M](#)

Manual abstract:

For very moist cakes, use a deep tray. · Do not put any strain on the oven door when open. · Never pour water directly into the oven when it is hot. This could cause damage to the enamel and discoloration. · Rough handling, especially around the edges of the front panel, can cause the glass to break. · Do not store any flammable materials inside the oven. These could ignite when the oven is switched on. · Do not store any moist foods inside the oven. This could damage the oven enamel. Disposal 2 Packaging material The packaging materials are environmentally friendly and can be recycled.

The plastic components are identified by markings, e.g.]PE[,]PS[, etc. Please dispose of the packaging materials in the appropriate container at your local waste disposal facilities. Old appliance 2 1 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Warning: Before disposing of old appliances please make them inoperable so that they cannot be a source of danger. To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance.

W 6 Description of the Appliance General Overview Control panel Door handle Full glass door 7 Control Panel Oven Power Indicator Time display Temperature Pilot Light Clock function butOven Functions Temperature selector Oven Features Top heat and heating elements Oven lighting Shelf positions Fan heating element Fan Oven shelf runners, removable 8 Oven Accessories Shelf For dishes, cake tins, items for roasting and grilling. Grill pan with handle Support for the grill tray as a collecting vessel for fat Grill tray Insert for the grill pan for grilling smaller amounts of food 9 Before using for the first time Setting and changing the current time 3 The oven only operates when the time has been set. When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time flashes automatically. 1. To change the time that has already been set, press the Selection button repeatedly, until the function indicator Time flashes. 2. Set the current time using the or button. After approx. 5 seconds, the flashing stops and the clock displays the time of day set. 3 The appliance is now ready to use.

The time can only be changed if neither of the automatic functions (Cook time or End time) have been set. 10 Initial Cleaning 1 3 Before using the oven for the first time you should clean it thoroughly. Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged. To clean any metal front panels use commercially available cleaning agents. 1. Turn the oven function switch to oven lighting . 2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid. 3. Then wash out the oven with warm water and washing-up liquid and dry.

4. Wipe the front of the appliance with a damp cloth. 11 Operating the Oven Switching the Oven On and Off Oven Power Indicator Temperature Pilot Light Oven Functions Temperature selector 1. Turn the oven functions control knob to the desired function. 2.

Turn the temperature control knob to the desired temperature. The power indicator is lit while the oven is on. The temperature power indicator is lit while the oven is heating up. 3. To turn the oven off, turn the oven functions and temperature control knob back to the OFF position.

3 Cooling fan The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically..



[Your user manual](#)

[AEG-ELECTROLUX B2100-4-M](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>