



HIGH PERFORMANCE STROLLERS

# MP3 Console Instructions



Box Includes:

1 MP3 Console

Requires 2 AAA batteries (not included)

NOTE: MP3 player not included


**WARNING:**  
Remember to turn off speaker power switch when finished.

**WARNING:**  
To prevent theft of MP3 player, do not leave MP3 Console unattended.

The sample product shown on this manual may differ slightly from your production quality MP3 Console. However, this will not affect the assembly or functionality of your Baby Jogger product.

- 1 Insert 2 AAA batteries into battery compartment.
- 2 Fasten snap around handle bar on right side. Repeat on left side.

**NOTE:** There are three different snap locations depending on the shape of your stroller's handlebar. Use the snaps that best fit your stroller.

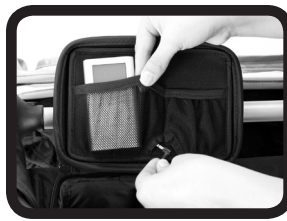

- 3 Place MP3 player in mesh pocket. Thread cord through the bottom opening of mesh pocket.
- 4 Plug cord into MP3 player.

- 5 Slide speaker switch to "ON" position (a green light will appear next to the switch). Turn MP3 player on.



Center console divider can be moved to create a larger storage space or to cover speaker controls.

## To remove speaker box:

- 1 Remove plug from MP3 player and unthread from mesh pocket.
- 2 Unfasten Velcro on bottom of speaker box.
- 3 Unzip speaker box.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>