




CHERRY DOLL HIGH CHAIR

MODEL NUMBER:
01017

Assembly Instructions.
Adult Assembly Required.

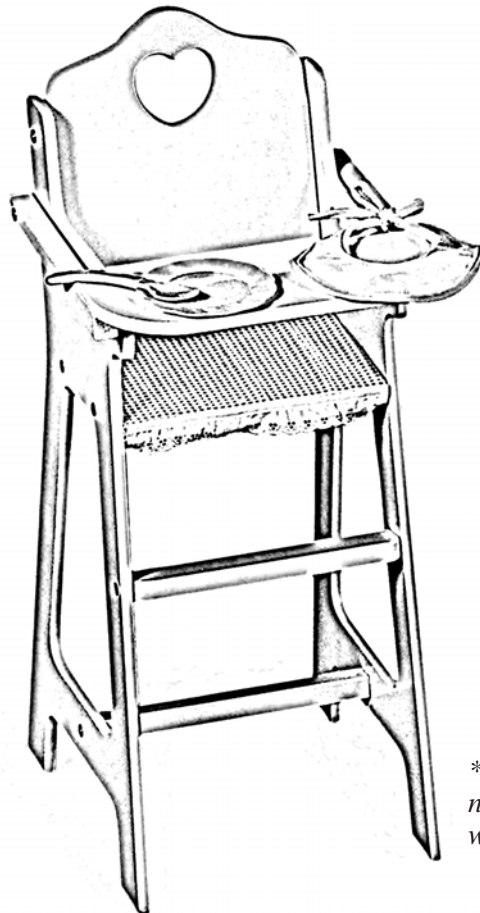

** Toys/accessories shown here are not included. Product may vary from what is shown.*

Visit us online at www.badgerbasket.com

Toll-Free Customer Service: 1-800-236-1310 (Monday to Thursday 7:30 AM-4:30 PM CST)

Web: <http://www.badgerbasket.com/parts> • **E-mail:** parts1@badgerbasket.com

Mail: PO Box 227, Edgar, WI 54426-0227 • **Phone:** 715-352-2311 • **Fax:** 715-352-3163



BEFORE YOU BEGIN ASSEMBLY:

Check all parts and hardware.

If anything is missing or not satisfactory,
please **DO NOT** call the store or return the product to them.

Contact Badger Basket for assistance.

Most problems are resolved without you needing to leave home.

When contacting us, please have this instruction manual, your
product model number, and your product version code ready.

For fastest service, go to

<http://www.badgerbasket.com/parts>

Your Product Version Code is: 1.0/0908/TG



WARNING - CAUTION

READ ALL INSTRUCTIONS before use of this product. Product and/or
Hardware may include small parts or screws with sharp points.

Choking Hazard! Keep unassembled parts out of the reach of small children.

Use only the parts and hardware provided by Badger Basket.

Keep instructions for future use. Do not use the product if it is damaged or
broken. Periodically inspect the product and retighten hardware if needed.


This item is a toy for dolls only. It is never to be used for real children
or pets. **For children ages three (3) years and older.**

TOOLS NEEDED:
Phillips Screwdriver

PARTS INCLUDED:

- (A1) 1 - Left Side Panel*
- (A2) 1 - Right Side Panel*
- (B) 1 - Seat Panel
- (C) 10 - Short Screws
- (D) 1 - Back Panel
- (E) 1 - Tray
- (F) 2 - Long Bolts
- (G) 1 - Foot Rest Rail
- (H) 1 - Bottom Rail
- (J) 2 - Spacer Washers (*not shown*)

*The countersunk hole on each End Panel faces out when assembled. So, this determines which panel is left and which is right.

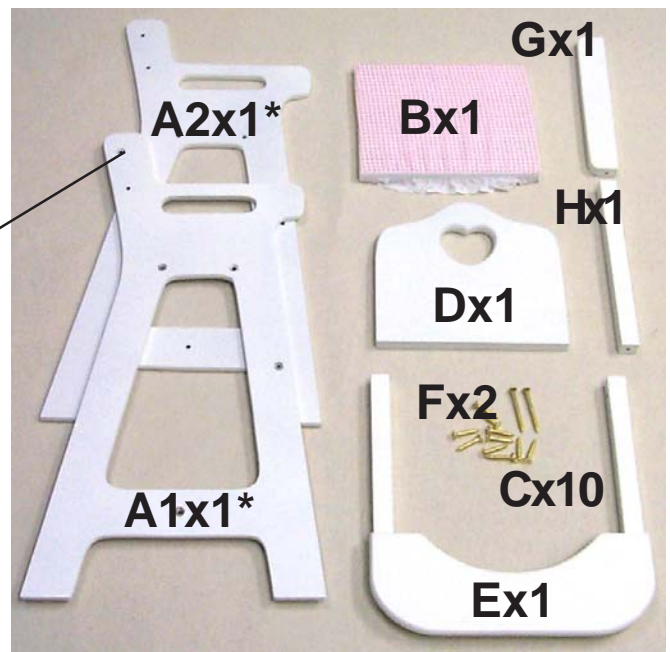

NOTE:
**A WHITE HIGH CHAIR IS SHOWN
IN THE ASSEMBLY PHOTOS.
ALL PARTS AND ASSEMBLY STEPS ARE
THE SAME FOR THE CHERRY MODEL.**

STEP 1 - PICTURE 1: Secure the SEAT PANEL (B), with the fabric side up, between the TWO SIDE PANELS (A1, A2) using FOUR SHORT SCREWS (C).


STEP 2 - PICTURE 2: Secure the BACK PANEL (D) between the TWO SIDE PANELS (A1, A2) using TWO SHORT SCREWS (C) in the TOP HOLES.

STEP 3 - PICTURE 3: Attach the TRAY (E) to the TWO SIDE PANELS (A1, A2) and BACK PANEL (D) using TWO LONG BOLTS (F) and the TWO SPACER WASHERS (J). The spacer washers slip over the bolts BETWEEN the TRAY and the SIDE PANEL so the tray can be lifted and lowered smoothly without rubbing.


STEP 4 - PICTURES 4 & 5: Secure the FOOT REST RAIL (G) and BOTTOM RAIL (H) between the TWO SIDE PANELS (A1, A2) using FOUR SHORT SCREWS (C). Your Doll High Chair is ready!

CARE INSTRUCTIONS:


Wipe the highchair clean with a damp cloth and mild soap as needed. The fabric is poly/cotton. For longevity and to maintain the appearance of the product, we recommend spot cleaning or hand wash and air dry as needed; but you can machine wash cold, gentle cycle, and tumble dry on low if desired.

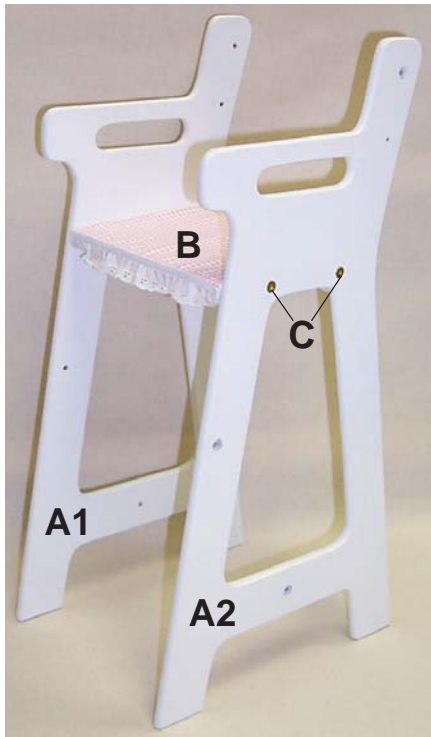


PICTURE 1

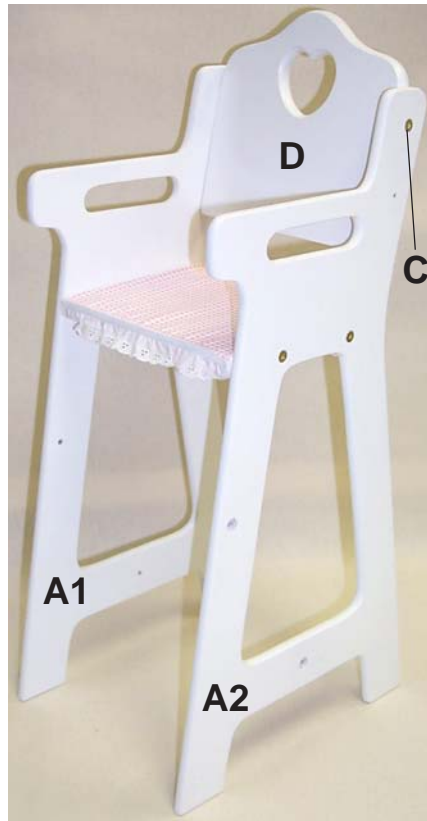

PICTURE 2

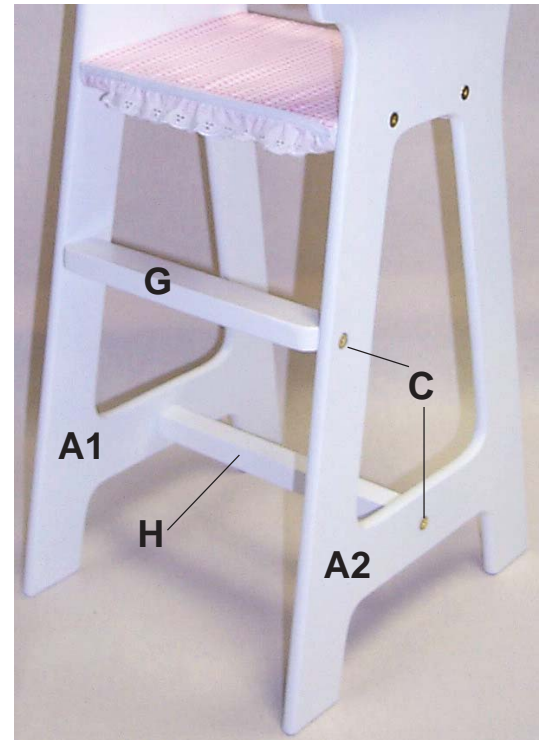

PICTURE 4

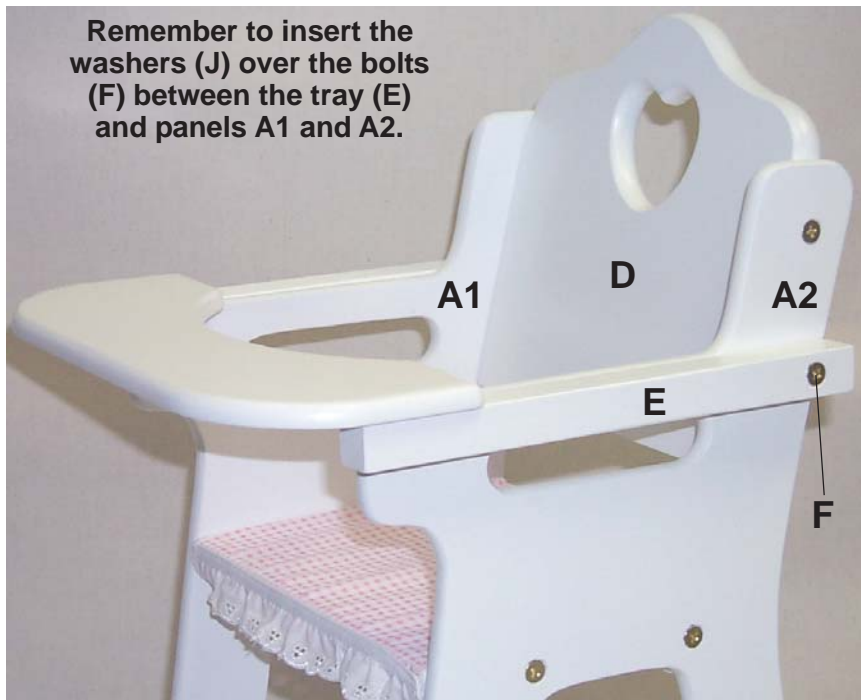

PICTURE 3



PICTURE 5*

** The plate/bib/spoon toys/accessories shown here are for illustration purposes only and are not included with the product.*

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>