

BKK 1169

Hair Straightener

User Manual

BEKO

Read this manual prior to initial operation of the product!

Dear Customer,

We hope that your product, which has been manufactured in modern facilities and passed through a strict quality control procedure, will give you very good results.

We advise you to read through this manual carefully before using your product and keep it for future reference.

The User Manual will help you use your machine in a fast and safe way.

- Read the User Manual before installing and starting your product.
- In particular, follow the instructions related to safety.
- Keep this User Manual within easy reach for future reference.
- Also read all additional documents supplied with this product.

Remember that this User Manual is also applicable for several other models. Differences between models will be identified in the manual.



This product has been produced in environmentally friendly, modern facilities



CONTENT

1 Safety Warnings	2
2 Technical Aspects Of Your Machine	3
3 Using Your Hair Straightener	4-5
4 Maintenance And Cleaning	5

1 Safety Warnings

- Read all of the instructions before use.
- Keep away from water.
- Unplug the device immediately after use in order to reduce the risk of death in case of an electrical shock.
- Do not put the device in a place where it can slide into a sink or a bath or do not keep the device in such a place.
- Do not use it while you are having a bath.
- Do not immerse or drop it into water or in another liquid.
- If your device is dropped, unplug immediately. Never insert your hand into water.
- Never leave the hair straightener device without observation in order to reduce the risk of burn, electrical shock, fire or damage.
- Close observation is required in case of usage of any electrical devices by a child or a handicapped person or near them. Do not let children to play with hair straightener device.
- Use this hair flattener only in the areas mentioned in this manual. Do not use accessories which are not recommended by Beko.
- If the cable or the plug of the hair straightener is damaged, not working properly or dropped into water, never use it. If this hair straightener cable or plug is damaged, it must be changed by only authorized service of Beko.
- Keep the electricity cable away from hot surfaces.
- Do not use on sleeping persons.
- Do not insert or drop any foreign materials from an open part of the hair flattener.
- Do not use in open areas, the places where sprays are used or oxygen is given.
- The plates got extremely hot during usage. Do not let your skin to touch their hot surfaces.
- Do not put the hair flattener on soft surfaces such as bed, carpet or towel. Put it on a hard, smooth surface which can handle heat.
- Keep these instructions.

2 Technical Aspects Of Your Machine

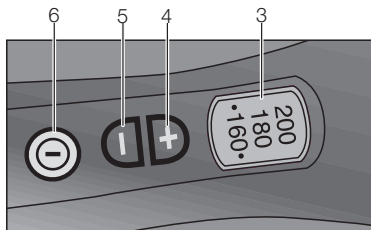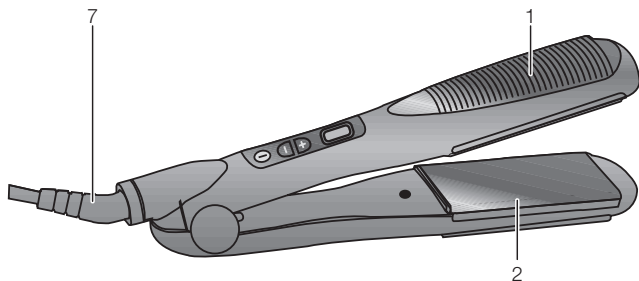

- 1- Holders
- 2- Heating Plates
- 3- Digital heat indicator
- 4- Heat increase button
- 5- Heat decrease button
- 6- On/off button
- 7- Twisting cable at a length of 3 m.

Voltage : 230-240 V

Frequency: 50 Hz

Power: 65 W

Isolation class: II

Values stated on your product labels or in the documentation accompanying it are obtained in laboratory in accordance with the relevant standards. These values may change depending on operational and environmental conditions of the product.

3 Using Your Hair Straightener

Main hair care instructions

For ideal results, wash your hair with shampoo and condition before straightener your hair. Dry your hair well and make sure that they are not wrapped around each other before using the hair straightener.

The digital hair straightener is not appropriate to be used with synthetic wigs and hair extensions.

Usage

Be very careful while using the hair straightener because the device gets hot during the usage. It is important to determine the appropriate heat for your hair before usage in order to prevent your hair to get dry or damaged. If you have any suspicions, start with the lower heat regulation and increase the heat step by step, by using the heat regulation controller, if necessary.

Put the unit on a smooth, hard and heat handling surface carefully. Choose the heat regulation appropriate for your hair type. Start with the lowest heat regulation for thin and damaged hair.

It may be plugged in a house plug (230/240V AC)

When pressed to ON/OFF button for a second, digital heat indicator appears and mentions that the hair straightener gets hot. When the unit is cold, the starting heat is always 160 C which is the lowest working temperature. The black dots on the two sides of the 160 C shows that this temperature is chosen. For 180 C as a higher temperature degree push the '+' button; you will

see that the black dots are passed to this temperature degree. Push '+' button again in order to pass to 200 C which is the highest temperature degree; the black dots will pass to 200 value.

Your hair straightener will be ready in 1-2 minutes due to the temperature that you have chosen.

Hold certain parts of your hair with clips (which are appropriate for the thickness of your hair) from top, middle, back, front and sides in order to make hair styling operation easier.

First straightener the lower layers of your hair and then pass to upper layers. Take a small part of your hair and pull as shown. Hold the hair straightener in one of your hands and clamp your hair between plates starting from the root.

Slide the hair straightener on the part of the hair that is held without stopping. Make sure that you are holding the hair straightener from its holder and cold holding places. Repeat this operation until your hair straightener as much as you want.

Styling Advices

Use gels or hair sprays for a vertical look and while you are straightener your hair pull your hair away from your head in upward position.

In order to have curls at the tips of your hair, divide your hair as explained above. Pull the hair straightener downward from the selected area of your hair up to 10 cm., then turn the hair straightener slightly to your face.

Make sure that you are keeping the straightener away from eyes, nose, hands, neck and facial areas since the plates are very hot.

Slide the hair straightener from top to bottom and turning away from your face at the tips, as mentioned above in order to obtain curly style hair.

Automatic Security Turning OFF sytem

 
Your Hair Straightener has an automatic turning off feature for your security. The hair straightener turns off after a usage for 30 minutes and it enters to the STANDBY (waiting) mode which will appear on the

screen. The device waits in this situation for 15 minutes and the lights remain ON. In this situation electricity do not enter to the device and the plates will not get hot. When you press the ON/OFF button for a second, the hair straightener will continue to work as how you have used before.

- Keep the plates of the hair straightener clean and away from dust, dirt, sprays and hair gels.
- Do not twist the cable around the hair straightener when it is hot.

4 Maintenance And Cleaning

If your device requires cleaning, unplug the unit and rub the outer surface and the plates with a soft cloth. Do not immerse in any liquids. Do not use corrosive cleaning liquids and substances in order to clean plates.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>