

Bushnell®

BACKTRACK™

POINT➤5

GPS

MADE SIMPLE!

NEVER GET LOST AGAIN



Quick Start Guide

 
Model #: 360200

Lit# 98-1586/04-10

Download from www.Somanuals.com. All Manuals Search And Download.

Full Instruction Manual available online at:
www.bushnell.com/manuals/gps

Control & Display Guide

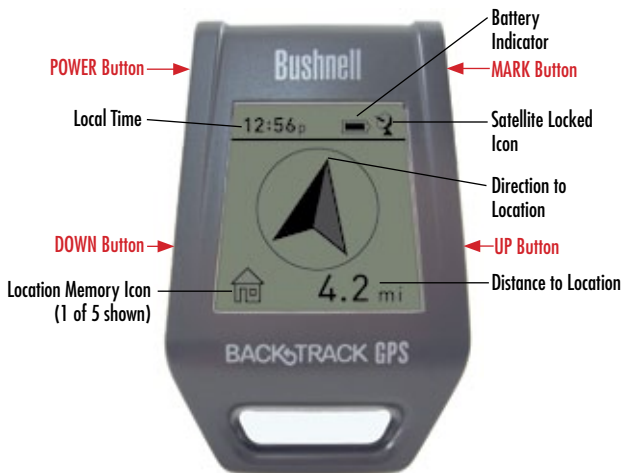

Note: Control Buttons are located on the sides of the BackTrack



Lock Position



Unlock Position

1. Open the battery cover and insert two AAA batteries.



**GPS Satellite
Reception Icon**

 


**Take the
BackTrack
Outdoors**

2. **Hold POWER** button (*until the display appears*) to turn on the BackTrack. When satellite icon stops blinking, it is ready to use (*be sure you are outdoors with a clear view of the sky*).



Press UP

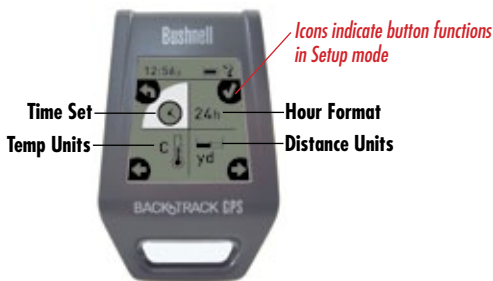

Settings Mode

3. The **Location** screen will display when first turned on. The time is displayed but may need to be adjusted for your time zone. Go to **Settings Mode** to change the time (as well as other units of measurement). Press **UP** button on right side of unit to access **Settings Mode**.

Press MARK

 


Time Set Screen

4. Press the **MARK** button to go to the **Time Set** screen. Press the **UP** or **DOWN** button to set the correct hour. The minutes are automatically set via GPS satellite data. After you've set the hour, press **MARK** to confirm the setting.



5. In **Settings Mode**, you may also change the other unit measurements. Press the **UP** or **DOWN** buttons to highlight the setting. Press the **MARK** button to change the unit measurement. You can change hour (12h to 24h), distance units (yards/miles to meters/kilometers), and temperature units (Fahrenheit to Celsius). Press **POWER** button to exit when done.

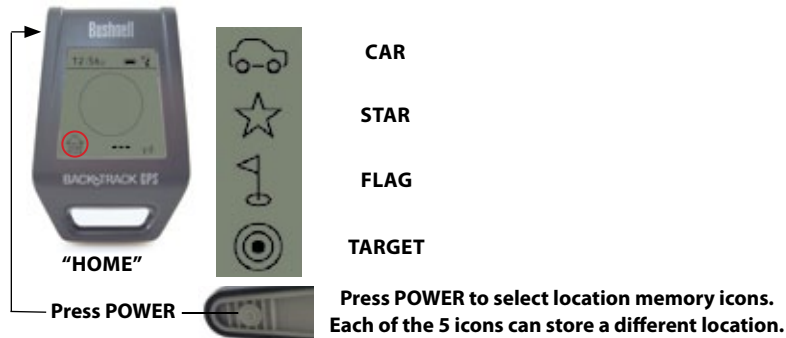

6. On the **Location** screen, the "Home" icon represents one of five location memories. Press the **POWER** button again to select a different location icon (Car, Star, Flag, Target).



Hold MARK



Stand at the location you want to mark as "Home"

Location marked (memorized)-you are "0" yards from "Home"

7. Select an icon you want to use. While you are physically at the location you want to mark (i.e. your campsite), press and hold the **MARK** button until you see the display change as shown at right above, confirming the location is stored. *Note: it does not matter which direction you face when marking a location.*



To mark another location:
1-Select another icon (press POWER)
2-Go to the new location, then MARK the location (hold MARK)



8. Turn **POWER** off or proceed to another location you want to mark. Be sure to select a different icon before marking a new location. If you hold down **MARK** with a previously used location icon still selected, you will replace that one with your current location.

HOLD POWER to turn unit back on.
Display shows distance & direction
to the most recently marked location.



**41 yds distance in the
direction of the arrow to
your car in the parking lot**



POWER

Push POWER to select the icon you used to
store another location. Distance & direction
to it are now displayed.



POWER

**4.2 miles distance in
the direction
of the arrow
to your campsite**

 


*Note: the distance units will
automatically change from "yd" to
"mi" when you are a great enough
distance away from the location.*


9. To return to a marked location, simply turn the BackTrack on and the display will indicate the direction and distance back to the most recent location marked. To return to a previous location, push the **POWER** button to select the icon you used when you marked it earlier. Move in the direction the arrow points and watch for the distance to decrease-when you reach your destination, the "Mark" icon (right) will flash in the center of the display.

Mark icon



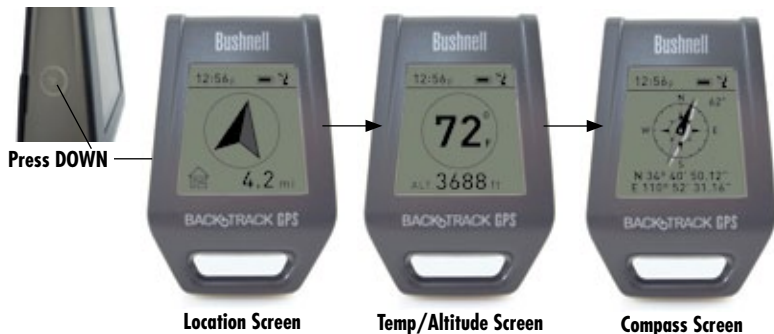

 10. BackTrack Point-5 also provides two additional screens with useful information for outdoor enthusiasts. Press the **DOWN** button while on the **Location** screen. You will see a screen that displays the air temperature and altitude of your current location. Press **DOWN** again to view the **Compass** screen, which displays your current heading in degrees, minutes, and seconds.

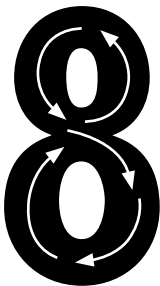

Correct Operating Position



Incorrect Operating Position

To ensure directional accuracy, hold the BackTrack out horizontally in front of you (parallel to the ground) and move it in a "figure 8" pattern a few times to re-calibrate the compass. Your BackTrack should always be held in a horizontal position (not tilted) as shown above when operating the unit and reading the display.

Other Operations

Automatic Distance Units Switching

The BackTrack will automatically switch from yards to miles (or meters to km) for longer distances. It can display up a maximum distance of 999 miles or kilometers.

Auto Power Off

Power automatically turns off after 5 minutes if no buttons have been pressed. Or you may hold down the **POWER** button to turn the unit off manually. When the BackTrack is turned back on, it returns to the last Location screen you used.

Turning on the Backlight

Push the **MARK** button to turn on the display backlight at anytime. It will automatically turn off about 30 seconds later. The backlight also comes on briefly when the unit is first powered on.



Warnings and Notices

GPS System & Location Accuracy Notice:

The Global Positioning System (GPS) is operated by the government of the United States, which is solely responsible for its accuracy and maintenance. The system is subject to changes which could affect the accuracy and performance of all GPS equipment. The inherent nature of the GPS system itself limits the accuracy of the distance indicated on the BackTrack's display to within about $\pm 3\text{--}5$ meters (or yards) of the actual marked location.

Warning:

This device is intended as a supplemental handheld navigation aid only. The user assumes all responsibility associated with the use of this product. It must not be used for any purpose requiring precise measurement of location, direction, distance, velocity or topography. This device should not be used for any aircraft navigation applications.

Vehicular Use Notice:

Bushnell is committed to the safe and responsible enjoyment of the outdoors.

Do not use this product while driving. An accident can result in property damage, injury or death if the operator fails to practice prudent driving practices. It is the sole responsibility of the driver of any vehicle to operate the motor vehicle in a safe manner. Information from the GPS unit can distract the operator of a motor vehicle. It is unsafe to operate the controls of the GPS unit while operating a motor vehicle. If used in a motor vehicle, it must not be used by the operator of the motor vehicle. If it is used in a motor vehicle it must be mounted in a manner such that it does not distract the operator, does not interfere with the operator's field of view, and does not block or interfere with the air bags or other safety mechanisms of the motor vehicle. Windshields and car windows with integrated metallic materials, such as defrosters, or car window tinting films, can degrade GPS reception inside a car.

Liability Notice:

In no event shall Bushnell be liable for any incidental, special, indirect or consequential damages, whether resulting from the use, misuse, or inability to use this product or from defects in the product. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

ONE YEAR LIMITED WARRANTY

Your Bushnell® BackTrack™ GPS unit is warranted to be free of defects in materials and workmanship for one year after the date of purchase. In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than a Bushnell Authorized Service Department.

Any return made under this warranty must be accompanied by the items listed below:

- 1) A check/money order in the amount of \$10.00 to cover the cost of postage and handling
- 2) Name and address for product return
- 3) An explanation of the defect
- 4) Proof of Date Purchased
- 5) Product should be well packed in a sturdy outside shipping carton, to prevent damage in transit, with return postage prepaid to the address listed below:

IN U.S.A. Send To:

Bushnell Outdoor Products
Attn.: Repairs
8500 Marshall Drive
Lenexa, Kansas 66214

IN CANADA Send To:

Bushnell Outdoor Products
Attn.: Repairs
25A East Pearce Street, Unit 1
Richmond Hill, Ontario L4B 2M9

For products purchased outside the United States or Canada please contact your local dealer for applicable warranty information. In Europe you may also contact Bushnell at:

Bushnell Germany GmbH
European Service Centre
Mathias-Brüggen-Str. 80
D-50827 Köln
GERMANY
Tel: +49 221 995568-0
Fax: +49 221 995568-20

This warranty gives you specific legal rights.
You may have other rights which vary from country to country.

©2010 Bushnell Outdoor Products

Bushnell®

**Full Instruction Manual available online at:
<http://www.bushnell.com/manuals/gps>**

Bushnell Outdoor Products
9200 Cody, Overland Park, Kansas 66214
(800) 423-3537 • www.bushnell.com

©2010 Bushnell Outdoor Products

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>