

Canon

EOS REBEL T5i EOS 700D

Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and play back images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS REBEL T5i/EOS 700D Instruction Manual.



English

CPQ-E063-000

© CANON INC. 2013

Quick Start Guide

- 1** **Insert the battery.**
- 2** **Insert a SD card.**
- 3** **Attach the lens.**
Align the lens' white or red index with the camera's index in the matching color.
- 4** **Set the lens focus mode switch to <AF>.**
- 5** **Set the power switch to <ON>, and set the Mode Dial to <A+> (Scene Intelligent Auto).**

- 6** **Flip out the LCD monitor.**
 - 7** **Focus the subject.**
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.
 - 8** **Take the picture.**
Press the shutter button completely to take the picture.
 - 9** **View the image.**
The captured image will be displayed for 2 sec. on the LCD monitor.
- The ☆ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M).
 - Battery Life with Viewfinder Shooting**
- | | | |
|----------------|-------------------|-------------------|
| Temperature | No Flash | 50% Flash Use |
| At 23°C / 73°F | Approx. 550 shots | Approx. 440 shots |

Image Playback

Index

Magnify

Select image

Playback

Erase

INFO. Shooting information

Preparation

Menu Operations

<MENU> button

LCD monitor/Touch screen

<SET> button

Cross keys

- Press the <MENU> button to display the menu.
- Press the <◀▶> key to select a tab, then press the <▲▼> key to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.

Basic Zone Modes

Movie Shooting

Creative Zone Modes

Menu items

Menu settings

Image-Recording Quality

- Select [Q1: Image quality], then press <SET>.
- Press the <◀▶> key to select the quality, then press <SET>.

Image-recording quality

Recorded pixels

Possible shots

Picture Style ☆

- Press the <▼▲> button.
- Press the <◀▶> key to select the Picture Style, then press <SET>.

Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <F&N> (Neutral) and <F&F> (Faithful), refer to the camera's instruction manual.

Quick Control

- Press the <Q> button.
- The Quick Control screen will appear.

Basic Zone Modes

Creative Zone Modes

Shooting mode

Exposure compensation/AEB setting

Picture Style

AF operation

White balance

Return

Drive mode

White balance correction

Shutter speed

Aperture

ISO speed

Flash exposure compensation

Auto Lighting Optimizer

Built-in flash settings

Image-recording quality

White balance bracketing

Metering mode

- In Basic Zone modes, the settable functions differ depending on the shooting mode.
- Press the <◀▶> key to select a function, then turn the <🔄> dial to set it.

Touch Screen

- The LCD monitor is a touch-sensitive panel that you can operate with your fingers.
- For information on touch screen operations, see the camera's instruction manual.

Custom Functions ☆

C.Fn I: Exposure

- Exposure level increments
- ISO expansion

C.Fn II: Image

- Highlight tone priority

C.Fn III: Autofocus/Drive


- AF-assist beam firing
- Mirror lockup

C.Fn IV: Operation/Others


- Shutter/AE lock button
- Assign SET button
- LCD display when power ON

Shooting Operation


Nomenclature

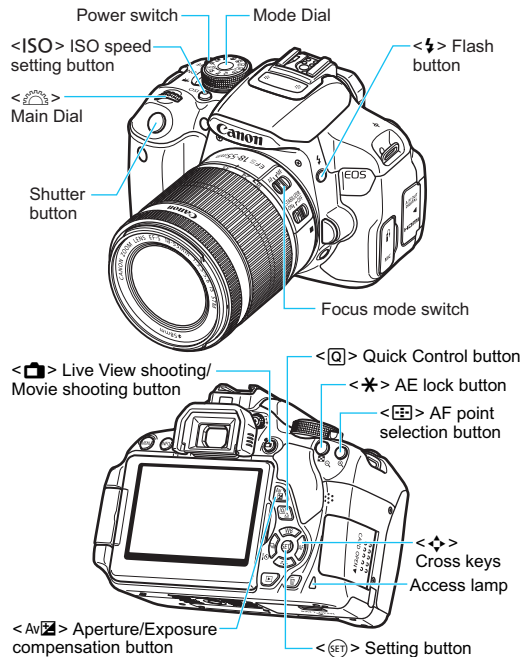

Shooting Settings

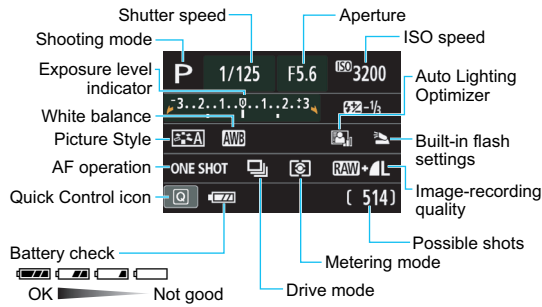

Viewfinder Information

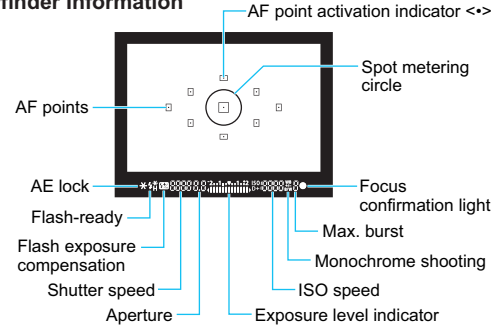

Basic Zone Modes



All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.

- Scene Intelligent Auto
 - Flash Off
 - Creative Auto
 - Portrait
 - Landscape
 - Close-up
 - Sports
 - SCN Special scene
 - Night Portrait
 - Handheld Night Scene
 - HDR Backlight Control
- At the <SCN> position, press the <Q> button, select the shooting mode icon with <+> key, and turn the <DIAL> dial to set the shooting mode.


Using the Built-in Flash

Basic Zone Modes


If necessary, the built-in flash will be raised and fire automatically in low-light or backlit conditions (except in the <M> <A> <S> <P> <Av> <M> modes).

Creative Zone Modes

- Press the <Flash> button to raise the built-in flash, then shoot.

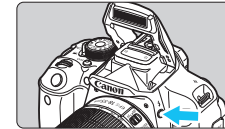

Creative Zone Modes

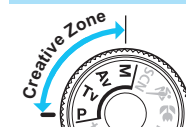

You can change the camera settings as desired to shoot in various ways.

P: Program AE

The camera automatically sets the shutter speed and aperture in the same way as the <A+> mode.

- Set the Mode Dial to <P>.

Tv: Shutter-priority AE



- Set the Mode Dial to <Tv>.
- Turn the <DIAL> dial to set the desired shutter speed, then focus the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <DIAL> dial until it stops blinking.

Av: Aperture-priority AE

 


- Set the Mode Dial to <Av>.
- Turn the <DIAL> dial to set the desired aperture, then focus the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <DIAL> dial until it stops blinking.

AF: AF Operation



- Set the lens focus mode switch to <AF>.
- Press the <AF> button.
- Press the <AF> key or turn the <DIAL> dial to select the AF operation, then press <SET>.



ONE SHOT (One-Shot AF): For still subjects



AI FOCUS (AI Focus AF): Switches the AF operation automatically

AI SERVO (AI Servo AF): For moving subjects


AF Point




- Press the <AF point selection> button.
- Press the <+> key to select the AF point.
- While looking through the viewfinder, you can select the AF point by turning the <DIAL> dial until the desired AF point flashes in red.
- Pressing <SET> toggles the AF point selection between the center AF point and automatic AF point selection.

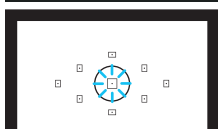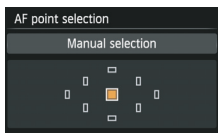


ISO: ISO Speed

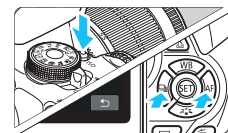


- Press the <ISO> button.
- Press the <+> key or turn the <DIAL> dial to select the ISO speed, then press <SET>.
- When [AUTO] is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting is displayed.

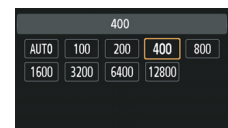


Drive Mode

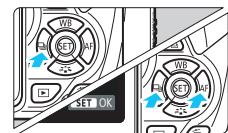

- Press the <Drive Mode> button.
- Press the <+> key or turn the <DIAL> dial to select the drive mode, then press <SET>.
- : Single shooting
- : Continuous shooting
- ⌚: Self-timer: 10 sec./Remote control
- ⌚: Self-timer: 2 sec.
- ⌚: Self-timer: Continuous

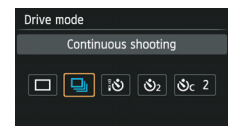

Live View Shooting

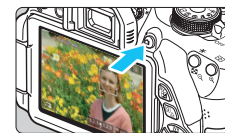

- Press the <Live View> button to display the Live View image.



- Press the shutter button halfway to focus.




- Press the shutter button completely to take the picture.


Battery Life with Live View Shooting

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 200 shots	Approx. 180 shots


Shooting Movies

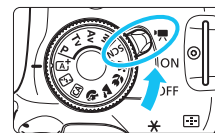

- Set the power switch to <Movie>.
- Set the Mode Dial to any shooting mode except <M>.

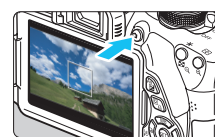

- Press the <Movie> button to start shooting a movie.
- To stop movie shooting, press the <Movie> button again.

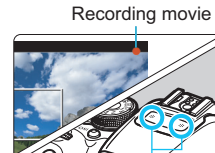

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>