

COBY DVD727 (DVD627+ CSP94)

IMPORTANT PLEASE READ!

COMMON TROUBLESHOOTING ISSUES

ISSUE #1 NO PICTURE

Make sure your TV is turned to the correct Video line (AV Input/Video Input 1,2,3.etc). Consult the TV manufacture if you need help setting the TV to the correct Video line. If you are going through a cable box, contact your cable provider or the cable manufacture. Once your TV is turned to the correct video line, you should see the "COBY" logo.

ISSUE #2 ROLLING, COLORLESS SCREEN

Make sure the Yellow Video wire is connected into the Video connection on the DVD player and on the TV

ISSUE #3 HAD A COLOR PICTURE, NOW RECEIVING A BLACK AND WHITE OR A ROLLING SCREEN

The DVD has been set to the incorrect broadcast system. Press the N/P button on the remote to select the correct broadcast system (make sure you do not have a disk in the tray while pressing the N/P button). NTSC is for the United States TV broadcast system

ISSUE #4 NOT ALL SPEAKERS ARE FUNCTIONING

This unit comes with-

5 Black prong cable (speaker wires)-

Connect these wires to the speakers and into the subwoofer OUTPUT.

1 Cable (Green, Black and Orange prongs)-

Connect one end of the Green, Black and Orange cable to the subwoofer INPUT as follows; Green prong connects to the L/R. Black prong connects to the SL/SR. Orange prong connects to the C/SUB.

Connect the other end of this cable, to all 3 of the Red and White adaptors

3 Adaptors (Red and White prongs)-

The Green prong with the Red and White adaptor connects to the FL & FR.

The Black prong with the Red and White adaptor connects to the SL/SR.

The Orange prong with the Red and White adaptor connects to the C/SUB.

Make sure the DVD player Analog Out Audio Setting is 5.1 Channel. (See user manual under "AUDIO SETUP).

***** You will receive sound through all speakers, when playing a DVD formatted in **5.1 Channel** Sound. You will only receive sound through the 2 main speakers and the subwoofer when playing a CD formatted in **Stereo** sound.

ISSUE #5 PICTURE FADES DARK TO LIGHT

You cannot connect the DVD through your VCR, TV/VCR combo, Cable or Satellite.

If you cannot connect directly to the TV via a Yellow Video input, then you will need to purchase an RF Modulator and a four-foot Coaxial wire at your local electronics store.

ISSUE #6 HAD PICTURE, NOW RECEIVING A BLACK OR BLUE SCREEN

The DVD player may be set to Progressive Scan Mode. You will need to change the Video mode from Progressive Scan to Composite. Make sure you DO NOT have a disk in the DVD tray. On the remote control press the P.SCAN/NORMAL button once, and then press the MODE button three times

*******RESET THE DVD PLAYER BACK TO THE DEFAULT SETTING*******

Make sure you do not have a disk in the tray. Using the DVD player remote control:

- 1) Press the "Setup" button.
- 2) On the "Down" arrow, press it three times.
- 3) On the "Right" arrow, press it once.

- 4) On the “Down” arrow, press it three times.
- 5) On the “Right” arrow, press it once, then press “Enter”.
- 6) Press the Setup button.

*The default setting will take affect as soon as you press the setup button (step 6).

If you are still having difficulty setting up your new DVD player, please contact Customer Service or Technical Support, Monday-Friday 8:00 AM – 11:00 PM EST, Saturday and Sunday 9:00 AM – 11:00 PM EST. You can also reach us online at customerservice@cobyusa.com or techsupport@cobyusa.com

1-800-681-2629 OR 718-416-3197

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>