

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug it immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or people with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Do not use an extension cord to operate appliance.
5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
6. Keep the cord away from heated surfaces.
7. Do not pull, twist, or wrap line cord around appliance, even during storage.
8. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
9. Never use while sleeping.
10. Never drop or insert any object into any opening or hose.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. This curling iron and clip are hot when in use. Do not let eyes or bare skin touch heated surfaces.
13. **Do not place the heated iron directly on any surface or on the appliance power cord while it is hot or plugged in. Use the built-in counter rest.**
14. Do not touch the hot surfaces of this appliance. Use the handles or knobs.
15. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.
16. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current (50/60 hertz) only. This unit is designed to be operated at 120/240 volts AC.

This appliance has a polarized plug (one blade is wider than the other.) As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This appliance has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug with correct configuration, prior to use in outlet.

GETTING STARTED

The iron's 25 temperature settings and instant heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or coarse hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need!

CURLING BASICS


1. Plug the curling iron cord into any household outlet (120/240V). Press ON button; light will begin to flash. The light will remain on when unit is ready to curl. The iron will heat up very quickly. To turn off, press OFF button (light will go off). Never leave your curling iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically with 60 minutes.
2. Section dry hair evenly, and comb each section before winding. Pressing the automatic curl release, place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Release automatic curl release to hold hair in place. Gently slide curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl. Remember, always place the spoon above the hair strand when making a curl you want rolled under; place the spoon under the hair strand when making a flip style.

3. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold in place for 5-7 seconds, depending on the texture and length of your hair. For tighter, bouncier curls, roll less hair. For looser, free-flowing curls, roll more hair.
4. To remove curling iron, unwind the hair and press the automatic curl release. To set the curl, do not comb or brush hair until it cools.
5. Use of the brush sleeve attachment is very easy to master. When the unit is cool, slide the brush sleeve over the iron prior to pressing the ON button. Roll one section of hair at a time around the hot styling brush from the bottom up. **TO AVOID TANGLING, NEVER ROLL THE HAIR AROUND THE HOT STYLING BRUSH MORE THAN TWO TIMES.** When hair is warm (not hot) to the touch, the curl is set. For hair that is harder to curl, leave the hot styling brush in place a little longer. A hot styling brush generally gives a lighter curl than a curling iron – for very hard to curl hair, try switching to the curling iron.
6. The brush sleeve can be used for quick touch-ups. After heating the brush sleeve, simply brush the hair back to its original style. To change the style, mist the hair lightly with water before using the hot styling brush. No combing is necessary!
7. For soft, spiral curls, use the spiral sleeve attachment. Slide the spiral sleeve onto the barrel when the barrel is cool, before heating up the appliance.
8. To achieve faster styling results we have added a unique Turbo Heat™ on/off feature. Press the optional turbo button to deliver up to 36°F more heat in the highest setting for maximum styling performance.

HOW TO CHANGE STYLING HEADS:

Changing styling heads is easy.

1. Make sure appliance is cool.
2. Turn locking dial to the right to the release position to unlock.
3. Pull attachment straight off.
4. To put new attachment on power handle, make sure counter rest faces in opposite direction of switch and light.
5. Push attachment into power handle. Counter rest should be flush against locking dial.
6. Turn locking dial to the left to lock securely into place.

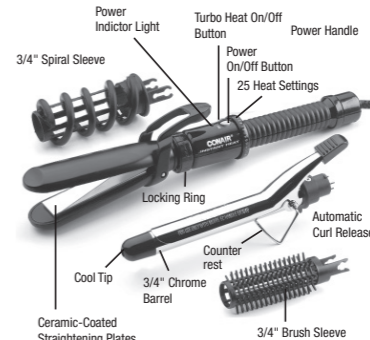

WARNING: The iron's barrel and straightening plates will get very hot within a few seconds and should not be placed in contact with the skin after the curling iron is turned ON.

Temperature Setting Guide

TEMP. CONTROL	HAIR TYPE
Low 1-8	Delicate, thin, easy-to-style hair
Medium 9-14	Average to thick or treated hair
Med-High 15-20	Thick or wavy hair
High 21-25	Hard-to-style hair
Turbo Heat™	Up to 20°C/36°F burst of heat for difficult styling spots

TO STRAIGHTEN HAIR

To straighten hair, attach straightener styling head with ceramic-coated plates. The ceramic coating provides even heat distribution for maximum styling results. Start with a hair section that is 2" wide and no more than 1/2" thick. Open the straightener and place a hair section between the two hot plates, close to your scalp, with caution as plates are hot. Trap hair between plates, by firmly squeezing the handles together. While maintaining the tension, slowly pull the unit down along the hair section toward end of hair. At the end of the hair section, release the pressure on the handle and allow the hair section to slide out. Continue this process on additional sections of hair until you achieve the hair style you desire.

For extra styling, turn the straightening iron under when nearing the end of the hair section. This will give a nice flip to your hair.

After a few uses, you will learn the ideal way to straighten and style your hair easily.



TO WAVE

For flowing waves, separate a wider section of hair than you normally do for curling, and roll it as you usually do. For best results, hair should be at least 6-8 inches long.



FOR TOUSLED HAIR

Create soft, tousled waves by curling each hair section in a random direction. Then, turn head upside down, shake, and gently scrunch hair with fingers. Bring head back to position and repeat for fullest volume.

WIDE WAVES

Pick up a section of hair and place the curling iron under it, close to the scalp, making half a turn downward. Remove the curling iron. Working with the same hair section, start where you left off and place the curling iron on top of the hair, curling it up half a turn. Proceed down the same hair section, alternating the curl upward and downward. Repeat procedure with remaining sections of hair. For best results, hair should be about 6-8 inches long.

FOR SPIRAL CURLS AND RINGLETS

Attach spiral sleeve to the 3/4" curling iron barrel and attach 3/4" iron to power handle. Work with 1" sections of hair, one at a time. Hold iron horizontally, press the automatic curl release button, and place the ends of your hair under the shortened iron spoon. Release the automatic curl release to clamp hair in place. Wrap hair around the barrel, twisting like a barber pole; continue toward scalp. Leave hair wrapped for approximately 5-7 seconds. Unwind hair from barrel; open the automatic curl release to unclamp hair. Repeat procedure, styling small sections at a time, layering the spiral curls as you go, until all hair is curled.



USER MAINTENANCE

Your curling iron is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the curling iron from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the curling iron, allow it to cool, and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling iron. Damage will occur at the high flex point of entry into the curling iron, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool and stored in a safe, dry location out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

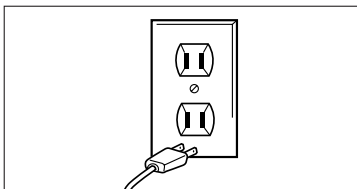

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



Service Centers

Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2007 CONAIR CORPORATION
150 Milford, Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

07PC2019

IB-7427

CONAIR®

4-in-1 Instant Heat Styling Kit



Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

Model CB890QCS

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>