



DAKOTA ALERT

Wireless Alarms & Security Equipment



AD-01 Kit Auto Dialer

Owner's Manual





Warnings:

This device complies with Part 15 of the FCC rules, Operation of this device is subject to the following conditions: 1. This device may not cause harmful interference. 2. This device must accept any interference, including interference that may cause undesired operation.

Features:

Wireless alarm; programmable entry/exit delay time; two separate dialer alarms, alarm and panic; select up to 9 (32 digit) user programmable phone numbers for each alarm; different 10 second recordable message for each alarm; arm/disarm using keypad or remote keyfob; wireless panic; built-in tamper switch; built-in terminal block for alarm and siren connection; DC adaptor with battery back-up; programmable as silent alarm (dialer only) or audible (siren + dialer).

Contents:

- 1 - Auto Dialer
- 2 - RF PIR Sensor
- 2 - RF Keyfob
- 1 - 12V DC Adaptor
- 1 - Installation & Programming Guide
- 1 - Telephone Cable
- 1 - Back-up Battery



IMPORTANT

Before you install the PIR Detectors, please take these points into consideration:

Don't position the detectors facing windows.

Don't position in direct sunlight.

Don't position above heat sources or in areas of moisture.

Don't let pets roam into the detection area when the system is armed.

The PIR Sensor is set to Alarm 2 so take this into account when you are programming your voice messages.

Opening the PIR Sensor to access dipswitches and battery connector:

1. Slide the PIR Sensor off the bracket (use the bracket as a template for mounting.)
2. Using a small standard screwdriver, press the release clip on the bottom of the PIR Sensor.
3. Separate the two parts.

Opening the RF Keyfob (only necessary when it is time to change the battery):

1. Using a small Phillips screwdriver, remove the screw from the back of the keyfob.
2. Take a small standard screwdriver and place in groove separating the two keyfob halves.
3. Slowly twist and the keyfob housing should separate.



Installation

Tools needed: Small Phillips Screwdriver;
Large Phillips Screwdriver; Small Standard Screwdriver.

Set Up:

1. Set PIR and AD-01 dipswitches to match. The first five dipswitches on both units (Figure 1 - 1 and Figure 2 - 1) need to be set exactly the same with the last 3 dipswitches set to "off". (Note: On the PIR sensor, "off" is in the down position. On the Dialer, "off" is in the up position.)


2. Install battery in PIR sensor (Figure 1 - 2) and mount at desired location. (Note: recommended to replace batteries every 6 months.)

3. Plug the supplied phone cord into the "LINE" jack (Figure 2-5) and then into your home phone jack. If you wish to connect a phone at the dialer location, you can connect the phone to the "PHONE" jack (Figure 2-6) on the dialer.

4. (Note: please read all of step 4 before continuing). Remove the battery insulator by pulling the tab on the keyfob. Plug the DC adaptor into the dialer (Figure 2 - 3) and plug into wall outlet. Wait 20 seconds. You now have 30 seconds to teach the dialer. Press the RECORD button (Figure 3 - 3) on the dialer and the display will show "learning 0." Press any key on the RF Keyfob. The display will then show "learning 1" followed by a BEEP to confirm that it has learned the first keyfob. You then have another 30 seconds to teach it another keyfob ("learning 2") and so on up to 5 keyfobs.

4

Figure 1

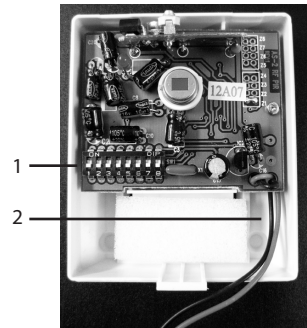



5. (Note: Tamper switch (Figure 2-4) arms automatically when depressed and will cause alarm 1 to activate when released. Disarm by entering password code 1234 into dialer followed by the ESC button or by using the OFF button on the keyfob). Install the back-up battery (included) into the dialer. Use a small Phillips screwdriver to remove screw above battery cover (Figure 2 - 2). Remove cover by sliding downwards. Plug in 9V battery making sure not to force onto battery holder incorrectly. Put 9V battery in space provided, close battery cover, and replace the screw.

Figure 2


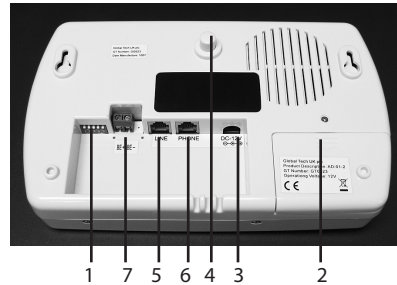


Figure 3



6. The BE+ and BE- terminals (Figure 2-7) are a 12VDC, 150mA (maximum) voltage output which can be used to power an external bell or whistle when the dialer is activated.

7. Continue on to the Advanced Operations to program your dialer or refer to the "AD-01 Quick Reference Programming" on page 14.

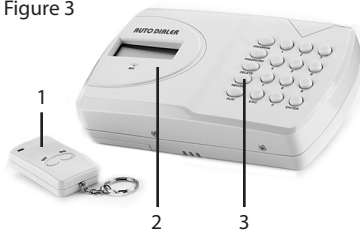

Advanced Operations

HOW TO PROGRAM THE AUTO DIALER

*If no key is pressed for 30 seconds, the dialer will automatically exit the programming mode.

Notice: The system must be in the OFF mode for all programming.

How to record the voice messages:

Alarm 1 = Tamper and panic alarm. Alarm 2 = PIR sensors and hard-wired input.

1. Key in the four digit user password code (factory default is 1234.)
2. Press RECORD.
3. Press **1** (to save as the message for alarm 1) or **2** (to save as the message for alarm 2).
4. Press ENTER to start recording your 10 second message.
5. Press ENTER to stop the recording early or wait for the 10 seconds to end.

Quick guide: Press 1 2 3 4 > RECORD > 1 > ENTER, record message now

How to play back the message:

Press 1 2 3 4 > PLAY > 1 > ENTER to play back the recorded message.

(Notice: 1 = the first message, 2 = the second message).

How to program phone numbers:

You can enter a maximum of nine telephone numbers for the alarms. Each number can be a maximum of 32 digits. (If you are using this Auto Dialer on an office/work phone system you may have to enter 9 before the number to get a line out.)



1. Key in the four digit user password code (factory default is 1234.)
 2. Press PROGRAM > 3 > ENTER.
 3. The number you press next will select the position in the sequence you want that telephone number to dial (*1 = first number called, 2 = second number called, and so on*).
 4. Press ENTER and key in the first telephone number.
 5. Press ENTER to exit the programming mode.
 6. Repeat the process until you have entered all the numbers you wish the Auto Dialer to call once it has been activated (maximum 9 different numbers.)
- Quick guide: Press 1 2 3 4 > PROGRAM > 3 > ENTER > 1 > ENTER > *Telephone #* > ENTER

How to delete phone numbers:

1. Key in the four digit user password code (factory default 1234.)
 2. Press PROGRAM > 3 > ENTER.
 3. Press *N* (*N = 1 for the first number called; 2 for the second number called; etc.*)
 3. Press ESC to exit the programming mode.
- Quick guide: Press 1 2 3 4 > PROGRAM > 3 > ENTER > *N* > ESC

How to designate telephone numbers to ALARM 1 and ALARM 2:

1. Key in the four digit user password code (factory default 1234.)
 2. Press PROGRAM > 6 > ENTER.
 3. Press *X* (*X = 1 for alarm 1; 2 for alarm 2*). Press ENTER.
 4. Press *N* (*N = 1 for first phone number; 2 for second phone number, etc.*). Press ENTER.
 5. Repeat the process to designate any other numbers to each alarm.
- Quick guide: Press 1 2 3 4 > PROGRAM > 6 > ENTER > *X* > ENTER > *N* > ENTER



How to change the user password code (factory default is 1234):

1. Key in the four digit user password code (factory default 1234.)
 2. Press PASSWORD
 3. The LCD will change to n-p.
 4. Key in your new four digit user password code.
 5. The LCD will change to c-p.
 6. Key in your new four digit user password code again.
 7. The LCD will change to acc.
- Quick guide: Press 1 2 3 4 > PASSWORD > *New Code* > *Confirm New Code*

How to program the Auto Dialer to give an audible alarm as well as sending a voice message (factory default is alarm ON):

1. Key in the four digit user password code (factory default 1234.)
 2. Press PROGRAM > 1 > ENTER
 3. Press *N* (*N = 0* for without audible alarm, *1* for with audible alarm). Press ENTER.
- Quick guide: Press 1 2 3 4 > PROGRAM > 1 > ENTER > *N* > ENTER

How to set the time the alarm will sound on activation (default time is 3 minutes):

1. Key in the four digit user password code (factory default 1234.)
 2. Press PROGRAM > 2 > ENTER
 3. Press *Time* (*Time = 1* for one minute, *2* for 2 minutes, etc. up to 99 minutes). Press ENTER.
- Quick guide: Press 1 2 3 4 > PROGRAM > 2 > ENTER > *Time* > ENTER



How to set Entry/Exit Delay times (default both delay set at 30 seconds):

The entry/exit times are the times the Auto Dialer gives you to enter/exit the area covered by the system before it arms/alarms. These are pre-set to 30 seconds. You can also change the timing to instant or 60 seconds.

Entry Delay:

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 4 > ENTER
3. Press *N* (*N* = 0 for instant; 3 for 30 seconds; 6 for 60 seconds). Press ENTER.

Quick guide: Press 1 2 3 4 > PROGRAM > 4 > ENTER > *N* > ENTER

Exit Delay:

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 5 > ENTER
3. Press *N* (*N* = 0 for instant; 3 for 30 seconds; 6 for 60 seconds; 9 for 90 seconds). Press ENTER.

Quick guide: Press 1 2 3 4 > PROGRAM > 5 > ENTER > *N* > ENTER

How to set an Entry/Exit delay sound (factory setting Entry/Exit delay with sound):

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 7 > ENTER
3. Press *N* (*N* = 0 without sound; 1 with sound). Press ENTER.

Quick guide: Press 1 2 3 4 > PROGRAM > 7 > ENTER > *N* > ENTER



How to disable Tamper Function (factory setting Tamper ON):

1. Key in the four digit user password code (factory default 1234.)
 2. Press PROGRAM > 8 > ENTER
 3. Press *N* (*N* = 0 without tamper function; 1 with tamper function). Press ENTER.
- Quick guide: Press 1 2 3 4 > PROGRAM > 8 > ENTER > *N* > ENTER

HOW TO OPERATE THE AUTO DIALER

How to Arm the Alarm System/Turn the Dialer ON:

1. Check that the voice message and at least one phone number has been programmed into the Auto Dialer.
 2. Press 1 2 3 4 > ENTER or press the 'ON' button on the RF Keyfob. The Auto Dialer will show 'ON' on the display.
 3. The alarms will become active after the delay time you have set has expired.
- Quick guide: Press 1 2 3 4 > ENTER or Press the 'ON' button on the RF Keyfob

How to disarm the Alarm System/Turn Dialer OFF:

To disarm the Alarm System or to stop the Dialer from dialing out after either the tamper switch (if connected and active) or a alarm input has been activated, key in the four digit user password code followed by ESC. Alternatively, press the 'OFF' button on the RF Keyfob. The Auto Dialer will revert to the 'OFF' mode and must be re-set to the 'ON' mode as above.

Quick guide: Press 1 2 3 4 > ESC or Press the 'OFF' button on the keyfob



How to stop the Dialer from dialing the telephone numbers in sequence:

When the Auto Dialer starts dialing, it will dial the first telephone number and repeat the pre-recorded voice message for 1 minute. If there is no response from the phone, then it will hang up and dial the next number until all the programmed numbers for that alarm are dialed. It will repeat this dial sequence three times and display 'NO ANSWER' if there is no response from any of the phone numbers. To stop this dial sequence, press the * key on the telephone keypad that is receiving the call. At that time, the Auto Dialer will stop its dialing sequence and the alarm (if programmed) will stop. If the local alarm has been programmed as active, then pressing the # key will stop the dialing sequence, but the alarm will continue to sound until timed out. In both cases, the Auto Dialer will remain ON, waiting for any further alarm.

Quick guide: Answer the phone and press # or * to stop dialing sequence.

How to put the system into PANIC ALARM:

Press both the **ON** and the **OFF** buttons on the RF Keyfob at the same time, for 3 seconds. The dialer will now dial out (*Alarm 2*) whether the system is armed or disarmed.



How to change the back-up battery:

Important: It is recommended to check the back-up battery at least once a year, even if the battery is not low.

1. First make sure that the Auto Dialer is OFF. Then release it from the wall.
2. Remove the battery door and take out the old battery. Insert new 9V battery and make sure it is in the correct polarity.
3. Fit the battery door and mount the Auto Dialer back onto the wall.

HOW TO RESET THE AUTO DIALER

Inside the battery compartment:

Remove the power supply and the Auto Dialer from the wall. Remove the 9V battery. Inside the battery compartment is a switch. Move it to the ERASE position. Connect the power to the Auto Dialer then press DELETE twice. There will be 2 short beeps from the Auto Dialer. Switch the power off again. Place switch back to NORMAL. Replace the 9V battery and place back onto the wall. Power the Auto Dialer back up. The Auto Dialer will then return to factory default setting.



NOTE AND CAUTION:

A leaking battery will result in poor performance and could damage the system. It is recommended that the batteries be periodically checked. Change the batteries at least once a year to maintain the system.

DO NOT mount the Auto Dialer in areas that are exposed to extreme heat or moisture, as this could adversely affect the performance of the system.

Use only a damp cloth and general household cleaning agent to wipe the unit clean. DO NOT use turpentine, thinner, gasoline or similar substances to clean the unit.





AD-01 Quick Reference Programming

(For step-by-step programming, refer to pages 6-10)

Programming: Enter Pass code 1234; push the Program button; select option number;

1 - Audible Alarm (N = 1-Audible; 0-Silent) 1234>PROGRAM>1>ENTER>N>ENTER

2 - Length of Audible Alarm (N = 1-99 Mins) 1234>PROGRAM>2>ENTER>N>ENTER

3 - Add Numbers (N = 1-9 *order in which numbers are dialed*)

1234>PROGRAM>3>ENTER>N>ENTER>PHONE NUMBER>ENTER

Delete Numbers (N = 1-9 *order in which numbers are dialed*)

1234>PROGRAM>3>ENTER>N>ESC

4 - Entry Delay (N = 0 for instant; 3 for 30 secs; 6 for 60 secs; 9 for 90 secs)

1234>PROGRAM>5>ENTER>N>ENTER

5 - Exit Time (N = 0 for instant; 3 for 30 secs; 6 for 60 secs) 1234>PROGRAM>4>ENTER>N>ENTER

6 - Designate phone numbers to alarms (X = 1 for Alarm 1; 2 for Alarm 2.

N = 1-9 *order in which numbers are dialed*) 1234>PROGRAM>6>ENTER>X>ENTER>N>ENTER

7 - Entrance/Exit Delay Sound (N = 1-Sound; 0-Silent) 1234>PROGRAM>7>ENTER>N>ENTER

8 - Tamper switch on/off (N = 1-On; 0-Off) 1234>PROGRAM>8>ENTER>N>ENTER

Recording alarm message: 1234>RECORD>N>ENTER>*record message now*

(N = 1-Alarm 1 message; 2-Alarm 2 message)

Playing alarm message: 1234>PLAY>N>ENTER

(N = 1-Alarm 1 message; 2-Alarm 2 message)



TECHNICAL SUPPORT

If you encounter any difficulty in the operation of this product after reading the manual, please contact us. You can reach us by phone at 605-356-2772 from 8:30 AM to 5:00 PM Monday through Friday (Central Standard Time). We will be happy to answer your questions and help you in any way we can.

WARRANTY

Dakota Alert warrants this product to be free of defects in material and workmanship for a period of one year from the date of purchase. This warranty does not cover damage resulting from accident, abuse, act of God or improper operation. If this product does become defective, simply return it to Dakota Alert. Please include a note describing the troubles along with your name and return address as well as the original sales receipt. If the product is covered under warranty it will be repaired or replaced at no charge. If it is not covered by warranty, you will be notified of any charges before work is done.



Dakota Alert, Inc.

32556 E. Main Street
P0 Box 130
Elk Point, SD 57025

Phone: (605) 356-2772

Fax: (605) 356-3662

Web: www.dakotaalert.com



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>