


Instruction Manual
Coffee Grinder
with 2.4-Ounce Capacity



Living innovation

Mode D'emploi

Moulin à café d'une contenance
de 2,4 onces

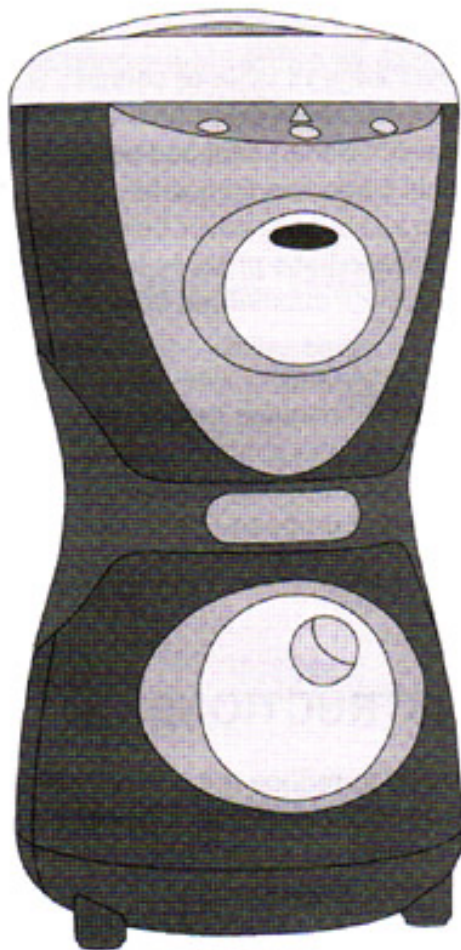

Read and Save These Instructions

Lisez et Conservez Ces Instructions

Models / Modèles
DCG30 Series / Série DCG30 - 39

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and/or personal injury.


- 1) Read all instructions.
- 2) Do not immerse appliance, cord or plug in water or other liquid.
- 3) Unplug from outlet when not in use and before cleaning.
- 4) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized DeLonghi service center for examination, repair or adjustment.
- 5) The use of accessory attachments is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or personal injury.
- 6) To disconnect, remove plug from wall outlet. Always hold the plug, but never pull the cord.
- 7) Do not use outdoors.
- 8) Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 9) Make sure the cover is securely in place before grinding coffee.
- 10) Do not use appliance for other than intended use.
- 11) Do not remove cover until blade has completely stopped.
- 12) Do not attempt operation without the cover being in place.
- 13) Do not immerse the motorized base or blade in liquid, or place in dishwasher. Damage to the unit will occur if submerged in liquid. Only the transparent top cover may be immersed.
- 14) Do not operate this appliance continuously for more than 60 seconds. Allow appliance to cool down for 10 minutes before using again.
- 15) Do not attempt to chop ice or use contrary to instructions.
- 16) Check coffee grinder interior for the presence of foreign objects before using.
- 17) This appliance complies with European Economic Community Radio Interference Directive 82/499/EEC.

SHORT CORD INSTRUCTIONS

A short power cord is provided to reduce the risk resulting from entanglement or tripping over a longer cord. Longer detachable power supply cords are available and may be used if care is exercised in their use. If a longer detachable power cord or extension cord is used (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally. The electrical rating of the appliance is listed on the bottom of the unit. If the appliance is of the grounded type, the extension cord should be a grounded type 3 wire cord. This appliance has a polarized plug. One blade is wider than the other. As a safety feature this plug will fit in a polarized outlet only one way. If the plug does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

KNOW YOUR COFFEE GRINDER

- A) Cover
- B) Stainless Steel Grinder Bowl
- C) Lid Tab & Safety Switch Slot
- D) Number of Cup Selector (Select Models Only)
- E) On-Off Switch
- F) Grind Selector Lights (Select Models Only)
- G) Cord Storage Reel

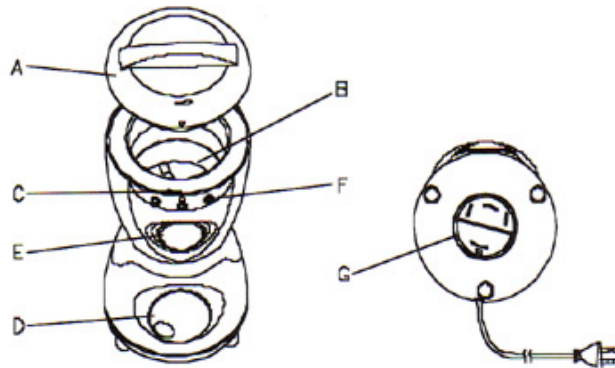

BEFORE YOUR FIRST USE

Carefully unpack your coffee grinder and remove all packaging material. To remove any dust that may have accumulated during packaging, wipe the stainless steel bowl, blades and cover with a lint-free cloth. (See "Cleaning Your Coffee Grinder" section in this manual).

OPERATING YOUR COFFEE GRINDER

- 1) Remove cover (A) and measure the coffee beans by pouring them into the cover using the convenient cup markings as a guide.

NOTE: Since coffee flavor is a matter of personal taste, you will be the best judge of the amount of beans to use per cup. However, the table below serves as a general guide.

Cups of Coffee Desired	Bean Quantity (Tablespoons)
4	5
6	7
8	9
10	11
12	12

*Based on 5-ounces of water per cup.

- 2) Pour the measured coffee beans into the grinding bowl (B), place the cover on the grinder so that the triangle is positioned above the lid & safety switch slot (C) and turn. It will not fit into any other position, but will drop easily into place when correctly located.
- 3) Move the cup selector (D) to the number of cups you want to grind. (Select Models Only)

OPERATING YOUR COFFEE GRINDER (continued)

- 4) Plug the unit into a 120V/60Hz AC only outlet.
- 5) Turn on the appliance by depressing the on / off switch (E).

NOTE: As a safety feature, the grinder will not operate unless the cover is securely in place with tab in the switch slot. If you should release pressure on the switch, the grinder will stop and the cover can be removed.

IMPORTANT: If the cover is removed to check the consistency of the coffee grounds, always ensure that the inner rim is free of coffee particles. Be sure to shake the grounds into the center. Failure to do this may prevent the appliance from operating. If this is the case, remove the lid, clear the grounds from the rim as noted above, and replace cover.

DO NOT REMOVE COVER UNTIL BLADES COME TO A COMPLETE STOP

- 6) Continue to depress the on / off switch (E) to adjust the grind setting. Once the COARSE grind has been reached the COARSE indicator light (F) will illuminate green. You must continue to depress the on / off switch to achieve the MEDIUM grind, which will also illuminate green when it is reached. When all three lights are illuminated, this indicates a FINE grind. (Grind Selector (F) on select models only)

NOTE: The amount of time required for each desired degree of grinding will vary with the amount of beans in the grinding bowl.

- 7) When the desired grind has been obtained, release the on / off switch (E) and allow blades to stop.

DO NOT REMOVE COVER UNTIL BLADES COME TO A COMPLETE STOP.

- 8) Unplug the unit. Have a container ready to hold your coffee grounds. Make sure that the container is large enough to accommodate all of your ground coffee. Turn the coffee grinder upside down and tap the bottom lightly to ensure that all of the coffee grounds have fallen into the container.
- 9) Transfer the coffee grounds from the container to your coffee maker.
- 10) Clean according to directions in the "Cleaning Your Coffee Grinder" section.

GRINDING TIPS

- 1) The **COARSE** grind is generally used for percolators and coffee urns. **MEDIUM** grind is used for drip coffee makers and steam-type espresso machines. A **FINE** grind is used for espresso machines with an electric pump.
- 2) Your coffee grinder needs to cool after each 60 seconds of use. This cooling period protects your ground coffee from becoming overheated before it is brewed.
- 3) Vary the grinding times to suit your taste and type of beans you grind.
- 4) For the freshest, most flavorful coffee, grind only enough for the pot you are making. Coffee beans keep up to 2 months in the freezer in an airtight container and can be ground while still frozen. Coffee grounds left in your coffee grinder can become stale and affect the flavor of freshly ground coffee. Be sure to clean grinding bowl, blades and cover after each use. (See "Cleaning Your Coffee Grinder" section)
- 5) This grinder can be used to grind herbs and spices, such as peppercorns, cardamom, celery seed, coriander and mustard. It can also be used for grinding nuts.

NOTE: If the unit is used for grinding something other than coffee (acceptable examples mentioned above) please make sure that the grinder is cleaned thoroughly after use. Please refer to the "Cleaning Your Coffee Grinder" section of the instruction manual for detailed cleaning instructions.

CAUTION: Do not attempt to grind anything that is moist, gummy or very hard. Do not try to grind chocolate nor attempt to make pastes from seeds such as poppy, sesame or sunflower. Do not use grains including corns, rice or barley as they may pit or damage the cover. Grinding cinnamon, nutmeg and cloves is not advised, as their oils will stain the plastic cover.

CLEANING YOUR COFFEE GRINDER

- 1) **CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.
- 2) Wash cover with water and mild detergent. The cover is not dishwasher-safe. Rinse thoroughly and dry. **Never immerse coffee grinder body.**
- 3) Wipe the stainless steel bowl, blades and cover with a lint-free cloth.
- 4) Use a small brush to clean out any remaining grounds. Use a cloth or paper towel to wipe clean.

IF ANY SERVICING OF THIS GRINDER IS REQUIRED, CONTACT DELONGHI AMERICA AT 1-800-322-3848, 9:00AM TO 5:00PM EST.

《《Limited Warranty》》

WHAT DOES THE WARRANTY COVER?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to replacement or repair, free of charge at our factory or authorized service centers of any defective part or parts thereof other than parts damaged in transit, which shall be returned to us, transportation prepaid. This warranty shall apply only if the appliance is used in accordance with the factory directions which accompany it, and on an Alternating Current (AC) circuit.

HOW LONG DOES THE COVERAGE LAST?

This warranty runs for one year from the date of delivery and applies only to the original purchaser for use.

WHAT IS NOT COVERED BY THE WARRANTY?

The warranty does not cover defects or damage of the appliance which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

HOW DO YOU GET SERVICE?

If repairs become necessary or spare parts are needed, please contact:

**DeLonghi America, Inc.
Park 80 West, Plaza One
Saddle Brook, NJ 07663
Or call us at: 1-800-322-3848**

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with DeLonghi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. DeLonghi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

HOW DOES STATE LAW APPLY?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>