



**Instruction Manual
12-Cup Automatic
Drip Coffee Maker**

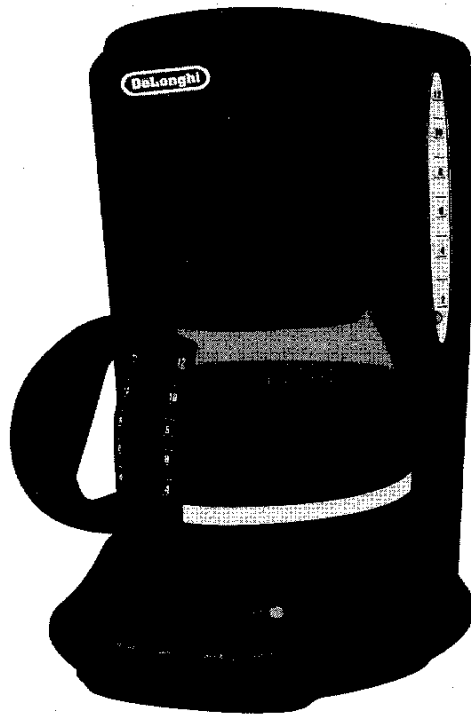

Living innovation.

**Manual de Instrucciones
Cafetera Automatica
De Goteo 12 Tazas**

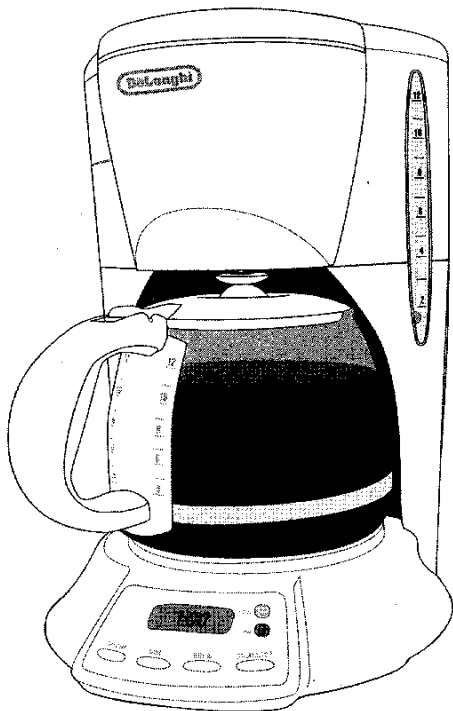

Read and Save These Instructions

Repase y Guarde Estas Instrucciones

**Models/Modelos
DC60T, DC60TB**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- 1) Read all instructions.
- 2) Do not touch hot surfaces. Use handles or knobs.
- 3) To protect against electric shock, do not place cord, plugs, or appliance in water or any other liquid.
- 4) Close supervision is necessary when any appliance is used by or near children.
- 5) Unplug from outlet when not in use and before putting on or taking off parts, and before cleaning the appliance.
- 6) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
- 7) The use of an accessory not recommended for use with this appliance may cause injuries.
- 8) Do not use outdoors.
- 9) Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10) Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11) To disconnect, press the power switch off, then remove plug from the wall.
- 12) Never use warm or hot water to fill the water reservoir. Use only cold water.
- 13) Scalding may occur if the lid is removed during the brewing cycle.
- 14) The carafe is designed for use with this appliance. It must never be used on a range top.
- 15) Do not set a hot carafe on a wet or cold surface.
- 16) Do not use a cracked carafe or a carafe having a loose or weakened handle.
- 17) Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
- 18) Do not use appliance for any other than intended use. Please take note of the warning on the bottom of the appliance.

SHORT CORD INSTRUCTIONS

A short power cord is provided to reduce risks resulting from entanglement or tripping over a longer cord. Longer detachable power supply cords are available and may be used if care is exercised in their use. Be sure the marked electrical rating is greater than the rating of the appliance. The electrical rating of the appliance is listed on the bottom of the unit. If the appliance is of the grounded type, the extension cord should be a grounded type 3 wire cord. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over. This appliance has a polarized plug. One blade is wider than the other. As a safety feature this plug will fit in a polarized outlet only one way. If the plug does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SETTING YOUR CLOCK AND USING THE PROGRAMMABLE TIMER

SETTING YOUR CLOCK:

- Note: AM=Morning PM=Afternoon/Evening
- To set the hour: Press the "HOUR" button.
- To set the minutes: Press the "MIN" button.

SETTING YOUR PROGRAMMABLE TIMER:

- Hold down the "BREW" button.
- Press the "HOUR" button to the desired hour.
- Release and press the "MIN" button to the desired minute.
- Make sure you have your AM/PM set correctly.
- Follow the "Operating Your Coffee Maker" steps 1 through 3 as shown above.
- Then press the START button ONLY ONCE. The red AUTO light will go on. Your coffee maker is now set to start brewing at the programmed time.

CLEANING YOUR COFFEE MAKER

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or other liquid.

The carafe, carafe lid, and removable filter holder may be washed with warm soapy water or placed in the top rack of the dishwasher. Do not place any other part or parts of your coffee maker in the dishwasher. Wash permanent filter in warm soapy water, do not place in your dishwasher. Never use harsh or abrasive cleaners on any part or parts of your coffee maker.

The swivel filter basket may be removed from the main housing and washed in warm soapy water. To remove this piece, open the filter basket completely and remove the filter and filter holder. Holding the bottom of the filter basket next to the hinge, lift to remove bottom hinge pin, then pull away and downward to remove the top hinge pin. The bottom hinge pin is intentionally shorter than the top pin. To reinsert the filter basket, insert the longer top pin into the top hinge. While pressing the filter basket upwards slightly, fit the bottom pin into the bottom hinge. Push down to lock into place.

The heating plate may be wiped with a clean, damp cloth when necessary.

IMPORTANT: Never immerse the heating plate or main housing in water or any other liquid. Do not try to clean the inside of the water chamber with a cloth, this will leave a residue of lint and may clog your coffee maker. Just rinse with cold water periodically.

DECALCIFYING YOUR COFFEE MAKER

Calcium build-up frequently occurs in drip coffee makers. This build-up is normal and is caused by minerals commonly found in drinking water. Periodically, your coffee maker will need cleaning to remove any calcium or mineral deposits that may form. You will know when decalcification is needed when an obvious slow down in brewing time is noticeable.

We recommend decalcifying your unit with a solution of white vinegar and cold water. A solution of two tablespoons of white vinegar to one carafe of cold water works best. Without using a filter (permanent or paper) in the basket holder, pour this solution into the water reservoir and follow your normal operating instructions. When the brew cycle is finished, empty the carafe and rinse with water. Refill the water reservoir with cold water only and repeat the brew cycle with water only, twice more. This will rinse out any remaining vinegar solution. Decalcification is recommend 4 times a year.

••Limited Warranty••

WHAT DOES THE WARRANTY COVER?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to replacement or repair, free of charge at our factory or authorized service centers of any defective part or parts thereof other than parts damaged in transit, which shall be returned to us, transportation prepaid. This warranty shall apply only if the appliance is used in accordance with the factory directions which accompany it, and on an Alternating Current (AC) circuit.

HOW LONG DOES THE COVERAGE LAST?

This warranty runs for one year from the date of delivery and applies only to the original purchaser for use.

WHAT IS NOT COVERED BY THE WARRANTY?

The warranty does not cover defects or damage of the appliance which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

HOW DO YOU GET SERVICE?

If repairs become necessary or spare parts are needed, please contact:

De' Longhi America Inc.
Park 80 West, Plaza One
Saddle Brook, NJ 07663
Or call us at: 1-800-322-3848

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with DeLonghi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. DeLonghi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

HOW DOES STATE LAW APPLY?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>