



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI ESAM 5400 PERFECTA. You'll find the answers to all your questions on the DELONGHI ESAM 5400 PERFECTA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DELONGHI ESAM 5400 PERFECTA**  
**User guide DELONGHI ESAM 5400 PERFECTA**  
**Operating instructions DELONGHI ESAM 5400 PERFECTA**  
**Instructions for use DELONGHI ESAM 5400 PERFECTA**  
**Instruction manual DELONGHI ESAM 5400 PERFECTA**

## INDEX

<b>INTRODUCTION</b> .....	25
Symbols used in these instructions .....	25
Letters in brackets .....	25
Troubleshooting and repairs .....	25
<b>SAFETY</b> .....	25
Fundamental safety warnings .....	25
Designated use .....	26
Instructions .....	26
<b>DESCRIPTION</b> .....	26
Description of appliance .....	26
Description of control panel .....	26
Explanation of lights .....	26
<b>PRELIMINARY CHECKS</b> .....	26
Controls after transport .....	26
Installing the appliance .....	26
Connecting the appliance .....	26
Using the appliance for the first time .....	28
<b>TURNING THE APPLIANCE ON</b> .....	28
<b>TURNING THE APPLIANCE OFF</b> .....	28
<b>CHANGING THE MENU SETTINGS</b> .....	29
Manual rinsing .....	29
Descaling .....	29
Setting the temperature .....	29
Auto-Off .....	29
Setting water hardness .....	30
Resetting factory default values (reset) .....	30
Installing the filter .....	30
Replacing the filter ("Reset water filter") .....	30
Statistics function .....	30
<b>MAKING COFFEE</b> .....	31
Selecting the coffee taste .....	31
Selecting the quantity of coffee in the cup .....	31
Customising the "my coffee" quantity .....	31
Regulating the coffee mill .....	31
Making coffee using coffee beans .....	31
Making coffee using pre-ground coffee .....	32

## FROTHING THE MILK FOR CAPPUCCINO (AND HEATING LIQUIDS) .....

Cleaning the cappuccino maker after use .....

## HEATING WATER .....

Customising hot water quantity .....

## CLEANING AND MAINTENANCE .....

Emptying the drip tray .....

Cleaning the coffee maker .....

Cleaning the water tank .....

Cleaning the drip tray .....

Cleaning the coffee grounds container .....

Cleaning the spouts .....

Cleaning the coffee feed funnel .....

Cleaning the inside of the machine .....

Cleaning the infuser .....

## DESCALING .....

## SETTING WATER HARDNESS .....

Measuring water hardness .....

Setting water hardness .....

## TECHNICAL SPECIFICATION .....

## DISPOSAL .....

## DISPLAYED MESSAGES .....

## TROUBLESHOOTING .....



[Your user manual](#)  
[DELONGHI ESAM 5400 PERFECTA](#)

### **Manual abstract:**

If repairs are required, contact an authorised service centre only. **25 Danger!** Do not allow the appliance to be used by persons (including children) with psychological, physical or sensory impairments or with inadequate experience or knowledge, unless closely supervised and instructed by someone responsible for their safety. Children must be supervised to ensure they do not play with the appliance. **Important: Risk of burns!** This appliance produces hot water and steam may form while it is in operation. Avoid contact with splashes of water or hot steam. When the appliance is in operation, do not touch the cup warmer shelf (A6) as it becomes hot. Designated use This appliance is designed and made to prepare coffee and heat drinks. All other use is considered improper.

This appliance is not suitable for commercial use. The manufacturer is not liable for damage deriving from improper use of the appliance.

**DESCRIPTION** Description of the appliance (page 3 - A ) A1. Grinding coarseness regulator knob A2. Bean container lid A3. Container for coffee beans A4. Pre-ground coffee feed funnel A5.

Compartment for measure A6. Cup warmer shelf A7. Water tank A8. Infuser A9. Coffee grounds container A10.

Cup tray A11. Drip tray A12. Service door A13. Coffee guide A14. Coffee spout (adjustable height) A15. Cappuccino maker/hot water spout A16. Measure A17. Main switch **Instructions** Read these instructions carefully before using the appliance. - Keep these instructions. If the appliance is passed to other persons, they must also be provided with these instructions.

- Failure to respect these instructions may result in burns or damage to the appliance. The manufacturer is not liable for damage deriving from failure to respect these instructions. Description of control panel (page 3 - B ) A number of buttons on the panel have a dual function. This is indicated in brackets in the description. B1. button: turns the appliance on and off B2. Indicator lights: indicate the current settings, alarm messages or need for maintenance. B3. button: to prepare 1 cup of coffee with the settings displayed B4. button: to prepare 2 cups of coffee with the settings displayed.

B5. button: to deliver steam or hot water to make hot drinks. (When you access the MENU, pressing the "OK" button confirms the selection made). B6. Selection knob: turn clockwise or anticlockwise until the light corresponding to the quantity of coffee comes on "my coffee" (customised) espresso coffee standard coffee long coffee 26 extra long coffee (When you access the MENU: turn to select).

Aroma selection button : press until the light corresponding to the type of coffee you want to make comes on. pre-ground coffee extra-mild taste mild taste standard taste strong taste extra-strong taste B8. B8. steam or hot water selection button. (When you access the MENU: press the "ESC" button to exit from the selected function and go back to the main menu).

P button to access the menu: **PRELIMINARY CHECKS** Controls after transport After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact the technical service centre. **GB B7. Installing the appliance Important!** When installing the appliance, respect the following safety warnings: · The appliance gives off heat. Leave a free space of at least 3 cm around the sides and back of the appliance and at least 15 cm at the top, otherwise the heat could be trapped and damage the machine. · Water penetrating the appliance could cause damage. Do not place the appliance near taps or sinks. · The appliance could be damaged if the water it contains freezes. Do not install the appliance in a room where the temperature could drop below freezing point.

· Arrange the power cable in such a way that it cannot be damaged by sharp edges or contact with hot surfaces (e.g. electric hot plates). B9. Explanation of lights The "hot water" function is selected. Manual rinse (activated by accessing the menu with the P button) Indicates the need to descale the appliance. The water tank is empty and must be filled with fresh water. The "temperature" light comes on when the machine is warming up or cooling down. It goes off when the correct temperature is reached. The "steam " function is selected.



[Your user manual](#)

[DELONGHI ESAM 5400 PERFECTA](#)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>