



**IMPORTANT INSTRUCTIONS
ELECTRIC OIL FILLED RADIATORS
SAVE THESE INSTRUCTIONS**

**INSTRUCCIONES IMPORTANTES
LOS RADIADORES ELÉCTRICOS DE ACEITE
REPASE Y GUARDE ESTAS INSTRUCCIONES**

**MODE D'EMPLOI IMPORTANT
LES RADIATEURS À BAIN D'HUILE
CONSERVEZ CE MODE D'EMPLOI**

**ISTRUZIONI PER L'USO
RADIATORI AD OLIO
CONSERVARE LE PRESENTI ISTRUZIONI**

Type/Modèle/Modelo/Modello
TRD0715T

Register this product on-line and receive a free trial issue of Cook's Illustrated.

Visit www.prodregister.com/delonghi. Visit www.delonghi.com for a list of service centers near you. (U.S. Only)

Enregistrez ce produit en ligne et recevez un numéro gratuit de Cook's Illustrated.

Visitez www.prodregister.com/delonghi. Visitez www.delonghi.com pour y voir une liste des centres de réparation proches de chez vous. (É.-U. uniquement).

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated.

Visite www.prodregister.com/delonghi. Visite www.delonghi.com para ver la lista de centros de servicios cercanos a usted. (Solamente en los Estados Unidos)

Registra questo prodotto "on-line" per ricevere una copia omaggio della rivista.

Visita www.prodregister.com/delonghi. Visita www.delonghi.com per una lista dei centri di servizio a te piu vicini. (Solo negli Stati Uniti)



IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be taken to avoid the risk of fire, electric shock and personal injury, including the following:

1. Read these instructions thoroughly before using this heater.
2. If your heater is equipped with a polythene tape, which serves as carry handle, remove it prior to connecting the appliance to an outlet.
3. This heater becomes very hot when operating. To avoid burns, do not touch its hot surfaces with your bare skin. Use the heater's handle when moving it. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (90 cm) away from the heater's front and top, and also well away from its sides and rear.
4. Extreme caution should be taken when leaving an operating heater unattended near children or handicapped persons.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Always unplug the heater when it is not in use.
7. **Do not operate your heater when its cord or plug has been damaged or after it has malfunctioned, has been dropped or damaged in any manner. If you notice any leakage of oil, switch it off immediately and contact a service center as indicated in these instructions. Return the heater to an authorized service facility for inspection, electrical or mechanical adjustment, or repair.**
8. Your heater should not be operated outdoors.
9. Your heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it might fall into a bathtub or other water containers.
10. **Do not run the electric cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Run the cord away from traffic areas and where it will not be tripped over.**
11. To disconnect the heater, switch it OFF, then unplug its cord from the outlet.
12. Connect to properly polarized outlets only.
13. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this might cause an electric shock, fire, or damage the heater.
14. To prevent fire, do not block air intakes or exhaust in any manner. Do not place the heater on soft surfaces, like a bed, where openings may be blocked.
15. **Your heater's internal parts may become hot or issue sparks during normal operation. Therefore, you should not use it in areas where gasoline, paint, or flammable liquids are used or stored.**
16. Use this heater only as described in this manual. Any other use not recommended by the manufacturer might cause fire, electric shock, or personal injury.
17. To prevent overload and blown fuses, be sure that no other appliances are plugged into the same shared outlet, or a separate outlet on the same shared circuit.
18. The heater's electric cord and plug may grow warmer during normal operation. However, exceedingly hot or deformed plug or cord are not normal, and are often the result of a defective power outlet. You should replace such outlets prior to further use of the heater. Continuous use of defective outlets might cause cord overheating and fire.
19. **The use of extension cords is not recommended, as they are likely to overheat and increase the risk of fire. However, where necessary, you may use a No. 14 AWG or larger cord rated for 1875 watts or more; the extension cord should not be shared by any other appliance.**
20. Make sure the heater is firmly plugged into the wall outlet. Please note that the quality of wall outlets may deteriorate over time: Check the electric plug periodically for signs of overheating or deformation, and in such cases, stop using that outlet and have it fixed.
21. Check that neither the heater nor the power cable has been damaged in any way during transportation.
22. Make sure that no pieces of polystyrene or other packaging material have been left between heating elements. If necessary, remove such pieces using a vacuum cleaner.
23. **When switching the heater on for the first time, allow it to run at full power for about two hours to get rid of a possibly unpleasant smell. Make sure that the room where the heater is placed is well ventilated during this first operation. Soft crackling sounds are normal during the heater's first operation.**

CAUTION: To prevent electric shock match wide blade of plug to wide slot, fully insert.

SAVE THESE INSTRUCTIONS

HOW TO USE YOUR HEATER

FITTING THE WHEELS

Turn the radiator upside-down on a rug or a soft surface in order to prevent damaging the paint finish. Fully unfold the castors by turning them outwards (Fig. 1-2).

Turn the radiator back to its upright position.

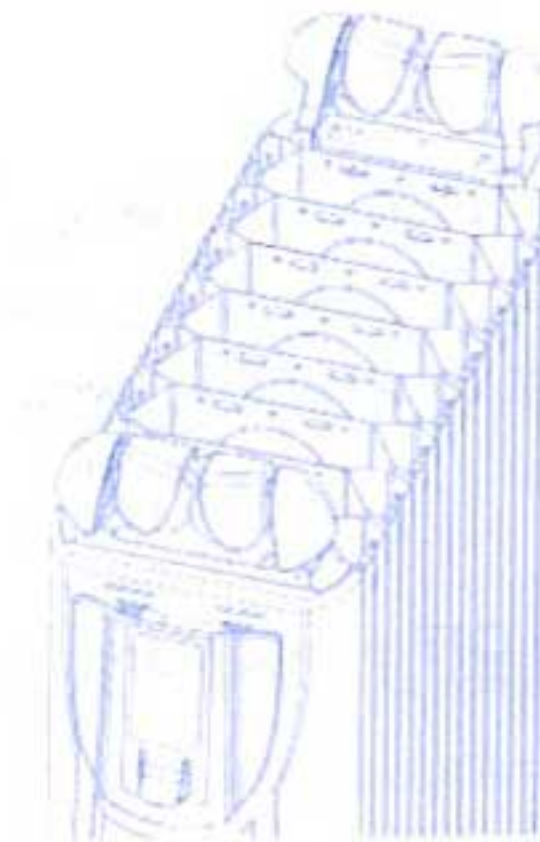 


fig. 1


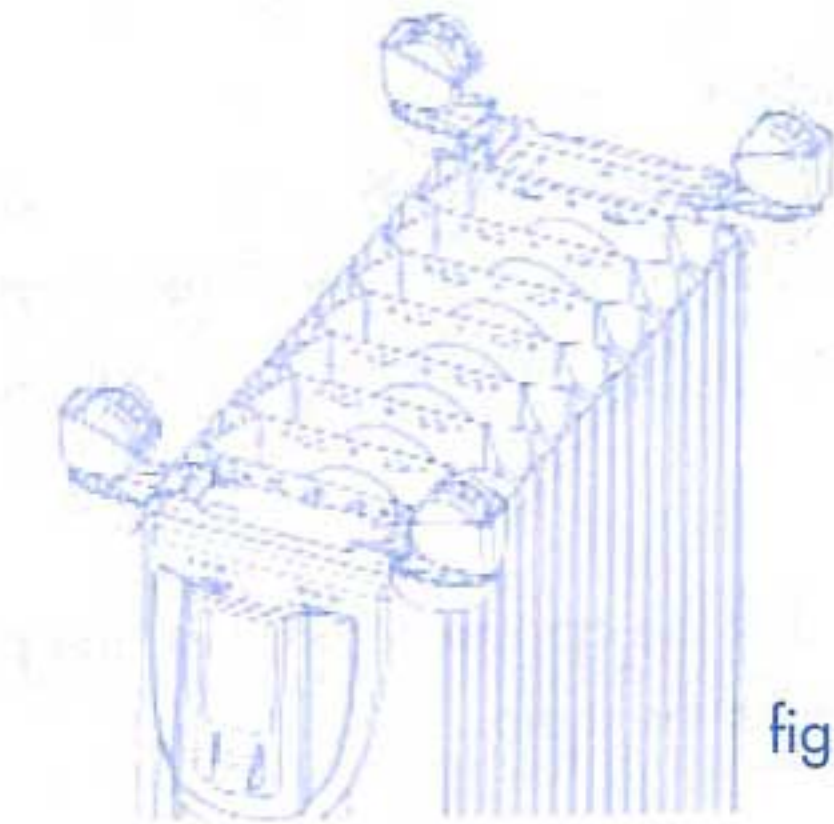 


fig. 2

CAUTION

 Always operate the heater in upright position only (wheels on the bottom, controls on top). Any other position could create hazardous situation!

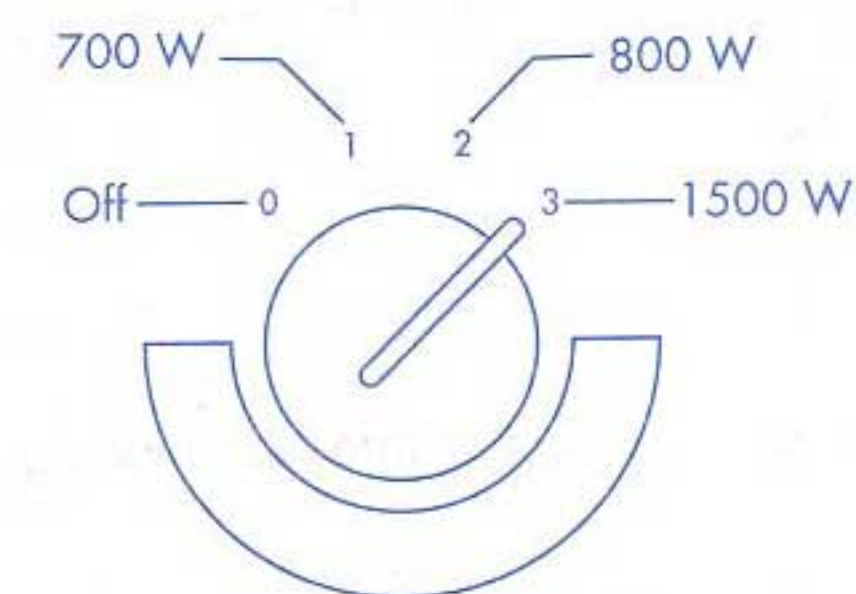

With pilot lights ON, the heater is ON!

WATTS ECONOMIZER

For more economical use, the 1 or 2. Positions may be used after unit has reached the operating temperature.

1. LOCATION

Place heater on the floor beneath the coldest window in the room, or any other location. Your heater will reduce the effect of cold drafts.

The heater should not be placed immediately below a power outlet.

Do not use this radiator in rooms with a floor area of less than 43 square feet (4 sq. m.).

2. CONNECTION

The radiator should be connected to a properly polarized A/C 110/120 V household outlet in perfect working conditions.

Keep loose clothing or bedding, furniture and flammable material away from the heater's wall outlet.

3. TURNING ON

Insert the plug into an electrical outlet, rotate the thermostat knob (if provided) to maximum and turn the unit on as follows using the power selector:

- Turn the power selector to position **1** to select minimum output (the light on the left will come on).
- Turn the power selector to position **2** to select medium output (the light on the right will come on).
- Turn the power selector to position **3** to select maximum output (the lights will come on).

Adjusting the thermostat

When the room has reached the desired temperature, turn the thermostat knob slowly in a clockwise direction until you get to the setting – and not beyond it. The thermostat will then adjust the set temperature automatically and keep it constant.

If your unit is a three-output version, in intermediate seasons or on days when temperatures are not particularly cold, select minimum output to optimise savings and consumption.

Antifreeze function

Turn the thermostat dial to the \star position and the power selector to position **3**. The appliance will maintain a minimum room temperature of approximately 42°F (5°C), thus preventing freezing while conserving energy. In models that come with a timer, tabs must be set in the inward position.

REMINDER

To completely shut the appliance off, turn the power selector to the **OFF** position and then unplug the appliance from the main.

5. UNITS WITH TIMER

Clock setting

The program/timer, as with all clocks, must be set to the correct time. If for example the time is 9.30 a.m. (day zone), rotate the dial clockwise (following the direction of the arrow) until 9.30 is aligned with the triangular pointer.

IMPORTANT:

 
DO NOT ROTATE CLOCK DIAL COUNTER-CLOCKWISE.

The timer is in effect an electric clock and would only work while it is plugged into a power supply.

When unplugged, the timer stops and must be later re-set.

Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). There is only one way it can be plugged into a power supply. This is a safety feature. If you are unable to insert the plug fully into the outlet, try again by turning it the other way. If it would still not go in, it is probably due to an obsolete outlet which should be replaced. Do not temper with the plug or outlet to defeat the purpose of this safety mechanism.

HOW TO USE THE TIMER

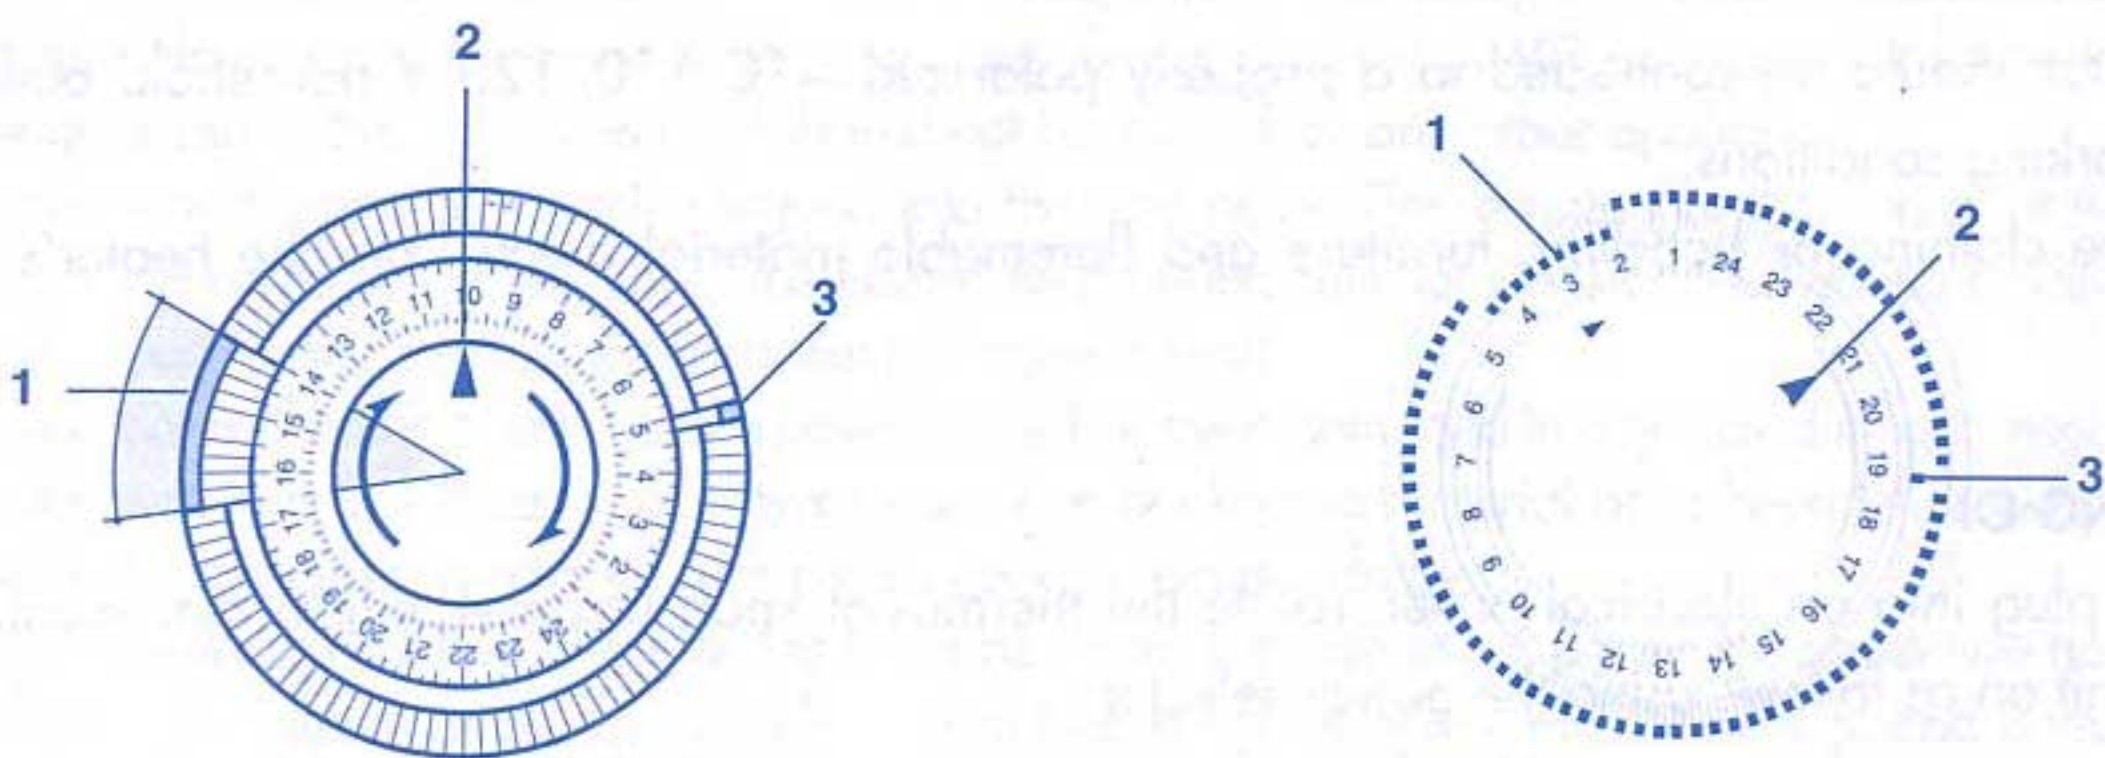

To programme heating, proceed as follows:

- Look at the time on your clock or watch. If it is 10.00, turn the numbered timer disk clockwise until the number 10 on the disk coincides with the pointer • (2) on the timer. Set the periods of time when you want the appliance to work by pushing the teeth (1) inwards. Each tooth (3) corresponds to a period of 15 minutes. This will leave visible sectors which correspond to the periods of operation. When set, the radiator will operate automatically each day during the times programmed (important: the radiator must always be plugged into the socket).
- To change the programming, move the teeth back into the initial position and set the new periods of functioning.
- If you want to make the appliance operate without programming, push all the teeth into the centre. In this case, to turn the appliance off completely, as well as turning the switches off, you must also unplug it from the mains to avoid continued operation of the timer.

A safety device

The appliance is fitted with a **safety device** which will switch off it in case of accidental overheating. To reset, disconnect the plug from the power for 30 minutes, remove the cause of overheating then plug the appliance in again.

6. MAINTENANCE AND SERVICE

Always unplug the heater from the power outlet and allow the radiator to cool. Wipe radiator with a soft damp cloth; do not use detergents and abrasives.

Should the radiator not be in use over a certain length of time, roll the cable around the holder and store it in a dry place.

This appliance has been built to last for many years of trouble-free service.

In case of malfunction or doubt, do not try to repair the heater by yourself: this might increase the risk of fire and electric shock.

Call your nearest Service Center (see attached list of Service Centers).

De'Longhi

LIMITED WARRANTY

This warranty applies to all products with De'Longhi or Kenwood brand names.

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents:

Please contact our toll free hotline at 1-800-322-3848 or log onto our website at www.delonghi.com.

For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

Residents of Canada: Please contact our toll free hotline at 1-888-335-6644 or log onto our website at www.delonghi.com.

Residents of Mexico: Please refer to the Limited Warranty statement for Mexico.

Please refer to the back page of the manual for De'Longhi addresses.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>