 


DeLonghi

ELECTRIC OIL FILLED RADIATORS
INSTRUCTIONS FOR USE
SAVE THESE INSTRUCTIONS

LOS RADIADORES ELÉCTRICOS DE ACEITE
INSTRUCCIONES PARA EL USO
REPASE Y GUARDE ESTAS INSTRUCCIONES
LEA CUIDADOSAMENTE ESTE INSTRUCTIVO
ANTES DE USAR SU APARATO

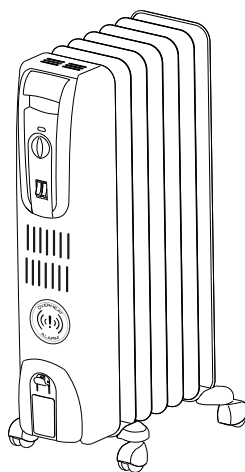

MODEL/MODELO
TRH0715SH

Register this product on-line and receive a free trial issue of Cook's Illustrated. Visit www.delonghi.com for a list of service centers near you.

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated. Visite www.delonghi.com para ver la lista de centros de servicios cercanos a usted.

ELECTRIC CHARACTERISTICS
CARACTERISTICAS ELECTRICAS
120 V~ 60 Hz 1 500 W

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be taken to avoid the risk of fire, electric shock and personal injury, including the following:

1. Read all instructions carefully before using the appliance.
2. If your radiator is equipped with a polythene tape used as carry handle, remove it before connecting appliance to the outlet.
3. This appliance gets very hot when in use. To prevent burns, do not touch hot surfaces with bare skin. Use the handle when moving the appliance. Keep all flammable materials, such as furniture, pillows, bedding, paper, clothing, and curtains at least 3 feet (90 cm) from the front and top of the appliance also avoid contact with the sides and back.
4. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
5. Always disconnect the plug from the power outlet when the appliance is not in use.
6. **Do not operate the appliance with a damaged cord or plug, after faulty operation, or when it has been dropped or damaged in any way (ex.: if an oil leakage appears). Contact the nearest authorized service facility for examination, electrical or mechanical adjustment, or repair.**
7. Do not use the appliance outdoors.
8. This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never position the appliance where it may fall into a bathtub or come in contact with water.
9. **Do not run the power cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Keep the cord away from any passageways where it could be tripped over.**
10. To disconnect heater, turn controls to off, then remove plug from outlet.
11. Connect to properly polarized outlets only.
12. Do not wrap the cord around the appliance immediately after use.
13. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock or fire, or damage the appliance.
14. To prevent a possible fire, do not block ventilation or exhaust opening in any way. Do not use the appliance on soft surfaces, such as beds, where the openings may become blocked.
15. Do not cover the appliance while it is functioning in order to avoid overheating and the risk of fire.
16. The internal parts of the appliance can become very hot or produce sparks during operation. Do not use the appliance in areas where gasoline, paints, or other flammable liquids are used or stored.
17. **Use this appliance only as described in this manual. Any other use not indicated by the manufacturer may cause fire, electric shock, or injury to persons.**
18. To prevent current overload and blown fuses, make sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
19. It is normal for heater's plug and cord to feel warm to the touch. However, an

excessively hot or deformed plug or cord is not normal and may be the result of a defective electrical outlet. Defective outlets must be replaced before using the heater. Plugging the heater into a worn outlet may result in overheating of the power cord or may cause the risk of fire.

20. If the supply cord is damaged, to reduce the risk of malfunction it must be replaced by the manufacturer, its service agent, or a licensed and qualified professional.
21. Do not use this appliance with an extension cord or outlet strip. Connect the appliance directly to a suitable outlet.
22. Make sure that the plug is fully inserted into the outlet. Wall outlets may deteriorate with time, so check the plug periodically for signs of overheating or deformation. If the outlet has deteriorated, stop using it and have it repaired.
23. Check that neither the appliance nor the power cord have been damaged during shipping.
24. Make sure that no styrofoam or other packing materials remain in the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
25. The first time the appliance is used, run it at the maximum power for at least two hours. During this time, ventilate the room thoroughly to eliminate the “new” smell released by the appliance. It is completely normal for the appliance to emit “creaking” sounds the first time it is run.
- 26. CAUTION: To prevent electric shock, make sure the wide prong of the plug is inserted in the wide slot of the outlet.**
27. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
28. Extreme caution is necessary whenever the heater is left operating unattended.
29. Do not open the appliance. No user-serviceable parts inside.

SAVE THESE INSTRUCTIONS For Household use only

HOW TO USE YOUR HEATER

“EASY WHEEL” SYSTEM

Turn the radiator upside-down on a rug or a soft surface in order to prevent damaging the paint finish. Fully unfold the castors by turning them outwards (Fig. 1). Turn the radiator back to its upright position.

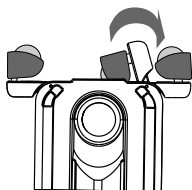 



fig. 1

CAUTION

Always operate the heater in upright position only (wheels on the bottom, controls on top). Any other position could create hazardous situation!

1. LOCATION

 Place heater on the floor beneath the coldest window in the room, or any other location. Your heater will reduce the effect of cold drafts. The heater should not be placed immediately below a power outlet. Do not use this radiator in rooms with a floor area of less than 43 square feet (4 sq.m.).

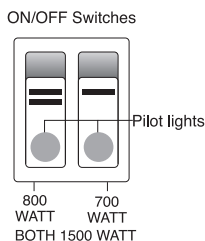

WATT ECONOMIZER

To conserve energy, use the Min. or Med. position after the unit has reached the desired operating temperature

With pilot lights ON, the heater is ON!

2. CONNECTION

The radiator should be connected to a properly polarized A/C 120 V household outlet in perfect working conditions. Keep loose clothing or bedding, furniture and flammable material away from the heater's wall outlet.

3. TURNING ON TWO-SWITCH MODELS

Turn the thermostat clockwise to its maximum position. Push down both switches. The switch lights stay on independently of the thermostat cycling. When room reaches the desired temperature, turn the thermostat knob counter-clockwise very slowly and carefully until you hear a click. This should set your heater to maintain the desired temperature by cycling on and off as required. Note: The room may require up to an hour to reach the desired temperature depending on room size and conditions.

4. USE OF THERMOSTAT

The thermostat operates according to room air temperature, rather than radiator temperature. Turning it counter-clockwise to smaller numbers would decrease the temperature; clockwise to greater numbers would increase the temperature.

Antifreeze function

Turn the thermostat dial to the * position and push the switches on. The appliance will maintain a minimum room temperature of approximately 41°F (5°C), thus preventing freezing while conserving energy.

REMINDER

To completely shut the heater off, MIN/MED switches must be set in the "0" position.

Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). There is only one way it can be plugged into a power supply. This is a safety feature. If you are unable to insert the plug fully into the outlet, try again by turning it the other way. If it would still not go in, it is probably due to an obsolete outlet which should be replaced. Do not tamper with the plug or outlet to defeat the purpose of this safety mechanism.

A safety device

A **safety device** switches the heater off and emits a beep in the event of overheating. To restart the heater, call the nearest Service center.

Note: To avoid overheating the appliance, do not cover it.

Tip over safety switch

A safety tip-over switch turns the heater off if it tips over or is positioned in an improper way that could jeopardize safety. To reset, disconnect the plug from the outlet, put the appliance in the upright position, then plug the appliance in again.

5. MAINTENANCE AND SERVICE

Always unplug the heater from the power outlet and allow the radiator to cool. Wipe radiator with a soft damp cloth; do not use detergents and abrasives. Should the radiator not be in use over a certain length of time, roll the cable around the holder and store it in a dry place. This appliance has been built to last for many years of trouble-free service. In case of malfunction or doubt, do not try to repair the heater by yourself: this might increase the risk of fire and electric shock. Call nearest Service Center Visit www.delonghi.com for a completelist of Service Centers.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	<ul style="list-style-type: none">• Be sure it is plugged in and that the electrical outlet is working.• Check for any obstruction.• The switches are in the OFF position.• The thermostat may be set too low.	<ul style="list-style-type: none">• Plug into the mains.• Remove the obstruction. Let the appliance cool down then reinsert the plug into the mains. If the appliance doesn't work please contact the nearest service center.• Switch on the appliance.• Turn the thermostat to a higher setting until the heater restarts.• Please check it is correctly positioned



LIMITED WARRANTY

This warranty applies to all products with De'Longhi or Kenwood brand names.

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents: Please contact our toll free hotline at 1-800-322-3848 or log onto our website at www.delonghi.com

Residents of Canada: Please contact our toll free hotline at 1-888-335-6644 or log onto our website at www.delonghi.com

Residents of Mexico: Please contact our toll free number 01-800-711-8805 for assistance or log onto our website at www.delonghi.com

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states/countries do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does country law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state/country to country.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>