


instructions

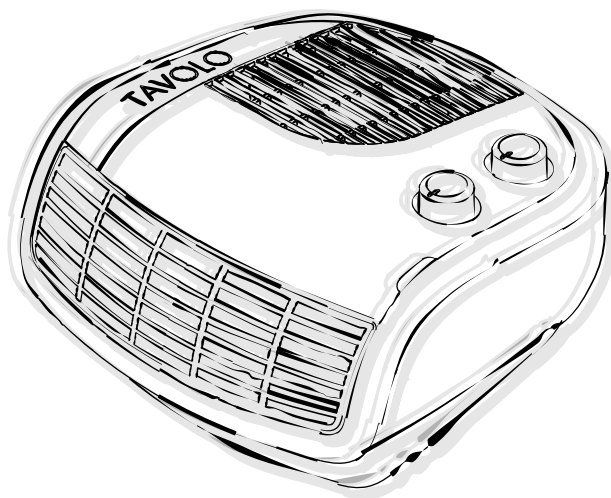

FAN HEATER


HTF3033

Please retain these instructions for future reference



Description of Appliance

The following terms are used throughout the instruction manual

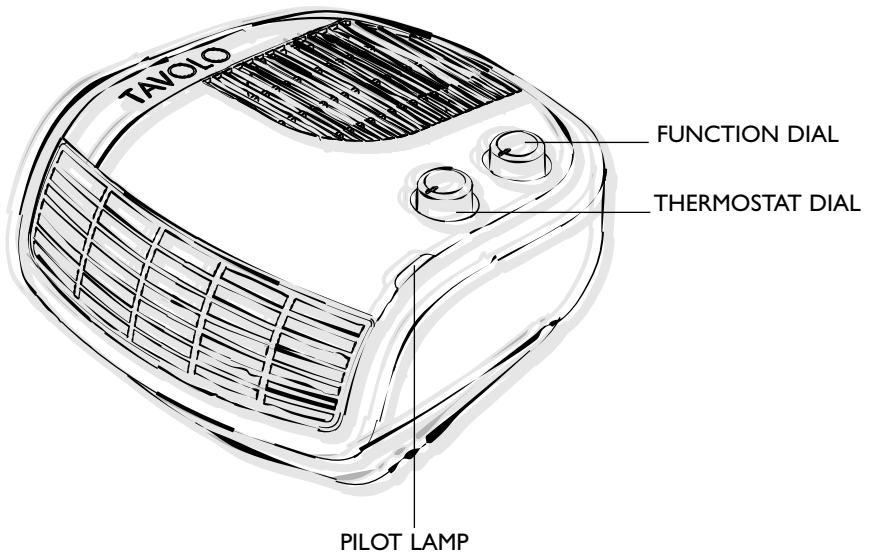

Thank you for choosing this De'Longhi appliance. To get the very best out of your new appliance it is advisable to read these instructions before using it. This will ensure that you gain optimum results and use the appliance safely.

Voltage Wattage	See rating label
--------------------	------------------

ELECTRICAL CONNECTION

- Before inserting the plug in an electrical outlet, check carefully to be certain that the voltage in your home's electrical system matches the voltage indicated on the appliance and that the socket and main feed are of a size sufficient to power this appliance.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EEC ON RADIO INTERFERENCE SUPPRESSION.

FUNCTIONING AND USE

- Turn the thermostat dial (where included) in a clockwise direction until it reaches the maximum setting.
- **Summer service (ventilation only):** turn the function dial to setting *****. (the lamp will come on)
- **Heating at reduced power:** turn the function dial to setting **1**. (the lamp is on)
- **Heating at full power:** turn the function dial to setting **2**. (the lamp is on)
- **Switching off:** turn the function dial to setting **0**.

It is always advisable to disconnect the plug when the appliance is not in use.

ADJUSTING THE THERMOSTAT

When the room has reached the required temperature turn the thermostat dial in an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically maintained and kept at a constant level by the thermostat.

ANTIFREEZE SERVICE

Turn the function dial to setting 2, then turn the thermostat dial to setting *****. When it is set in this way the appliance keeps the room at a temperature of approx. 5° C with minimal energy expenditure.

CLEANING AND MAINTENANCE

Before cleaning always remove the plug from the electrical socket. Clean the air inlet/outlet grilles frequently with a vacuum cleaner. Never use abrasive powders or solvents.

Warnings

- To avoid risk of cable overheating, extension leads must not be used in powering this appliance.
- Do not use the appliance in the vicinity of showers, bath tubs, wash basins, swimming pools, etc.
- The appliance must not be positioned directly underneath a fixed power point.
- The heater must be positioned at least 50 cm from furniture or other objects. Do not use the appliance in rooms less than 4 m² in area.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- Do not cover the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
- Do not place the appliance up against walls, furniture, curtains, etc.
- The appliance must be installed so that the controls can not be reached by persons using the bath tub or the shower.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent in order to avoid a hazard.
- Do not block the hot-air outlet grilles or the intake grille located on the bottom of the appliance.
- When used for the first time, the appliance may give off an odour. This is caused by heating. You are recommended to ventilate the room.

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (eg. obstruction of air intake and outlet grilles, motor turning slowly or not at all).

To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.



WARNING: In order to avoid overheating, never under any circumstances cover the appliances during operation, as this would lead to dangerous overheating.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

ELECTRICAL CONNECTION

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.
WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.
- B) UK Plug specifications: please follow the instructions provided below.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red. If you have a 3-pins plug, do not connect any wire to the "earth" terminal.



De' Longhi Appliances via Seitz, 47 - 31100 - Treviso - Italia

571 | 410921/03.12_03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>