



## TOASTER




*Living innovation*

## Description of Appliance

The following terms are used throughout the instruction manual

---

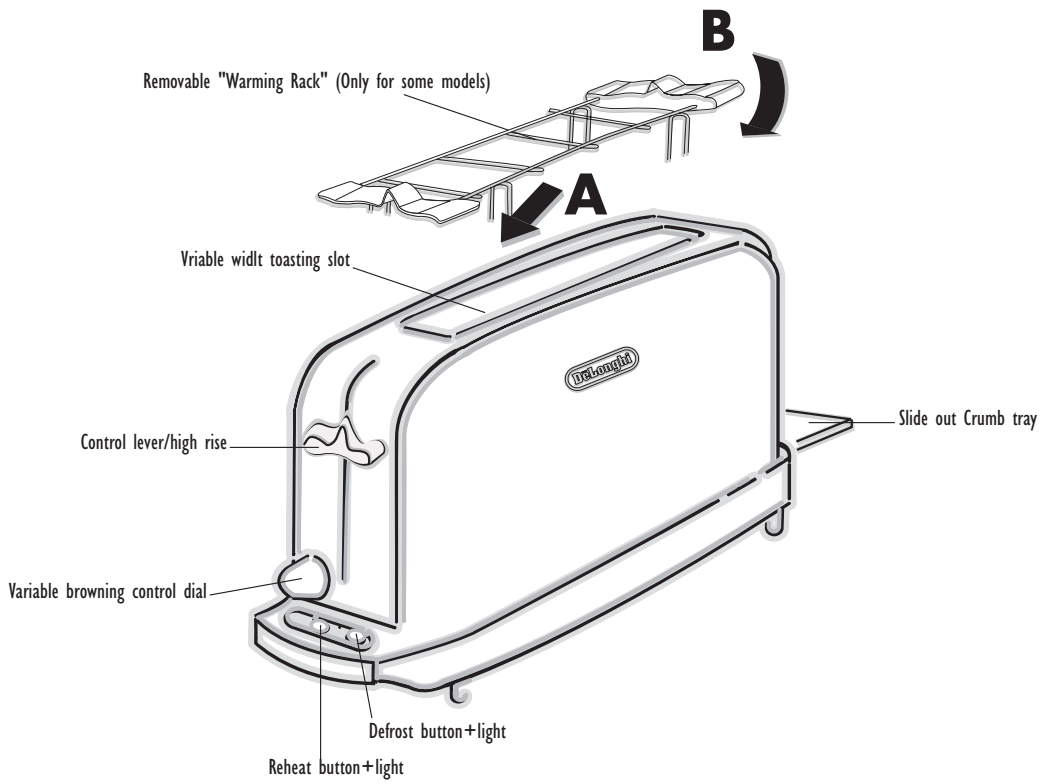

**Thank you for choosing this De'Longhi Toaster. To get the best results from your new toaster it is advisable to read these instructions carefully before using the appliance. This is the only way to ensure optimum results and maximum safety.**

### **Using for the first time**

- Carefully unpack the toaster and remove all of the packaging material.
- Before using for the first time, to eliminate the new smell, operate the toaster without bread inside for at least 5 minutes. Ensure there is plenty of ventilation in the room.
- Place the toaster on a flat working surface away from water taps and sinks.
- Check that the mains supply corresponds to the voltage on the the appliance rating plate. Connect the appliance to a correctly earthed power socket (minimum rating 10A) only.  
The manufacture declines all liability for any accidents due to the incorrect earthing of the appliance.
- Please read safety warnings and electrical requirements before using this appliance.

### **Using the Toaster**

- Ensure the control lever is raised. Plug into a suitable mains supply socket.
- Insert the slices of bread into the toasting slots and turn the variable browning control dial to desired setting (1 = lightest, 6 = darkest). Press the control lever down until it locks (this will not lock whilst the browning control dial is on "0").
- When the toasting is finished the lever, will return to the up position, raising the toasted bread.
- If the bread is not sufficiently toasted, select a higher number on the browning control dial. If it is too dark, select a low number on the browning control dial next time.
- The toasting can be interrupted at any time by simply pressing the stop/clear button.

### **Using the defrost Botton**

- To toast frozen bread, place in toasting slot.
- Turn the variable browning control dial to desired setting.
- Press the control lever down until it locks (this will not lock whilst the browning control dial is on "0" ).
- Press the " Defrost bottom" the defrost light will remain on while the defrost function is in use, and toasting time will be automatically extended.

### Using the Reheat Botton

- Place the bread/toast into the slot.
- Press the control lever down until it locks.
- Press the "Reheat bottom" the reheat light will remain on while the reheat function in use.
- Please note that this is a fixed reheat time which cannot be adjusted by the browning control.

### Using The "Warming Rack"(Only for some models)

Use this device to heat croissants.

- Fasten the rack to the toaster by first inserting the hooks **A** and then clicking in the hooks **B**, on page 2.
- Place the croissant on the rack.
- Turn the browning control dial to the desired position.
- Press down the control lever until it clicks into place.
- If the croissant is not warm enough select a higher number on the browning control dial.

### Crumb Tray

The crumb tray should be emptied regularly as a build up of crumbs could be a potential fire hazard. After toasting, allow the toaster to cool down thoroughly, then slide out the crumb tray and empty.

### Suggestions

- Never use the toaster without bread inserted.
- Do not use very thin or broken slices of bread.
- Do not insert other foods that may drip during the cooking process. In addition to making the cleaning procedure more difficult, these may cause fires. It is also very important to clean the crumb tray before each use.
- Do not insert (by force) foods that are too big for the slots.
- Do not insert forks or other utensils into the toaster in order to remove bread, as it may damage the resistance coils of the appliance. Remove the plug from the socket and turn the appliance over, gently shaking it to remove the lodged item.

### Cleaning and Maintenance

- Before cleaning, switch off at the mains, remove the plug and allow to cool.
- To clean the inside, turn the toaster upside down over the sink and shake gently.
- Empty the crumb tray regularly see crumb tray section.
- Use a soft dampened cloth to wipe the outside of the toaster and dry with a soft, dry cloth.
- Do not use metal polish or harsh scouring agents.
- DO NOT IMMERSE IN WATER.



Toaster CBT20I

## Safety Warnings

- The appliance is exclusively for the use for which it has been expressly manufactured. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unauthorised personnel.
- After having removed the appliance from the packaging, make sure that the product is complete and in perfect condition.
- The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard.
- In order to remove the dust that may have accumulated on the appliance, simply dust it off with a soft cloth.
- Before inserting the plug into the electrical outlet, make certain:
- The voltage of the outlet corresponds to the value indicated on the information label, attached to the appliance.
- The electrical outlet is adequately earthed the manufacturer declines any responsibility for the lack of observation of this norm.
- In the case of incompatibility between the outlet and the plug of the appliance, have it replaced by a qualified technician. The use of adapters, multiple socket units and/or extension cords is not recommended. Whenever it may be necessary to use such equipment, it is advisable to use only simple or multiple adapters or extension cords which comply with the current safety standards, and make sure not to exceed the voltage limit of the adapter or extension cord.
- When the appliance is plugged into the electrical outlet, and moreover, while it is turned on, never place hands into the bread toasting slots.
- Never allow the appliance to be used by children or used without adult supervision.
- Do not touch the appliance with wet or damp hands.
- The metal sides of the toaster and the areas surrounding the bread slots become very hot during use: operating the toaster should be carried out using touching only the plastic dials and handles.
- Bread is a foodstuff which may catch fire. Do not use this appliance under or next to curtains or other combustible material.
- Do not cover the appliance while it is in use.
- Do not use the appliance with bare or wet feet.
- Unplug the appliance from the electrical outlet when it is not in use.
- Do not unplug the appliance from the outlet by pulling on the cord.

- Do not leave the appliance exposed to the elements, (rain, direct sunlight, frost, etc.).
- Before doing any cleaning or operation, unplug the appliance from the electrical outlet. Do not immerse the appliance, the plug, or the electrical cord in water.
- In case of breakage down or improper functioning of the appliance, turn off the appliance without tampering with it. For necessary repairs or replacement and for the substitution of the electrical cord, consult the technical service centre authorised by the manufacturer.

This appliance conforms to the Directive 89/336/CEE relative to electromagnetic compatibility.

The materials and the objects destined for contact with food products are in compliance with the regulations of the EEC directive 89/109.



Toaster CBT201

## Electrical Requirements

**Before using this appliance ensure that the voltage indicated on the product corresponds with the main voltage in your home, if you are in any doubt about your supply contact your local electricity company.**

The flexible mains lead is supplied connected to a B.S. 1363 fused plug having a fuse of 13 amp capacity. Should this plug not fit the socket outlets in your home, it should be cut off and replaced with a suitable plug, following the procedure outlined below.


**Note:** Such a plug cannot be used for any other appliance and should therefore be properly disposed of, (having removed the fuse) and not left where children might find it and plug it into a supply socket - with the obvious consequent danger.

**N.B.** We recommend the use of good quality plugs and wall sockets that can be switched off when the machine is not in use.

**Important:** the wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

GREEN AND YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter **E** or by the earth symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter **N** or coloured black.


The wire which is coloured brown must be connected to the terminal which is marked with the letter **L** or coloured red.

When wiring the plug, ensure that all strands of wire are securely retained in each terminal. Do not forget to tighten the mains lead clamp on the plug. If your electricity supply point has only two pin socket outlets, or if you are in doubt, consult a qualified electrician. Should the mains lead ever require replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord of the same size.

If the plug is a moulded-on type the fuse cover must be refitted. If the fuse cover is lost, the plug must not be used until a replacement cover is obtained. The colour of the correct replacement fuse cover is that of the coloured insert in the base of the fuse recess or elsewhere on the plug. Always state this colour when ordering a replacement fuse cover. Only 13amp replacement fuses which are asta approved to B.S. 1362 should be fitted.

This appliance conforms to the Norms EN 55014 regarding the suppression of radio interference.

**Warning**  
this appliance must be earthed

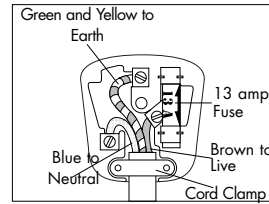

146 IDL/05.02



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>