

IMPORTANT SAFETY INSTRUCTIONS

1. Read and keep these instructions for reference.
2. Heed all warnings and follow all instructions.
3. Do not use this product near water.
4. Clean using only a slightly damp cloth. Do not use cleaners with harsh chemical agents or detergents.
5. Do not block any of the ventilation openings.
6. Install and use in accordance with the manufacturers instructions.
7. Do not place product near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
8. This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature; if you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
9. Protect the power cord from being damaged or pinched.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug product during lightning storms or when you are not going to use it for a long period of time.
12. Refer all servicing to qualified service personnel. Service is required when the product has been damaged in any way. This includes, but isn't limited to, a damaged power supply cord or plug, liquid spill or an object dropped onto the product, exposure to rain or moisture, dropping the product or the product not operating normally.

WARNING:
To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

CAUTION:
Use of any controls, adjustments or procedures other than those specified within this manual, may result in hazardous radiation exposure.
Caution and rating label is located on the product.



CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

CAUTION - DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

CAUTION - TO REDUCE THE RISK OF FIRE, DO NOT PLACE ANY HEATING OR COOKING APPARATUS BENEATH THIS UNIT.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The house with an arrowhead symbol is intended to alert the user to use the transformer in normal indoor temperatures, not extreme temperatures.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited 90-Day Warranty

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address below. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory. Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.
13755 SW 119th Ave.
Miami, FL 33186 U.S.A.

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter detailing the complaint, along with your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.


PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING.
WE CANNOT STORE YOUR UNIT!



EXCALIBUR
ELECTRONICS, INC.

Excalibur Electronics, Inc.
13755 SW 119th Avenue • Miami, FL 33186
Tel: 305.477.8080 • Fax: 305.477.9516 • www.ExcaliburElectronics.com

SOUNDMASTER is a trademark of Excalibur Electronics, Inc.
iPod is a trademark of Apple, Inc., registered in the U.S. and other countries.
Actual product may differ slightly from photograph.

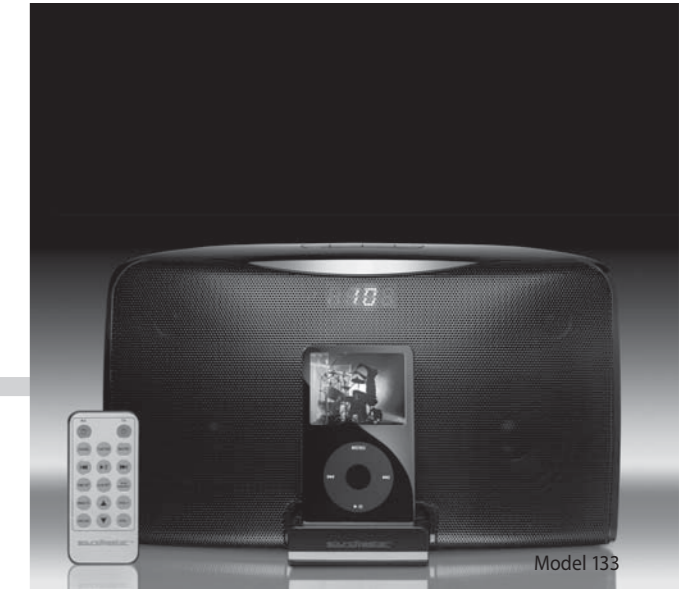

soundmaster
DIGITAL MUSIC SYSTEM

SHADOW
WITH DOCKING PORT FOR iPod®

SOUNDMASTER™ SHADOW OPERATION MANUAL

Congratulations on your purchase of the **SOUNDMASTER™ Shadow** from Excalibur Electronics Inc. Listen to crystal-clear sound from your iPod, MP3 or any other sound source—including your computer! Please read this manual thoroughly, especially noting safety and care instructions. This package contains, 1 SOUNDMASTER Shadow, 1 AC Power Adapter, 1 Remote Control, 7 Docking Adapters for iPod, 1 - 3.5mm Audio Cable, 1 USB Cable and 1 User's Manual.



iPod not included.

Specifications:

- Crystal-clear sound from 2 custom-designed neodymium Micro Drivers and 2 built-in tweeters.
- Built-in docking station. Provides synchronization, data transfer and power recharging. Dock adapter included.
- Convenient secondary input jack connects to other audio products including laptop computers, older iPod devices and other MP3 players.
- Power output: 30W.

Modifications not approved by Excalibur Electronics voids warranty.


For Your Safety: When disconnecting the DC power cord, pull the power plug. Do not pull the cord by itself. Never handle the DC power plug with wet hands, as this could cause fire or electric shock.

Warning


- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
- Dangerous, high voltages are present inside the product housing. Do not open the housing.
- To prevent electric shock, make sure to fully insert the plug into the wall socket.
- Refer all servicing to qualified personnel.

Damage Requiring Service: Do not attempt to repair the unit by yourself. Service should be done by a qualified service technician.

Functions of the SOUNDMASTER Shadow

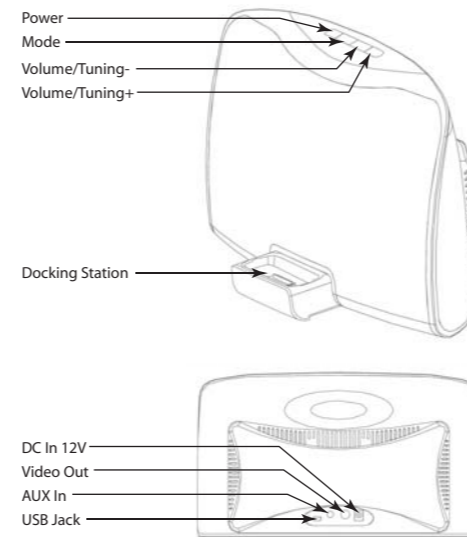

Functions of the Remote Buttons

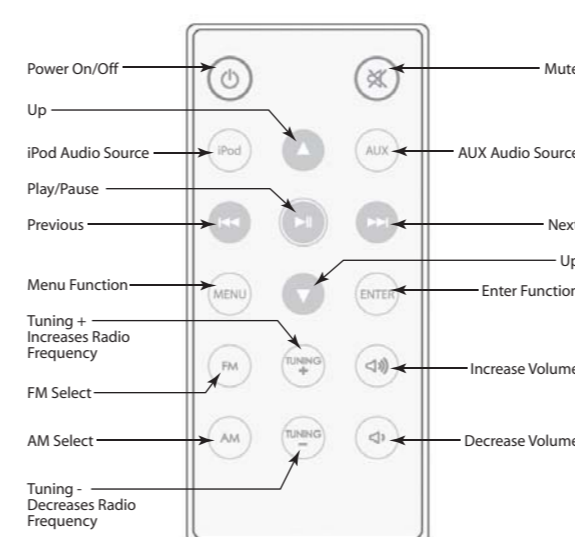

Setting Up The SOUNDMASTER Shadow

Step 1. Carefully unpack the unit and read this instruction sheet completely. We recommend that you save the carton and packing materials to store the unit in case you ever need to return it for service.

Step 2. To connect your iPod, choose the appropriate dock adapter provided (if needed) for your iPod. Insert the dock adapter by slipping it over the connection port on the unit, then carefully connect your iPod.

Step 3. Connect the AC adapter plug into the 12V DC IN port on the back of the SOUNDMASTER Shadow. Plug the AC adapter into a wall outlet. Press the power button on the top of the unit. A red LED will light up to indicate your SOUNDMASTER Shadow is powered.

Step 4. You can listen to an iPod, MP3 player or other portable audio device through the AUX port located on the rear of the SOUNDMASTER Shadow by using the supplied stereo-jack cable. NOTE: The AUX port does not charge your audio device or iPod.

Step 5. Also located on the rear of the SOUNDMASTER Shadow is a USB port. USB is a data transfer connection that allows the SOUNDMASTER Shadow to connect to your computer and keep your iPod charging while still downloading music from your computer. To use, connect the included USB cable (this is the cable with two flat, rectangular plugs at each end) into the port on the back of the SOUNDMASTER Shadow and the other end into the USB port on your computer. Once connected your computer will recognize your iPod. Continue to use as normal.

Using Your SOUNDMASTER Shadow

Press the MODE button to select the option you want to play. Choose from FM, AM, AUX, or iPod.

iPod Function

In iPod mode use your iPod as you normally would.

Radio Function

1. In FM mode use the VOLUME/TUNING+ and the VOLUME/TUNING- buttons to tune the radio to the desired frequency.
2. In AM mode use the VOLUME/TUNING+ and the VOLUME/TUNING- buttons to tune the radio to the desired frequency.
3. To auto-jump to the next or previous radio station with clear reception, press and hold the UP/TUNING+ or DOWN/TUNING- buttons for approximately 1 second.

LED Display

Depending on which audio source is selected, the LED display will show the following information:

iPOD and AUX: Volume level will be shown.

FM/AM Radio: Frequency selected will be shown.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>