



Model: iB75


Bluetooth wireless earbuds with mic + remote and pouch



Introduction

Your new iHome Bluetooth stereo headphones are designed to link with your Bluetooth enabled smartphone or music player to allow you to wirelessly listen to music and answer phone calls within the normal 10 meter (30 feet) Bluetooth operating range.

What's Included

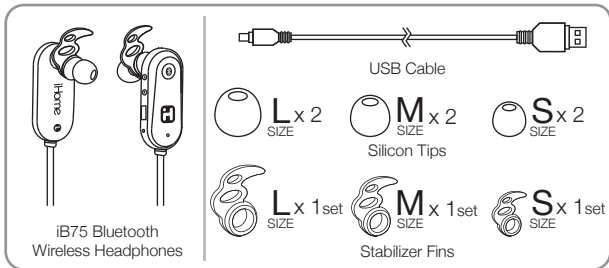

Specifications

Bluetooth specification: Supports V2.1 + EDR with Handsfree Profile 1.5, Headset Profile 1.1 and A2DP profile 1.2 (Class II)

Standby time: 100 hours (with fully charged battery)

Talk time: 8 hours (with fully charged battery)


Music Playing Time: 7 hours (with fully charged battery)

Operating Distance: up to 10 meters / 30 feet

Weight: 16 grams

Certifications: CE, FCC, RoHS, BQB


Controls and Indicators

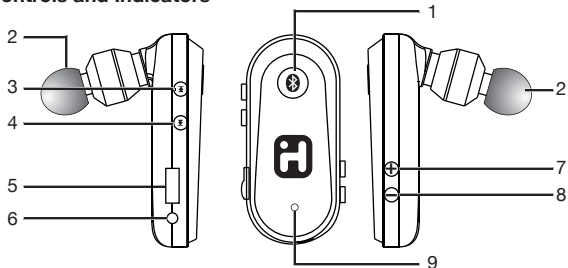

1. Multi-function button: Power On/Off, Answer/End, Pair, Play, and Pause
2. Speakers
3. Back button
4. Forward button
5. Mini 8-pin USB Charging Port (located under water resistant cover)
6. Microphone
7. Volume + button
8. Volume - button
9. Power On, Charging, Pairing LED Indicator

Charging Your Headphones

IMPORTANT: Your headphones operates on a built-in rechargeable lithium-ion battery. You should charge the battery for a full 4 hours before first time use.

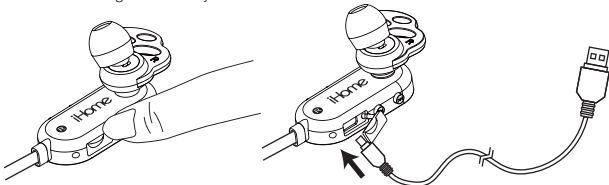

1. Lift up the water resistant cover to expose the Mini 8-pin USB charging port.
2. Connect the Mini 8-pin USB plug on the charging cable to the Mini 8-pin USB port on the headphones.
3. Connect the standard USB plug on the charging cable to any standard USB power port such as found on a notebook computer, or the charging adapter for an iPod, iPhone, etc.
4. The Power/Charging/Pairing indicator will glow RED while the headphones is charging. The indicator will turn Off when the battery is fully charged.

Reminder: Allow the battery to charge for 4 hours before first time use. Normal recharge time after first use should take about 2 hours. When full charged the battery will provide up to 8 hours of talk time, 7 hours of music playing time, or 10 hours of standby time.

Switching the Power On and Off

1. Press and hold the Multi-function button for approximately 3 seconds until a 'beep' is heard. The LED indicator turns blue and begins flashing slowly. This indicates that the power is 'On'.
2. When the power is 'On' press and hold the Multi-function button for approximately 3 seconds until a 'beep' is heard. The LED indicator turns red, flashes for a few seconds and then shuts off. This indicates that the power is 'Off'.

Pairing With a Bluetooth Enabled Smartphone or Music Player

If your smartphone or music player, such as the iPod touch, is Bluetooth enabled (supports the A2DP Bluetooth Profile) you may pair these iHome headphones with your phone or music player to listen to music and make or receive calls as long as the two devices are within the Bluetooth operating range of approximately 30 feet of each other.

1. Make sure that your iHome iB75 headphones are in the Power Off mode. Make sure that your smartphone or music player is 'On'.
2. Press and hold the Multi-function button on your iB75 headphones for about 5 seconds until the LED indicator alternately flashes red and blue to indicate it is trying to pair with a compatible device.
3. If necessary, turn on the Bluetooth function of your phone or music player so that it begins searching for a compatible device.
4. "iHome iB75" should appear on your phone or music player's compatible devices list. You may also see a message such as "Not Paired". Tap on that message to complete the pairing process. If your phone or music player asks for a 'password' to complete the pairing process, enter '0000' on the keypad of your phone or music player.
5. When pairing is successful the screen on your phone should show "iHome iB75 Connected" or similar message and the blue LED indicator on the iB75 headphones should flash repeatedly. Your headphones are now ready for use.

Wearing Your Headphones

Your iHome Bluetooth headphones are supplied with 3 different sizes of silicon ear cushions (tips) and three different sizes of soft rubber stabilizer 'fins' designed to prevent the headphones from falling out of your ears during periods of strenuous physical activity. Refer to the following illustration showing the proper way to fit the headphones in your ears with the stabilizer fins installed.

Although you must use the headphones with the silicon cushions to form a proper seal in your ear canals, using the stabilizer fins is optional.

The medium (M) size cushions and 'fins' were installed at our factory. If you find that the M size cushions and fins are either too big or too small for you, you may change to the S or L size cushions and fins. Start by removing the cushions simply by pulling them off the plastic tubes. Then remove the rubber 'fins' from the speaker housing. Install either the S or L fins on the speaker housings first, then install either the S or L cushions by pushing them onto the plastic posts as far as they will go. Make sure that the cushions are securely fixed on the posts so that a cushion does not remain in your ear when you



The two earpieces are marked 'L' and 'R'. All of the controls and the Mini 8-pin USB charging port are located on the 'R' earpiece. Place the 'R' earpiece in your right ear and the 'L' earpiece in your left ear. The cable connecting the two earpieces should be behind your neck.

Using Your Headphones

Note: Some of the functions described below may not be supported on your specific smartphone. Check with your smartphone owner's manual to confirm the features supported by your phone.

Your headphones must be paired with your phone and turned on to perform any of the following operations.

Receiving/Ending A Call

When you receive an incoming call, press the Multi-function button once to answer the call through the headphones. When you are finished speaking press the Multi-function button once more to end the call.

Making A Call

When you make a call on your smartphone the call may be automatically transferred to the headphones if your smartphone supports this automatic transfer function. If not, press the Multi-function button once to transfer the call to the headphones.

Voice Activated Calling

If your smartphone supports this feature with the headphones, press and hold the Multi-function button for about 2 seconds to initiate the voice activated calling function, then follow the instructions supplied with your phone.

Last Number Redial

If your phone supports this feature, press the Multi-function twice to redial the last number you called.

Declining A Call

If you receive a call that you would rather not accept (indicated by the caller ID on your phone) press the Multi-function button twice to decline the call.

Volume Control

Press the Volume " + " or " - " to adjust the volume of the incoming calls or the music volume level.

Listening to Music

To listen to music your headphones must be paired and connected to a smartphone or music player that supports the A2DP Bluetooth profile (see “Pairing With a Bluetooth Enabled Smartphone or Music Player” above). To play music, use the playback controls on the connected device. If you answer or make a call while listening to music, the music will pause automatically until you end the call.

You may also use the buttons on the ‘R’ earpiece to control the music as follows:

Play or Pause – Press the Multi-function button once to start playback; press again to pause; press once more to resume playback.

Track Controls – Press the ► button during playback to skip the beginning of the next track. Press the ◀ button once during playback to skip back to the beginning of the current track. Press twice to skip back to the beginning of the previous track.

Volume Controls – Press the “+” or “-” buttons to control the music playback volume.

Troubleshooting

Reception is noisy or intermittent.

Make sure that the headphones and the paired device are within the Bluetooth operating range of approximately 30 feet.

No Sound	Make sure that your headphones are properly paired and connected with your Bluetooth enabled smartphone or music player. Refer to the “Pairing” instructions on this manual and in the manual supplied with your phone or music player if necessary.
	The rechargeable battery in your headphones may be exhausted and need to be recharged. Refer to the “Charging Your Headphones” instructions in this manual.
Unable to Pair/Connect	The pairing settings between the headphones and your smartphone or music player may have been erased or deleted. Follow the “Pairing” instructions in this manual to repair and reconnect the devices.
Some Functions Do Not Work	Your specific model of smartphone may not support some of the functions described in this manual. Refer to the manual supplied with your phone for further information.

Care and Maintenance

Always remember to turn your headphones off if they will not be used for a long period of time. Do not expose your headphones to extremely hot or cold temperatures for extended periods. Do not expose them to direct sunlight or leave them in places such as the dashboard of your car on a hot day. Prevent water or any other liquids from entering the cabinets of your headphones.

USB Cable

This iHome Bluetooth headphone uses a "Mini 8-pin USB" cable for charging. You cannot charge this model with a standard mini or micro USB cable. If you misplace or lose the original Mini 8-pin USB charging cable supplied with this headphone, contact iHome Customer Service to order a replacement Mini 8-pin USB cable.

Protect Your Hearing

Using these, or any headphones at high volume levels for long periods can result in permanent hearing damage. Always start listening with volume controls on your headphones and your paired smartphone or music player at a low level and then gradually increase the volume controls to a comfortable listening level.

Important Notes

It is dangerous and illegal (in some jurisdictions) to use headphones when you are driving a car, riding a bike or motorcycle, or operating a watercraft. Be aware of local laws and regulations.

Do not use these headphones in situations where they might cause distractions or prevent you from hearing warning sounds.

These headphones contain small parts and should be kept out of reach of small children.

There are no user serviceable parts in these headphones. Do not attempt any service or repairs on your own. Refer to the warranty for service, repair or replacement information.

FCC Information

FCC ID: EMOIB75

IC: 986B-IB75

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This Device complies with RSS-210 of the IC Rules; Operation is subject to the following two conditions:

- (1) This device may not cause interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio RSS-210. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Limited One-Year Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for one year of the product from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by SDI Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Call SDI Customer Service at 1-800-288-2792 for Return Authorization and for the address of the Factory Service Center.
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box. SDI is not responsible for damage that occurs during shipping to the Factory Service Center.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period. Also include your name and address information, a brief description for why the unit is being returned, and the return authorization number. No unit can be processed without a return authorization number.
4. Write the return authorization number on the side of the shipping package and send the unit prepaid and insured to the Factory Service Center address authorized by SDI Customer Service.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2013 SDI Technologies, Inc. All rights reserved

Questions? Visit www.ihome.com or call 1-800-288-2792 Toll Free.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>