

Tempest
Series Blenders
Operation Manual

Mélangeurs de series
Tempest
Manuel d'utilisation

Licadoras de series
Tempest
Manual de uso

Blender Safety

IMPORTANT: This operation manual should be reviewed with all equipment operators as part of your operator training program.

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to hazards that can kill or hurt you and others.

All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING." These words mean:

! DANGER

You will be killed or seriously injured if you don't follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

! WARNING



Electrical Shock Hazard

Plug into a grounded outlet.
Do not remove ground.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.

! WARNING



Cut Hazard

Always place cover on jar when blending.
Do not put hands, spoons, or other utensils in jar when blending.
Failure to follow these instructions can result in broken bones or cuts.

Requesting Assistance or Service

Before calling for assistance or service, please check the "Troubleshooting Guide" in this manual. If you still need help, follow the instructions below.

Whenever you call to request assistance or service, you need to know the complete model number. You can find this information on the label on the bottom of your blender.

Please also record the purchase date of your equipment and your dealer's name, address, and telephone number.

Model Number _____

Purchase Date _____

Dealer Name _____

Dealer Address _____

Dealer Phone _____

You can also order **replacement parts** by calling your nearest Hamilton Beach Commercial Service Center or your local dealer.

Call our Technical Service number: 866-285-1087 or 910-692-2223

8 a.m. – 5:30 p.m. EST Monday – Thursday, 8 a.m. – 5:15 p.m. EST Friday
(www.commercial.hamiltonbeach.com)


IMPORTANT SAFETY INSTRUCTIONS

WARNING — When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions.
- Plug into a grounded outlet.
- Do not touch surfaces that may be hot. Use handles or knobs provided.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- To protect against electrical shock, do not immerse cord, plug, or blender base in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- The use of accessory attachments not recommended by Hamilton Beach may cause injuries.
- To reduce risk of personal injury, unplug cord from outlet when not in use, and before putting on or taking off parts or doing any other servicing of the blender.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- To reduce risk of personal injury and to prevent damage to blender or jar and cutter assembly, DO NOT insert utensils into blender jar while operating blender, or store utensils in the blender jar when it is not in use.
- Avoid contacting moving parts.
- Blades are sharp. Handle carefully.
- Inspect jar and cutter assembly daily. Check cutter for wear, nicks, or broken blades. Replace jar and cutter assembly at least every 12 months.
- Do not defeat the jar pad sensors.
- Do not use outdoors.
- This appliance is intended for short periods of operation, with a rated operating time of 3 minutes.
- To prevent damage to blender, jar, or cutter assembly, DO NOT move or shake blender while in operation. If blending action stops during operation, turn blender OFF, remove jar from base, remove jar cover, and use a thin rubber spatula to push mixture towards cutters.
- Do not spray the base with a high-pressure spray gun.
- Disconnect power before cleaning or servicing.
- To prevent burns from hot liquids splashing out of the jar, always remove the filler cap of the container cover before blending hot liquids.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest service facility for examination, repair, or electrical or mechanical adjustment.
- If the supply cord of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person. If fitted with a non-rewirable U.K. plug, the 13 amp fuse approved by ASTA to be B.S. 1362 must be used. If you need a replacement fuse carrier, it must be replaced by the same colour coded carrier with the same markings. Fuse covers and carriers can be obtained from approved service agents. **IMPORTANT:** If the molded plug is cut off, dispose of it immediately. The plug is not rewirable and would cause a shock hazard if inserted into a socket.
- For a complete operation manual in this language, please visit our website at www.commercial.hamiltonbeach.com or call 910-692-2223.

– **SAVE THESE INSTRUCTIONS** –

Blender Operation — Quick Start Guide

1. Place the blender on a dry, level surface.
2. Make sure the power switch is in the “off” or **O** position. Plug the blender into a grounded electrical outlet.
3. Place the jar on the base with ingredients and jar lid in place.
4. Set the controls to your preference.
5. Move the power switch to the “on” or **I** position (except model 915).
6. Move the power switch to start (run) or  position.

Caring for the Blender

Cleaning the Blender

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded outlet.
Do not remove ground.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.

⚠ WARNING



Cut Hazard

Always place cover on jar when blending.
Do not put hands, spoons, or other utensils in jar when blending.
Failure to follow these instructions can result in broken bones or cuts.

Cleaning

The jar should be cleaned immediately AFTER EACH USE. The jar can be cleaned in the following manner:

1. Fill the jar half full with warm water, 122 degrees F (50 degrees C).
2. Add a drop of liquid detergent or ½ teaspoon of detergent powder.
3. Place the cover/filler cap on the jar and blend on C cycle or the High setting for 30 seconds.
4. Turn the blender off, and then rinse the jar and wipe down to dry. Do not disassemble the cutter assembly.
5. Wash the jar cover/filler cap in warm, soapy water. Rinse and let dry.
6. Unplug the blender.
7. Wipe down the blender base with a damp cloth.

Sanitizing

If the blender will not be used again within 1 hour, sanitize the container in the following manner:

1. After washing the jar, fill it with a cold chlorine-based sanitizing solution that has a minimum chlorine concentration of 100 parts per million. See recommended solution below.
2. Place the cover/filler cap on the jar and blend on C cycle or the High setting for a minimum of 2 minutes.
3. Empty the jar but do not rinse.
4. Dry the jar by placing it on the blender base and turn the blender on C (Slide-step cycle) or the High setting for 2 seconds.

Recommended Sanitizing Solution:

The sanitizing solution should consist of 1 tablespoon of household bleach per 1 gallon of clean, cool water (60° F, 16° C) mixed according to the instructions on the bleach. When using a sanitizing solution other than that recommended, the sanitizing solution concentration should be tested using commercially available test strips and should indicate a concentration between 100 and 200 parts per million of bleach to water.

Troubleshooting Guide

Problem . . .	Solution . . .
Operation/Status light lights red (on some models)	A system fault has been detected. Unplug unit for 5 seconds, and then plug unit back in. If light is still red, unplug unit for 6 minutes, and then plug unit back in. If light is still red, refer to "Requesting Assistance or Service." If Operation/Status light repeatedly lights red, refer to "Requesting Assistance or Service."
Unit will not run	<ul style="list-style-type: none"> • Check to see if unit is securely plugged into an electric outlet. • Check to see if operation light is illuminated when blender is On. • Check to see if the fuse for the electric outlet has blown or if a circuit breaker has tripped. • Jar is not securely seated on the base.
Ingredients will not mix properly	<ul style="list-style-type: none"> • Check to see if enough liquid has been added to the ingredients. Mixture should be fluid and free-running at all times. • Solid pieces are too large. Pieces should not exceed 1" cubes. • Jar is too full. Do not fill past highest graduation marking. • Cutters are not sharp or are damaged. Inspect jar and cutter assembly daily. Replace jar and cutter assembly at least every 12 months or when damaged.
Operation/Status light lights yellow (on some models)	<ul style="list-style-type: none"> • Jar is not on blender base. • Jar is not securely seated on optional jar pad sensors.

Maintenance

Inspect the blender and its various parts and replace as follows:

Daily	Unplug the blender and remove the jar from the base, and then inspect the jar and cutter assembly for wear, nicks, or broken blades. Replace if necessary. See "Replacement Parts" below.
Weekly	Unplug the blender, and then inspect the power cord insulation and power plug for cracks. Refer to "Requesting Assistance or Service" for repair or replacement.
Yearly	Replace the jar and cutter assembly at least once a year. See "Replacement Parts" below.

NOTE: Do not operate this blender if it malfunctions or is dropped or damaged in any manner. Return blender to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.

Replacement Parts

Refer to "Requesting Assistance or Service" on page 2 to order parts below.

Description . . .	Part Number . . .
32 oz. Polycarbonate jar and cutter assembly (includes cover/filler cap)	6126-91515

Product Warranty

This Warranty supercedes all other Product Warranties

This product is warranted to be free from defects in material and workmanship for a period of three (3) years parts/ two (2) years labor OR 15,000 cycles (whichever comes first) from the date of original purchase, except as noted below. **There is a lifetime warranty on the motor drive coupling and blade.**

During this period, we will repair or replace this product, at our option, at no cost to you.

THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESSED OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL, AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED.

There is no warranty with respect to the following, which may be supplied with this product: (motor brushes, container and cutter assembly, container clutches, bristle brushes, funnel, stainless steel cup, agitators, carafes, etc.). This warranty extends only to the original purchaser and does not cover a defect resulting from abuse, misuse, neglect, unauthorized repair, or any use not in conformity with the printed directions.

Always use this product in the manner provided in the Operation Manual. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state or province to province. Some states do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, please contact our **TECHNICAL SERVICE CENTER 1-866-285-1087**. (For faster service, please have model, series, and type numbers ready for the operator to assist you). Reasonable proof of the date of purchase must be presented; otherwise, the effective date of the warranty will be based on the date of manufacture plus ninety days.

Hamilton Beach/Proctor-Silex, Inc.
Commercial Customer Service
263 Yadkin Road
Southern Pines, NC 28387

01/03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>