

MODELOS DISPONIBLES

tenacillas

1/2 pulgada (13 mm)

Modelo CD80

3/4 pulgada (19 mm)

Modelo CD81

1 pulgada (25 mm)

Modelo CD87

1 1/4 pulgada (32 mm)

Modelo CD82

1 1/2 pulgada (38 mm)

Modelo CD89

cepillo de aire

3/4 pulgada (19 mm)

Modelo BC84

1 1/4 pulgada (32 mm)

Modelo BC86

INSTRUCCIONES DE MANTENIMIENTO

PRECAUCIÓN


Si aparato requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpie la superficie exterior, per- mita que entre y limpie la superficie exterior con un paño. En caso de mal funcionamiento, desconecte el aparato, permita que entre y regrese a un centro de servicio autorizado. No trate de repararlo.

NUNCA jale, fuerza ni retuerza el cable eléc- trico. Nunca lo enrolle con fuerza alrededor del aparato. Esto podría dañar la junta flexi- ble que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no esté dañado. Deje de usar el aparato inme- diatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.

Después de usar el aparato, desconéctelo, permita que enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tiree ni retuerza el cable al nivel del enchufe. No enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si esta conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

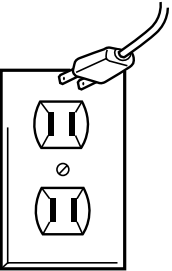

MANTÉNGALO ALEJADO DEL AGUA

ADVERTENCIA: SI GREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTA EQUIVOCADO

GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un periodo de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US\$7.50 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el periodo de garantía será de 24 meses a partir de la fecha de fabricación.

QUALQUIER GARANTIA, OBLIGACION O RESPONSABILIDAD IMPLICITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTIA IMPLICITA DE COMERCIABILIDAD Y APTTUD PARA UN PROPOSITO ESPECIFICO, ESTARAN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTIA ESCRITA. Algunos Estados no permiten limitaciones sobre la duracion de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERA RESPONSABLE, EN NINGUN CASO, POR NINGUN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTIA, EXPRESA O IMPLICITA. Algunos Estados no permiten la exclusion o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.


IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Esta garantía le otorga derechos legales espe- cíficos y usted puede tener otros derechos que varían de un Estado a otro.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER

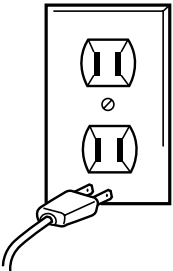

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

Centro de servicio

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Para registrar su producto, visitenos en:
www.conair.com/registration

Para más información sobre los productos Conair, llame al 1-800-3-CONAIR o visitenos en www.conair.com

©2012 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

IB-10898

11PA123649

Modelos BC84WCS y BC86WCS

CONAIR®

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

Instrucciones



Hot sticks® & volumen

Hot sticks®

calentamiento instantáneo

AVAILABLE IN THE FOLLOWING SIZES:

Curling Irons

1/2 in. (13mm)
Model CD80

3/4 in. (19mm)
Model CD81

1 in. (25mm)
Model CD87

1 1/4 in. (32mm)
Model CD82

1 1/2 in. (38mm)
Model CD89

Hot Brush

3/4 in. (19mm)
Model BC84

1 1/4 in. (32mm)
Model BC86

USER MAINTENANCE

Your hot brush is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the hot brush from the power source, let it cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the hot brush, allow it to cool, and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the hot brush. Damage will occur at the high flex point of entry into the hot brush, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool, and stored in a safe, dry location out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.



Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

Models BC84WCS and BC86WCS

Instant heat
hot sticks®
big curls & volume

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>