IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER–Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Always unplug appliance from electrical outlet immediately after using (except when charging unit) and before cleaning.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use appliance while bathing or in the shower.
4. Do not place appliance in, or drop into water or other liquid.
5. If appliance has fallen into water, do not reach for it. Unplug immediately.

DO NOT REACH INTO THE WATER

WARNING– To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Never leave a plugged-in appliance unattended.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer. Do not use an extension cord to operate the appliance.
4. Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service centre for examination and repair.
5. Keep the appliance cord away from heated surfaces.
6. Do not pull, twist or wrap the cord around the appliance.
7. Never drop or insert any object into any opening of the appliance.
8. Do not place the appliance on any surface while it is operating.
9. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.
10. Do not use the appliance outdoors or operate where aerosol (spray) products are being used or oxygen is being administered.
11. **This product is for household use only.**

SAVE THESE INSTRUCTIONS

TROUBLESHOOTING

There are several things to look for if your trimmer fails to operate:

1. Be sure the trimmer is turned ON.
2. Check the blades to see if they are clogged with hair clippings; if so, use the cleaning brush to remove hair.
3. If the trimmer still fails to operate, take or send it to a Conair Service Centre (see warranty procedure and addresses).

If your rechargeable trimmer does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

1. Be sure the electrical outlet is working, by plugging in another appliance to test it.
2. Make sure the electrical plug is not connected to a switch which turns power off when lights are turned off.
3. Be sure you have inserted the trimmer properly into the charging stand, that all connections are secure, and that the trimmer switch is in the "OFF" position.

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS

FOR YOUR RECHARGEABLE TRIMMER

Check to be sure which model you have purchased.

1. Before using your trimmer for the first time, insert the trimmer in the charging base and then plug into wall outlet and charge it for 16 hours. Always place the trimmer in the stand with the ON/OFF switch in the OFF position. Attempting to charge the unit in the ON position can cause damage to the unit and it will not charge.
2. Always check to see if the charging light is on when the cord is connected to the trimmer and the unit is not in use.
3. Plug unit into any 120V, 60Hz wall outlet.
4. The trimmer can remain plugged into the power source at all times without damage to the battery.
5. To use your trimmer, push ON/OFF switch upwards to "ON" position.
6. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
7. If, while trimmer is in use, the charge seems to be running down, simply put ON/OFF switch in OFF position. Then, insert the trimmer in the charging base and plug into wall outlet. Allow battery to recharge for several hours.
8. To maintain the full charging capacity and extend the life of the battery, it must be periodically run down during normal use until it stops, then recharge.
9. The charge base may become warm while charging – this is normal.
10. To charge the unit when traveling, you do not need to take the stand with you. Just plug the cord directly into the unit and the unit will begin charging. (Remember switch must be in the "OFF" position,

BATTERY REMOVAL

CONTAINS NICKEL CADMIUM BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

RECYCLE Ni-Cd 1-800-822-8837

Remove the battery cap and push the batteries out. Bring the batteries to the nearest collection centre for proper disposal. DO NOT throw the battery into the normal municipal waste system.

TURBO FEATURE

This product is equipped with a turbo boost button. When activated, this will proved 15% more cutting power. This is especially useful for cutting through thicker hair.

To activate the turbo feature:

1. Turbo the power switch to the "ON" position
2. Press the Turbo button, it is the round button located on the side of the trimmer
3. Continue to press the Turbo button for as long as you need the extra power
4. Release the Turbo button to return to normal power

PIVOTING HEAD

To make it easier to trim hard to reach areas, the trimmer has a multi position pivoting head.

To pivot the head:

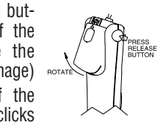

1. Press the release buttons on the side of the trimmer and rotate the pivoting head. (see image)
2. Press bottom of the trimmer head until it clicks into the position that is most comfortable for trimming your face.

TYPES OF BEARDS/MUSTACHES

GROWING A BEARD OR MUSTACHE

There are three key factors that determine which beard or mustache style is most suitable for your face:

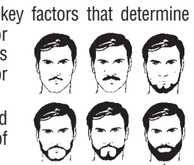

1. The shape and dimensions of your face.
2. The natural growth of your beard/ mustache.
3. The thickness of your beard/mustache.

If you are unsure of the type of beard or mustache that most suits your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your shaper to trim your beard/mustache weekly.

For the best trimming results, your beard should be slightly damp (not wet) before using the trimmer. This will prevent the trimmer from removing more hair than desired.

GETTING STARTED

TO SWITCH TRIMMER HEADS

Hold the trimmer handle with the back of the trimmer facing you.

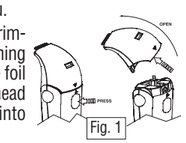

Fig. 1

Attach the beard trimmer head by aligning both arrows on the foil frame and on the head until it clicks into place. (Fig.1)

Attach another head by pushing it down on the top of the trimmer until it snaps into place.

USING THE SHAVER ATTACHMENT

Attach the foil shaver head by snapping it in place. Turn unit on. Gently press the foil head against your skin where you want to completely shave the skin clean. Gently pull your skin taught and move the shaver in a circular motion over your skin.

When you are finished, or if you have a lot of stubble to remove, press the release buttons on the side of the shaver head (see cleaning instructions) and gently pull the foil assembly off. Clean the cutter and foil using the brush. Reattach the foil head.

Download from Www.Somanuals.com. All Manuals Search And Download.

CONSIGNES IMPORTANTES

L'utilisation d'appareils électriques, surtout en présence d'enfants, demande la prise de précautions élémentaires, dont les suivantes :

LIRE TOUTES LES DIRECTIVES AVANT L'UTILISATION

TENIR LOIN DE L'EAU

DANGER–Un appareil est sous tension même s'il est éteint. Afin de réduire ir sigue de mort ou de blessure par choc électrique :

1. Déconnectez-le de la prise de courant immédiatement après l'usage (sauf pendant la charge) et avant le nettoyage.
2. Ne le placez pas et ne le rangez pas là où il peut tomber ou être tiré dans un évier ou une baignoire.
3. Ne l'utilisez pas en prenant un bain ou une douche.
4. Ne le placez pas et ne l'échappez pas dans l'eau ou un liquide.
5. S'il tombe dans l'eau, ne le saisissez pas. Déconnectez-le immédiatement.

N'ALLEZ PAS SAISIR UN APPAREIL TOMBÉ DANS L'EAU

AVERTISSEMENT–

Afin de réduire le risque de brûlure, d'incendie, de choc électrique ou de blessure :

1. Ne laissez jamais l'appareil branché sans surveillance.
2. L'appareil ne doit pas être utilisé par, sur ou près d'enfants ou de personnes souffrant de certaines infirmités.
3. Ne l'utilisez pas pour l'usage prévu indiqué dans ce livret. N'utilisez que les accessoires recommandés par le fabricant. Ne l'utilisez pas avec une rallonge.
4. Ne l'utilisez pas avec un fil ou une fiche endommagée, s'il a été échappé ou brisé ou s'il est tombé dans l'eau. retournez-le au service après-vente Conair où il sera inspecté et réparé.
5. Gardez le fil loin des surfaces chauffées.
6. Ne tirez ni ne tordez le fil et ne l'enroulez pas autour de l'appareil.
7. N'échappez ni n'insérez aucun objet dans les ouvertures.
8. Ne le déposez pas sur une surface alors qu'il est en marche.
9. Ne l'utilisez pas avec un peigne cassé ou endommagé ni s'il manque des dents aux lames car vous risquez de vous blesser. Assurez-vous que les lames sont bien alignées et huilées avant chaque usage.
10. Ne l'utilisez pas à l'extérieur ni là où l'on utilise des aérosols ou administre de l'oxygène.
11. **L'appareil est réservé à l'usage ménager.**

CONSERVEZ CES DIRECTIVES

DÉPISTAGE DES PROBLÈMES

Si l'appareil ne fonctionne pas, effectuez les vérifications suivantes :

1. Assurez-vous qu'elle est allumée (ON).
2. Assurez-vous que les lames sont propres; si elles sont embourbées, nettoyez-les avec la brosse de nettoyage.
3. Si la tondeuse ne fonctionne toujours pas, présentez-la au service après-vente de Conair (procédure et adresse dans le texte de la garantie).

Si la tondeuse rechargeable ne semble pas se charger, procédez comme suit avant de la présenter au service après-vente :

1. Assurez-vous que la prise de courant est sous tension en y branchant un autre appareil.
2. Assurez-vous que la prise n'est pas commandée par un interrupteur qui coupe le courant quand vous éteignez les lumières.
3. Assurez-vous de bien placer la tondeuse sur le support chargeur afin d'assurer un bon contact, et de régler l'interrupteur sur OFF.

RÉSERVÉ À L'USAGE MÉNAGER

DIRECTIVES D'UTILISATION

TONDEUSE RECHARGEABLE

Vérifiez quel modèle vous avez acheté

1. Avant d'utiliser la tondeuse la première fois, placez-la sur le socle chargeur et branchez-le dans une prise de courant. Chargez-la pendant 16 heures. Placez toujours la tondeuse sur le socle, l'interrupteur en position d'arrêt (OFF). Tenter de charger la tondeuse en marche peut l'endommager et elle ne se chargera pas.
2. Vérifiez toujours si le témoin de charge s'allume quand il est connecté à la tondeuse qu'elle n'est pas en service.
3. Connectez-la dans une prise 120 V, 60 Hz.
4. La tondeuse peut être laissée branchée dans la prise de courant en tout temps, sans dommage à la pile.
5. Pour l'utiliser, poussez l'interrupteur en position de marche (ON).
6. Après l'utilisation, réglez l'interrupteur en position d'arrêt (OFF).
7. Si, en cours d'usage, la tondeuse semble ralentir, éteignez-la puis placez-la sur le socle chargeur. Branchez le socle dans une prise de courant et laissez la pile charger pendant quelques heures.
8. Pour maintenir la pleine capacité de charge et prolonger la durée de la pile, laissez la tondeuse fonctionner jusqu'à ce qu'elle s'arrête puis recharger-la.
9. Le socle chargeur peut devenir chaud en cours d'usage; cela est normal.
10. Pour charger la tondeuse en voyage, vous n'avez pas à emporter le socle chargeur. Branchez le fil directement dans la tondeuse et elle se chargera (n'oubliez pas de mettre l'interrupteur en position d'arrêt).

REMPLACEMENT DE LA PILE

PILE NICKEL-CADMIUM. CETTE PILE DOIT ÊTRE RAMASSÉE, RECYCLÉE OU JETÉE CORRECTEMENT. NE LA JETEZ PAS AVEC LES ORDURES MÉNAGÈRES.

RECYCLE Ni-Cd 1-800-822-8837

Enlevez le capuchon et faites sortir les piles. Apportez les piles à un centre de collecte. NE LES JETEZ PAS avec les ordures ménagères.

FONCTION TURBO

La tondeuse possède une fonction turbo qui accroît sa puissance de 15 % quand elle est engagée. La fonction est pratique pour la tonte de cheveux très épais.

Pour l'utiliser :

1. Mettez la tondeuse en marche.
2. Appuyez sur le bouton Turbo rond situé sur le côté de la tondeuse.
3. Tenez le bouton Turbo enfoncé tant que vous voulez utiliser la fonction.
4. Relâchez le bouton Turbo pour retourner à la puissance normale.

TÊTE PIVOTANTE



Pour mieux atteindre les endroits difficiles à couper, on peut faire pivoter la tête sur plusieurs positions :

1. Appuyez sur les boutons de dégagement de part et d'autre de la tête et inclinez la tête (voir l'illustration).
2. Poussez le bas de la tête jusqu'à ce qu'elle s'enclique dans la position la plus confortable pour la tonte des poils.



TYPES DE BARBES/MOUSTACHES

Il y a trois principaux facteurs à considérer pour établir quelle barbe ou moustache convient le mieux à votre visage :



1. La forme et la dimension du visage.
2. La croissance naturelle de la barbe ou de la moustache.

3. L'épaisseur des poils.

Si vous n'êtes pas certain du type de barbe ou de moustache qui vous convient le mieux, parlez-en à un coiffeur et demandez-lui son opinion. Une fois que votre barbe ou que votre moustache a été taillée, il est essentiel que vous en maintenez l'apparence. Pour ce faire, utilisez la lame de découpe chaque semaine pour tailler votre barbe/moustache.

Pour de meilleurs résultats, la barbe devrait être humide (bien mouillée) avant de tondre. Vous évitérez ainsi de couper plus de poils que désiré.

TOUT D'ABORD

CHANGER LA TÊTE DE COUPE

Tenez la tondeuse, le dos vers vous.

Posez la tête pour la barbe en alignant la flèche de la grille avec celle de la tête et enclique (ill. 1).

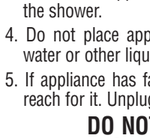

Posez une autre tête en procédant de même, l'enclenchant bien en position.

UTILISATION DU RASOIR

Posez la tête de rasoir en l'enclenchant en place. Mettez l'appareil en marche. Pressez la grille légèrement contre le visage, là où vous voulez raser les poils complètement. Tendez la peau en douceur et déplacez la tondeuse dans un mouvement circulaire sur la peau.

Une fois que vous avez terminé, ou si vous avez beaucoup de poils à couper, appuyez sur les boutons de dégagement de part et d'autre de la tête (voir les directives de nettoyage) et tirez doucement sur la grille. Nettoyez les lames et la grille avec la petite brosse puis remettez la grille en place.

OUTLINING YOUR BEARD

1. It is always best to begin with a clean, slightly damp beard.
2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
3. Attach the beard trimmer head. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns and toward your hairline.

NOW YOU'RE READY TO TRIM YOUR BEARD

There are 2 multi position combs for cutting different lengths of hair. One for shorter lengths and one for longer lengths.

1. To use the multi position comb, slide it over the trimmer blades and snap down into position. At first, until you become familiar with the adjustments, use the longest comb and trim setting. (You can always go back and make your beard a little shorter.)

2. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard, because the hair will be cut too short.)
3. If you decide you want a closer trim, you can now adjust the multi position comb to a shorter setting and go over your beard again until you achieve the desired length.

TO TRIM YOUR MUSTACHE

1. For best results, start with a clean, slightly damp mustache.
2. Comb through your mustache in the direction it grows.
3. Place the multi position comb over the trimmer blades and snap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)

ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN

After your mustache has been trimmed to the desired length, remove the trimming attachment and, using the blades only, define the outline of the bottom of your mustache.

USING THE SCRIBE BLADE

The scribe blade is used for fine detailing of your facial hair. After trimming the hair to the desired length, us the scribe blade to make fine line details, the narrow blade width is perfect for detailing under your lips or along the jaw line

1. Attach the scribe blade head
2. Move the ON/OFF switch to the on position
3. Press the tip of the scribe blade against your skin and move the blade to create the desired detail to your facial hair.
4. When finished detailing, move the ON/OFF switch to the OFF position.
5. Use the supplied brush to clean away hairs.
6. Return the trimmer to the charging stand in between uses

TAKING CARE OF YOUR TRIMMER

BLADE CARE

Cleaning Beard Trimmer

The head can be opened for cleaning purpose by pressing the button at the bottom of head. (Fig.2) The cover will be opened.



Fig.2

Shaver Head

To clean the shaver blade and foil:

1. Press both foil frame release buttons (Fig.5). Then remove the shaver head (the cutter is now in view). Be careful not to push on the foil as it is delicate and can be easily damaged.

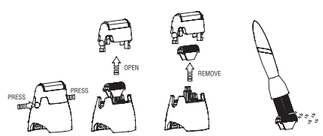

Fig.5 Fig.6

2. Clean the cutter and the surrounding areas with the brush provided (Fig.6). Rinse the shaver foil frame under running water.
3. After rinsing, allow the foil frame to air-dry before closing foil frame. Be sure to align both arrows on the foil frame and on the head until it clicks into place.
4. Hold the cutter firmly and guide it gently into the cutter mount. Press firmly until the cutter snaps into place.

Caution: make sure you do not lose the little spring under the cutter.

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades. Then store the trimmer in its storage stand until the next use.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

Each week drop a small amount of oil on the beard trimmer blades and turn the trimmer on for a few seconds. Wipe any excess oil off the housing.

MN252CSC BEARD/MUSTACHE TRIMMER

1. Beard Trimmer
2. On/Off Switch on Body
3. Battery Compartment
4. Long Comb Attachment
5. Short Comb Attachment
6. Shaver
7. Scribe Blade
8. Recharging/Storage Base
9. Cleaning Brush
10. Mustache Comb
11. Lubricating Oil

LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below that is nearest you, together with your purchase receipt and $5.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

Service Centre:
Conair Consumer Products Inc.
Service Department
156 Parkshore Drive
Brampton, Ontario L6T 5M1
1-800-472-7606
Visit us on the web at: www.conaircanada.ca

©2004 CONAIR CONSUMER PRODUCTS INC.

156 Parkshore Drive
Brampton, Ontario L6T 5M1

04CN1217 IB-5426

3 Position Pivoting Head

Conair wants to thank you for choosing our beard/mustache trimmer. We know it will provide you with years of reliable service.

CONAIR®

Model MN252CSC

Download from Www.Somanuals.com. All Manuals Search And Download.

DÉCOUPE DE LA BARBE

1. Il est toujours préférable de débuter avec une barbe propre et humide.
2. Peignez la barbe dans le sens de la pousse naturelle. Amorcez de découpe au niveau de la mâchoire.
3. Posez la tête pour la barbe. Commencez par définir la forme sous le menton et travaillez vers le haut, de part et d'autre du visage en direction des oreilles. Défilissez la ligne supérieure le long des joues, des favoris et jusqu'à la ligne des cheveux.

TAILLE DE LA BARBE

Il y a 2 peignes à positions multiples pour la taille de la barbe. Un pour les barbes courtes, l'autre pour les barbes longues.

1. Pour utiliser le peigne, glissez-le sur la lame avant de la tondeuse et enclenchez-le. Au début, utilisez le peigne à positions multiples pour trouver le réglage le plus confortable. (Vous pouvez toujours repasser sur la barbe pour la tailler plus courte.)



2. Coupez la barbe en mouvements doux et uniformes. Commencez aux favoris et travaillez en direction du menton. (Ne tentez jamais de couper dans le sens contraire de la pousse naturelle sinon les poils seront coupés trop courts.

3. Si vous voulez une coupe de plus près, vous pouvez ajuster le peigne en conséquence et repasser sur la barbe jusqu'à l'atteinte de la longueur voulue.

TAILLE DE LA MOUSTACHE

1. Une moustache propre et humide donnera de meilleurs résultats.
2. Peignez la moustache dans le sens de la pousse naturelle.
3. Placez le peigne multi-position sur la lame de la tondeuse et enclenchez-le. Il est bon de débuter avec le peigne réglé à la position longue. (Vous pouvez toujours repasser sur la moustache avec un réglage plus court.)

TONDEZ TOUJOURS LA MOUSTACHE DE HAUT EN BAS

Une fois la moustache taillée, enlevez le peigne et, n'utilisant que la lame, découpez la ligne du bas de la moustache.



III. 2

ENTRETIEN DE LA TONDEUSE

ENTRETIEN DES LAMES

Nettoyage de la tête pour la barbe

Ouvrez la tête en appuyant sur le bouton dans le bas de la tête (ill. 2). Le couvercle s'ouvre et vous pouvez nettoyer la lame.

LAME À DÉCOUPER

Cette lame sert au découpage fin des poils faciaux. Une fois les cheveux coupés, utilisez la lame à découper pour tailler avec finesse autour des lèvres ou le long de la machoire.

1. Posez la lame à découper sur la tondeuse.
2. Mettez la tondeuse en marche.
3. Pressez le bout de la lame à découper contre la peau et dégalocez-la pour créer le découpage voulu.
4. Une fois le travail terminé, mettez l'interrupteur de la tondeuse en position d'arrêt.
5. Nettoyez la lame avec la brosse fournie.
6. Remettez la tondeuse sur le socle chargeur après chaque utilisation.

TONDEUSE À BARBE/MOUSTACHE MN252CSC

1. Tondeuse à barbe
2. Interrupteur sur le manche
3. Logement des piles
4. Peigne accessoire long
5. Peigne accessoire court
6. Rasoir
7. Lame de découpe
8. Socle chargeur et de rangement
9. Brosse de nettoyage
10. Peigne à moustache
11. Huile de lubrification

GARANTIE LIMITÉE DE DEUX ANS

Conair, à sa discrétion, réparera ou remplacera sans frais un appareil si, au cours des 24 mois suivant la date de l'achat, il affiche un vice de matière ou de fabrication.

Pour obtenir un service au titre de la garantie, renvoyer le produit défectueux au service après-vente le plus près, accompagné du bon de caisse et de 5,50 $ pour les frais de poste et administratifs.

TOUTE GARANTIE IMPLICITE, OBLIGATION OU RESPONSABILITÉ, Y COMPRIS MAIS SANS Y ÊTRE LIMITÉ, LA GARANTIE IMPLICITE DE BONNE VENTE ET D'APTITUDE À ACCOMPLIR UNE TÂCHE PARTICULIÈRE, SERA LIMITÉE À LA DURÉE DE 24 MOIS DE CETTE GARANTIE LIMITÉE ÉCRITE.

EN AUCUN CAS PEUT-ON TENIR CONAIR RESPONSABLE DE QUELQUE DOMMAGE SPÉCIAL, INDIRECT OU FORTUIT QUE CE SOIT, POUR LE BRIS DE CETTE GARANTIE OU DE TOUTE AUTRE GARANTIE EXPRESSE OU IMPLICITE QUE CE SOIT.

Cette garantie vous accorde des droits particuliers et peut aussi vous accorder d'autres droits qui varient d'une province à l'autre.

Service après-vente :
Conair Consumer Products Inc.
Service Department
156 Parkshore Drive
Brampton, Ontario L6T 5M1
1-800-472-7606
Visitez notre site Web : www.conaircanada.ca

©2004 CONAIR CONSUMER PRODUCTS INC.

156 Parkshore Drive
Brampton, Ontario L6T 5M1

04CN1217 IB-5426

Tête pivotant sur 3 positions

Conair vous remercie d'avoir opté pour la tondeuse à barbe et moustache. Nous savons que vous en tirerez des années de service fiable.

CONAIR®

Modèle MN252CSC

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com