




INSTRUCTIONS

For 4 - 9/16" Walls
Fits up to 3'0" x 6'8" Doors


1510/1511 Series Pocket Door Frame Jamb Kit

www.johnsonhardware.com



1. Install Pocket Door Frame following instructions as normal, including drywalling around opening. Carefully measure height "A" (from floor to bottom of frame header). Cut 1 1/16" x 4 9/16" Strike Jamb to this length.

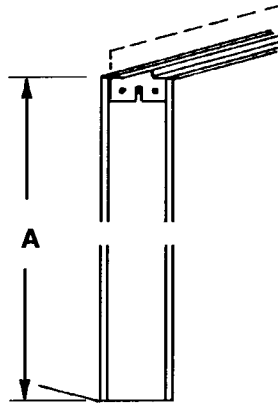


4. Carefully cut split headers to "C". Determine side of hangers with lock arm and fasten this header with screws for easy removal. Nail other side. Here, too, maintain 3/16" on each side of door.

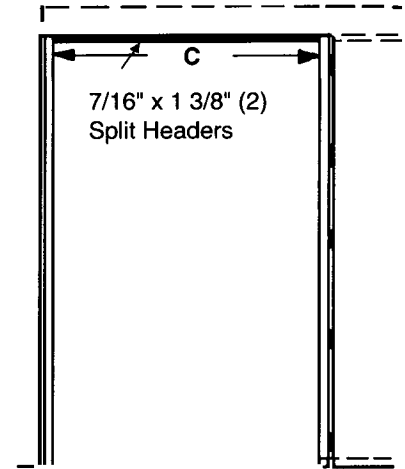


2. Open door fully (door will protrude into opening) and cut split jambs to "B". Fasten to front edge of frame. Maintain minimum 3/16" clearance on both sides of door. Raise or lower hangers to plumb door with split jambs.

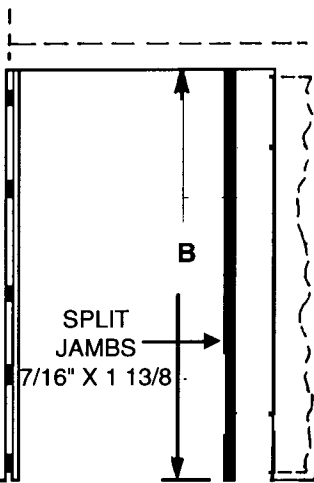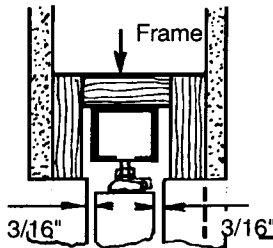


5. Fasten bottom door guides so that door stays in center of pocket, yet travels easily without binding.

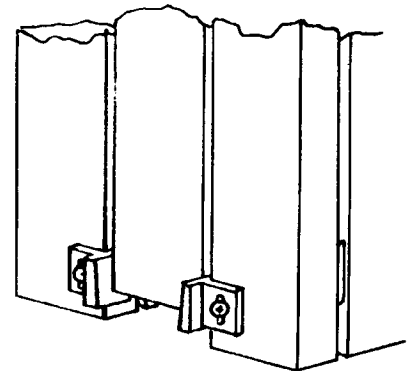

3. Shim and plumb strike jamb (wide piece) with door.

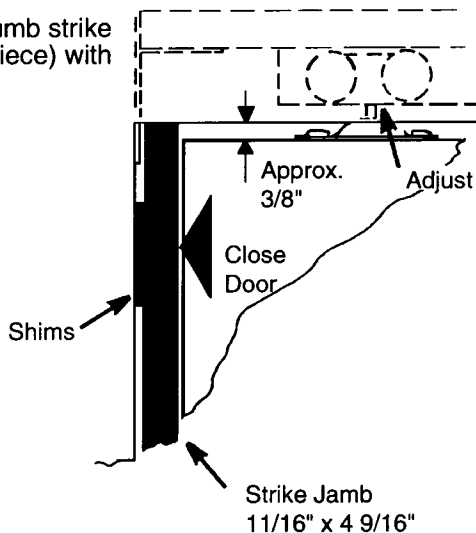

6. Finish with your choice of casings (not included).

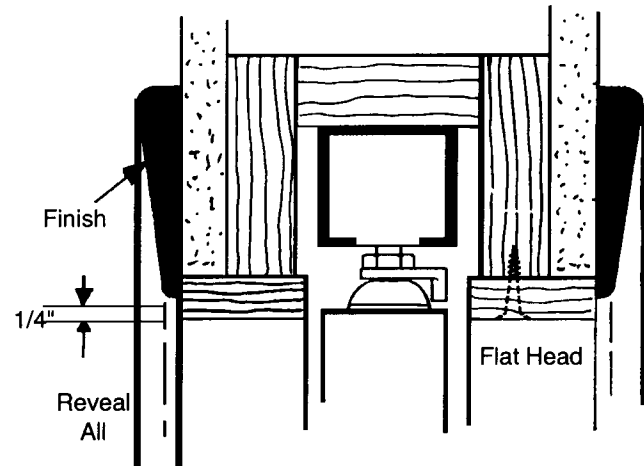

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>