



# Wireless N Green Router

Model # AR675W

## User's Manual

Ver. 1A

# Federal Communication Commission

## Interference Statement

### FCC Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

### FCC Caution

This equipment must be installed and operated in accordance with provided instructions and a minimum 20 cm spacing must be provided between computer mounted antenna and person's body (excluding extremities of hands, wrist and feet) during wireless modes of operation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

## **Federal Communication Commission (FCC) Radiation Exposure Statement**

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The equipment version marketed in US is restricted to usage of the channels 1-11 only.

# Table of Contents

<b>CHAPTER 1 INTRODUCTION.....</b>	<b>6</b>
1.1 FEATURES.....	6
1.2 PACKAGE CONTENT .....	6
1.3 ROUTER INTERFACE .....	6
<b>CHAPTER 2 CONNECTING THE ROUTER .....</b>	<b>9</b>
2.1 BUILDING NETWORK CONNECTION .....	9
2.2 CONFIGURING THE ROUTER – SETUP WIZARD.....	11
2.3 CONNECTING TO THE ROUTER WIRELESSLY .....	25
2.4 TROUBLESHOOTING.....	27
<b>CHAPTER 3 USING WEB CONFIGURATION UTILITY .....</b>	<b>28</b>
3.1 NETWORK .....	29
3.1.1 WAN.....	29
3.1.2 LAN .....	40
3.1.3 Routing .....	42
3.1.4 DDNS.....	43
3.2 WIRELESS .....	45
3.2.1 Basic Settings.....	45
3.2.2 Security.....	49
3.2.2.1 WEP.....	50
3.2.2.2 WPA.....	52
3.2.2.3 WPA2.....	53
3.2.2.4 WPA-Mixed.....	54
3.2.2.5 RADIUS Server.....	55
3.2.3 MAC Control .....	56
3.2.4 Advanced Settings.....	58
3.2.5 Wireless Schedule .....	59
3.2.6 Security Sync-up.....	60
3.3 APPLICATION & GAMING.....	64
3.3.1 Port Forwarding.....	64
3.3.2 Port Triggering.....	65
3.3.3 DMZ.....	66
3.3.4 QoS.....	67
3.4 ACCESS RESTRICTIONS .....	70
3.4.1 Port Filtering.....	70
3.4.2 IP Filtering.....	71
3.4.3 MAC Filtering.....	72
3.4.4 URL Filtering.....	73
3.5 SECURITY .....	75
3.5.1 Firewall .....	75
3.5.2 DoS (Denial-of-Service).....	75
3.5.3 VPN Passthrough.....	76
3.6 ADMINISTRATION .....	78

3.6.1 Time .....	78
3.6.2 Password.....	79
3.6.3 Remote Management.....	80
3.6.4 Firmware Upgrade .....	80
3.6.5 System Settings .....	81
3.6.6 Reboot .....	82
3.6.7 System Log.....	82
3.6.8 Statistics.....	83
3.6.9 UPnP.....	84
3.7 STATUS .....	85
3.7.1 Internet Connection Status.....	85
3.7.2 LAN Status.....	85
3.7.3 Wireless Status.....	86
3.7.4 System Status.....	86
<b>TECHNICAL SUPPORT .....</b>	<b>87</b>

# Chapter 1 Introduction

Congratulations on your purchase of the AR675W Wireless N Green Router. The Wireless N Green Router is recommended to be used with AirLink101® Wireless N products to provide the best performance. The high speed of up to 300Mbps\* combined with extended wireless coverage delivers fast and reliable connections for all of your networking applications.

A full range of security features such as WEP, WPA-PSK, and WPA2-PSK provide the highest level of wireless network security. The web-based Setup Wizard allows you to set up the router with an easy-to-use user interface. Green Ethernet technology helps to reduce power usage to save more energy. Best of all, the AR675W works with 802.11g and 802.11b network devices which ensures compatibility with your existing wireless products.

## 1.1 Features

- Industry's highest wireless data rate with IEEE 802.11n draft specification 2.0
- Two 3dBi external antennas for wider coverage and stronger signal strength to eliminate dead spots
- Green Ethernet technology reduces power consumption
- 64-bit/128-bit WEP encryption, Pre-shared Key (PSK), and Wi-Fi Protected Access (WPA2 and WPA) support provide full protection for your wireless connection
- Stronger signal strength increases the reliability and speed of wireless connections
- Great for environments with higher wireless data traffic requirements
- Fully backward-compatible with 802.11b/g devices
- Works best with AirLink101® Wireless N and 300N Adapters


## 1.2 Package Content

Before you starting to use this router, please check if there's anything missing in the package, and contact your dealer of purchase to claim for missing items:

- Wireless N Green Router
- Quick installation guide
- Manual CD
- A/C power adapter
- Ethernet Cable


## 1.3 Router Interface

*Front Panel*

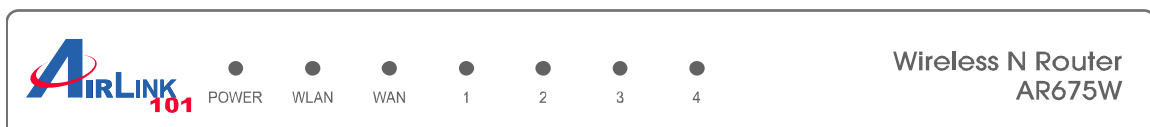

LED	Light Status	Description
POWER	Solid Green	Router is powered on.
WLAN	Solid Green	WPS setup is in progress.
	Off	Wireless network is switched off.
	Flashing Green	Wireless network is ready and WPS setup is not in progress.
WAN LNK/ACT	Solid Green	WAN port is connected.
	Off	WAN port is not connected.
	Flashing Green	WAN port is transferring or receiving data.
LAN 1-4 LNK/ACT	Solid Green	LAN port is connected.
	Off	LAN port is not connected.
	Flashing Green	LAN port is transferring or receiving data.

### Back Panel

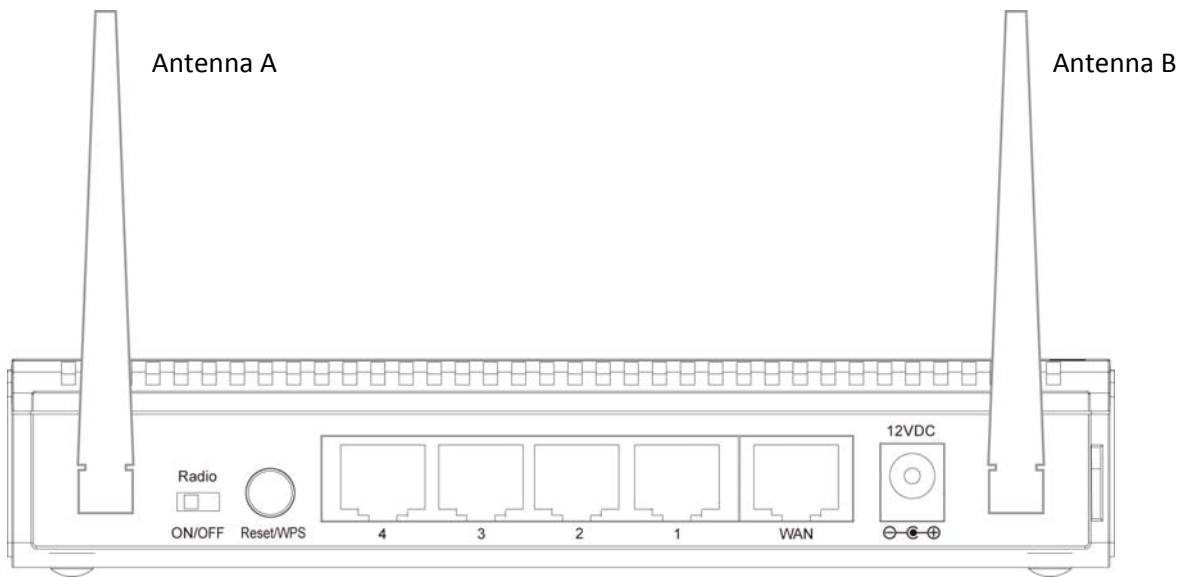

Item Name	Description
Antenna A/B	These antennas are 3dBi dipole antennas.
Radio ON/OFF	Switch the button to activate or deactivate the wireless functions.
Reset / Security Sync	Reset the router to factory default settings (clear all settings) or start security synchronization function. Press this button and hold for 10 seconds to restore all settings to factory defaults, and press this button 3 seconds to start security synchronization.
1 - 4	Local Area Network (LAN) ports 1 to 4.
WAN	Wide Area Network (WAN / Internet) port.
Power	Power connector, connects to A/C power adapter.




# Chapter 2 Connecting the Router


## 2.1 Building Network Connection

Please follow the instructions below to build the network connection between the Router and your computers, as well as network devices:


**Step 1** Connect your DSL / cable modem to the WAN port of router with an Ethernet cable.

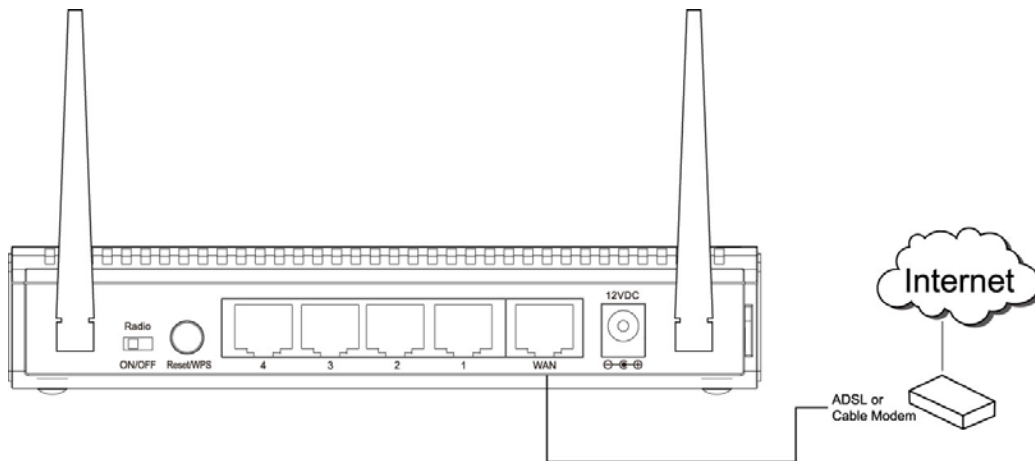

**Step 2** Connect all your computers, network devices (network-enabled consumer devices other than computers, such as game console, or switch / hub) to the LAN ports of the router.

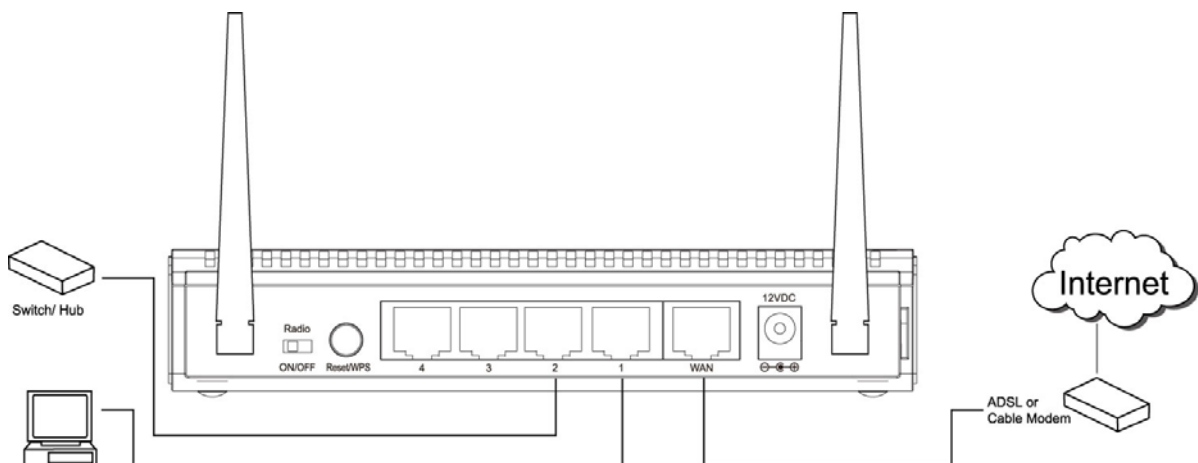


**Step 3** Connect the A/C power adapter to the electrical outlet, and then connect it to the 'Power' socket of the router.

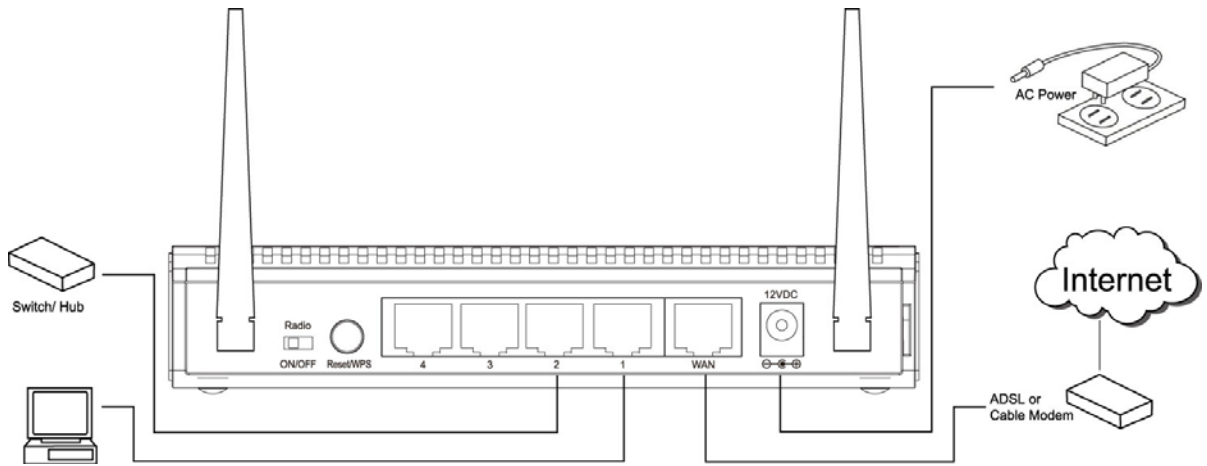

Please check all LEDs on the front panel. 'POWER' LED should be steadily on, WAN and LAN LEDs should be on if the computer / network devices connected to the respective ports of the router are powered on and correctly connected.

## 2.2 Configuring the Router – Setup Wizard

**Step 1** Open the web browser (i.e. Internet Explorer or Mozilla Firefox) and type **192.168.2.1** in the URL address bar and press **Enter**.

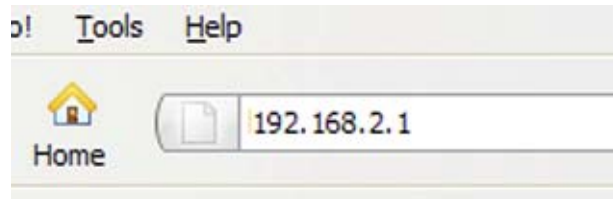

**Step 2** Enter **admin** for both the user name and password and click **OK**.



**Step 3** Click on **Setup Wizard**.

The screenshot shows the 'Wireless N Router Setup' interface. On the left is a navigation menu with 'Setup Wizard' highlighted. The main content area is titled 'Internet Connection' and displays a 'WAN Configuration' table. Below the table is a 'goahead WEB SERVER' logo.

WAN Configuration	
Attain IP Protocol	Getting IP from DHCP server...
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
MAC Address	00:e0:4c:81:96:b9

**Step 4** Click **Next** to start the Setup Wizard.

The screenshot shows the 'Wireless N Router Setup' interface. On the left is a navigation menu with 'Setup Wizard' highlighted. The main content area is titled 'Setup Wizard' and contains introductory text and a list of five configuration steps. At the bottom right, there are 'Cancel' and 'Next >>' buttons, with 'Next >>' highlighted.

**Setup Wizard**

The setup wizard will guide you to configure the Router. Please follow the setup wizard step by step.

**Welcome to Setup Wizard.**

The Wizard will guide you through the following steps. Begin by clicking on **Next**.

1. Configure Time Zone Settings
2. Configure LAN Settings
3. Configure WAN Settings
4. Configure Wireless Basic Settings
5. Configure Wireless Security Settings

**Step 5** Configure the Time Zone Settings of the Router. Click **Next**.

The Time Zone allows your router to base its time on the settings configured here, this will affect functions such as Log entries and Firewall settings.

Parameter	Description
<b>Enable NTP client update</b>	Check this box to enable the auto time synchronization function. The router will set its time based on your selection.
<b>Automatically Adjust Daylight Saving</b>	If the country you live uses daylight saving, please check this box.
<b>Time Zone Select</b>	You can select your local time zone here. The router will sync time according to your time zone selection.
<b>NTP server</b>	Select the time server to synchronize with.

**Step 6** Click **Next** to accept Router's default IP Address or change it to match your existing local area network settings.

### 2. Configure LAN Settings

This page is used to configure the local area network settings on your Router. Here you may change Router's IP address and subnet mask

IP Address:

Subnet Mask:

The LAN Interface settings allow you to configure the parameters for local area network.

Parameter	Description
<b>IP Address</b>	This is the router's local port IP address (Your LAN clients default gateway IP address). The default IP Address is '192.168.2.1'.
<b>Subnet Mask</b>	Specify a Subnet Mask for your LAN segment. The default subnet mask is '255.255.255.0'.

**Step 7** Select the Internet Type for your Router.

In this section you have to select one of the five types of connections based on the service package provided by your ISP.

Menu	Description
<b>Static IP</b>	Your ISP provides a static IP address to you while you subscribe the service.
<b>DHCP Client</b>	Your ISP automatically assigns an IP address to your modem. Most Cable service subscribers use this option.
<b>PPPoE</b>	Your ISP requires you to use a Point-to-Point Protocol over Ethernet (PPPoE) connection. Most DSL service subscribers use this option.


**PPTP** Your ISP requires you to use a Point-to-Point Tunneling Protocol (PPTP) connection.

**L2TP** Your ISP requires you to use a Point-to-Point Tunneling Protocol (L2TP) connection.

---

### **Cable Modem**

For cable modem, select **DHCP Client** and click **Next**. Continue to **Step 8**.

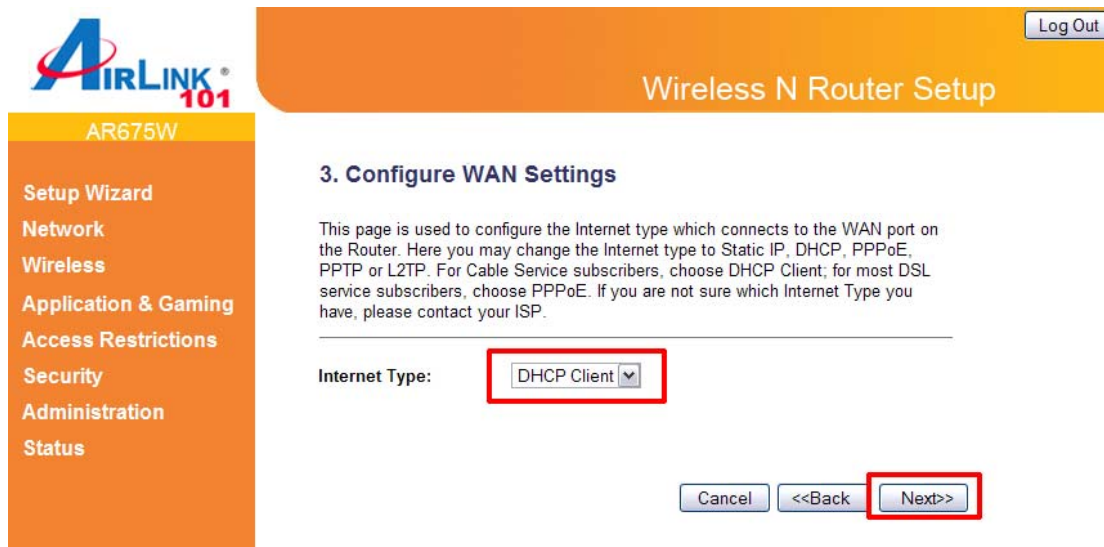

### **DSL (DHCP Client or PPPoE)**

For DSL users, your Internet type is either **DHCP Client** or **PPPoE**. If you are not sure which one you use, it is suggested to select DHCP Client, and if you cannot connect to the Internet after the Setup Wizard finished, go through the Setup Wizard again and select PPPoE. Otherwise, you can call your ISP to confirm which Internet Type you have.

#### **DHCP Setup**

Select DHCP Client from the Internet Type drop-down menu and click **Next**. Continue to **Step 8**.

#### **PPPoE Setup**

Select PPPoE from the Internet Type drop-down menu. Enter your user name and password provided by your ISP. Click **Next**.



AR675W

- Setup Wizard
- Network
- Wireless
- Application & Gaming
- Access Restrictions
- Security
- Administration
- Status

### 3. Configure WAN Settings


This page is used to configure the Internet type which connects to the WAN port on the Router. Here you may change the Internet type to Static IP, DHCP, PPPoE, PPTP or L2TP. For Cable Service subscribers, choose DHCP Client; for most DSL service subscribers, choose PPPoE. If you are not sure which Internet Type you have, please contact your ISP.

Internet Type:	<input type="text" value="PPPoE"/>
User Name:	<input type="text" value="email@sbcglobal.net"/>
Password:	<input type="password" value="••••••••"/>

Parameter	Description
<b>User Name</b>	Enter the User Name provided by your ISP for the PPPoE connection. <b>Note:</b> Depending on the ISP, you may need to include the domain name with your username. <b>Example:</b> <b>username@sbcglobal.net</b>
<b>Password</b>	Enter the Password provided by your ISP for the PPPoE connection.

### Static IP

Select **Static IP** if your ISP has given you a specific IP address for you to use. Your ISP should provide all the information required in this section. Continue to **Step 8**.



AR675W

- Setup Wizard
  - 1. Time Zone
  - 2. LAN Settings
  - 3. WAN Settings
  - 4. Wireless LAN
  - 5. Wireless Security
- Network
- Wireless
- Application & Gaming
- Access Restriction
- Security
- Administration
- Status

### 3. Configure WAN Settings

This page is used to configure the Internet type which connects to the WAN port on the Router. Here you may change the Internet type to Static IP, DHCP, PPPoE, PPTP or L2TP. For Cable Service subscribers, choose DHCP Client; for most DSL service subscribers, choose PPPoE. If you are not sure which Internet Type you have, please contact your ISP.

Internet Type:	<input type="text" value="Static IP"/>
IP Address:	<input type="text"/>
Subnet Mask:	<input type="text"/>
Default Gateway:	<input type="text"/>
DNS :	<input type="text"/>



Parameters	Description
<b>IP Address</b>	This is the IP address that your ISP has provided for you.
<b>Subnet Mask</b> (e.g. 255.255.255.0)	Enter the Subnet Mask provided by your ISP.
<b>Default Gateway IP</b>	This is the ISP's IP address gateway.
<b>DNS</b>	This is the ISP's DNS server IP address.

## PPTP

Select **PPTP** if your ISP requires the PPTP protocol to connect you to the Internet. Your ISP should provide all the information required in this section. Continue to **Step 8**.

The screenshot shows the 'Wireless N Router Setup' interface for an AirLink 101 AR675W router. The page is titled '3. Configure WAN Settings'. A sidebar on the left contains a 'Setup Wizard' menu with five items: '1. Time Zone', '2. LAN Settings', '3. WAN Settings' (which is selected), '4. Wireless LAN', and '5. Wireless Security'. Below the wizard are other menu items: 'Network', 'Wireless', 'Application & Gaming', 'Access Restriction', 'Security', 'Administration', and 'Status'. The main content area includes a 'Log Out' button in the top right. The title '3. Configure WAN Settings' is followed by a descriptive paragraph: 'This page is used to configure the Internet type which connects to the WAN port on the Router. Here you may change the Internet type to Static IP, DHCP, PPPoE, PPTP or LZTP. For Cable Service subscribers, choose DHCP Client; for most DSL service subscribers, choose PPPoE. If you are not sure which Internet Type you have, please contact your ISP.' Below this text are four input fields: 'Internet Type' (a dropdown menu with 'PPTP' selected), 'Server IP Address', 'User Name', and 'Password'. At the bottom of the form are three buttons: 'Cancel', '<<Back', and 'Next>>'.

Parameter	Description
<b>Server IP Address</b>	Enter the IP address of the ISP Gateway.
<b>User Name</b>	Enter the User Name provided by your ISP for the PPTP connection. Sometimes called a Connection ID.
<b>Password</b>	Enter the Password provided by your ISP for the PPTP connection.

## L2TP

Select **L2TP** if your ISP requires the L2TP protocol to connect you to the Internet. Your ISP should provide all the information required in this section. Continue to **Step 8**.

The screenshot shows the 'Wireless N Router Setup' page for an AirLink 101 AR675W router. The page is titled '3. Configure WAN Settings'. On the left is a navigation menu with options like 'Setup Wizard', 'Network', 'Wireless', etc. The main content area contains a description of the page's purpose and a form with the following fields: 'Internet Type' (a dropdown menu currently showing 'L2TP'), 'Server IP Address', 'User Name', and 'Password'. Below the form are three buttons: 'Cancel', '<<Back', and 'Next>>'. A 'Log Out' button is visible in the top right corner of the page header.

Parameter	Description
<b>Server IP Address</b>	Enter the IP address of the ISP Gateway.
<b>User Name</b>	Enter the User Name provided by your ISP for the L2TP connection. Sometimes it is called a Connection ID.
<b>Password</b>	Enter the Password provided by your ISP for the L2TP connection.

**Step 8** Keep the default SSID (wireless network name) or change it to a desired name, so you can always recognize your wireless network with it. Click **Next**.

AR675W

**Setup Wizard**

- 1. Time Zone
- 2. LAN Settings
- 3. WAN Settings
- 4. Wireless LAN
- 5. Wireless Security

**Network**
**Wireless**

## Application &amp; Gaming

## Access Restriction

**Security**

## Administration

## Status

**4. Configure Wireless Basic Settings**

This page is used to configure the basic Wireless settings on your Router. You can change the name of your wireless network (SSID) and channels here.

Mode:

SSID:

Channel Width:

ControlSideband:

Channel Number:

Menu	Description
<b>Mode</b>	<p>Please select the radio band from one of the following options.</p> <p>2.4GHz(B): 2.4GHz band, only allows 802.11b wireless network client to connect to this router (maximum transfer rate 11Mbps).</p> <p>2.4 GHz (N): 2.4GHz band, only allows 802.11n wireless network client to connect to this router (maximum transfer rate 150Mbps).</p> <p>2.4 GHz (B+G):2.4GHz band, only allows 802.11b and 802.11g wireless network client to connect to this router (maximum transfer rate 11Mbps for 802.11b clients, and maximum 54Mbps for 802.11g clients).</p> <p>2.4 GHz (G): 2.4GHz band, only allows 802.11g wireless network client to connect to this router (maximum transfer rate 54Mbps).</p> <p>2.4 GHz (B+G+N): 2.4GHz band, allows 802.11b, 802.11g, and 802.11n wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, maximum 54Mbps for 802.11g clients, and maximum 150Mbps for 802.11n clients).</p>
<b>SSID</b>	<p>This is the name of the wireless network. You can type any alphanumerical characters here, maximum 32 characters. SSID is used to identify your own wireless router from others when there are other wireless routers in the same area. The default SSID is 'airlink101'; it's recommended to change it to a name that you can identify, such as myhome, office_room1, etc.</p>

## Channel Width

Set channel width of wireless radio. Do not modify default value if you don't know what it is, default setting is '40 MHz'.

## Control SideBand

Select the Upper or Lower band for your Control Sideband. While Upper band is selected, the channels you can select are from channel 5 to channel 11. While Lower band is selected, the channels you can select are from channel 1 to channel 7. 802.11n needs to use five continuous channels for high-speed transmission.

## Channel Number

Select a channel from the dropdown list of 'Channel Number' for broadcasting. You can choose any channel number you want to use, and almost all wireless clients can locate the channel you're using automatically without any problem. However, it's still useful to remember the channel number you use, some wireless client supports manual channel number selecting, and this would help in certain scenario when there is some radio communication problem.

**Step 9** Select a desired **Security Mode** from the drop-down menu.

**AR675W**

**Wireless N Router Setup**

**5. Configure Wireless Security Settings**

This page allows you setup the wireless security. Select WPA2, WPA or WEP for Security Mode to prevent any unauthorized access to your wireless network. WPA2-AES is the most secured encryption method for general users. WEP is the most common encryption which should be compatible with all your wireless devices but the least secured. It is recommended to use WPA2-AES for your wireless security if all the wireless devices on your network support it.

Security Mode:

None  
WEP  
WPA (TKIP)  
WPA2(AES)  
WPA2 Mixed

Cancel <<Back Finished

Log Out

WPA2(AES) is the most secured encryption mode for general users. WEP is the most common encryption but the least secured. It is recommended to use WPA2 (AES) for your wireless security if all wireless devices on your network can support this mode.

## WEP

AR675W

- Setup Wizard
- Network
- Wireless
- Application & Gaming
- Access Restrictions
- Security
- Administration
- Status

### 5. Configure Wireless Security Settings

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

Security Mode:

Key Length:

Key Format:

Key Setting:

[Cancel](#) [<<Back](#) [Finished](#)

Parameters	Description
<b>Key Length</b>	You can select the WEP key length for encryption, 64-bit or 128-bit. Larger WEP key length will provide higher level of security, but the throughput will be lower.
<b>Key Format</b>	You may select ASCII Characters (alphanumeric format) or Hexadecimal digits (in the "A-F", "a-f" and "0-9" range) to be the WEP Key.
<b>Key Setting</b>	<p>The WEP key is used to encrypt data transmitted in the wireless network. Fill the text box by following the rules below.</p> <p>64-bit WEP: input 10-digit Hex values (in the "A-F", "a-f" and "0-9" range) or 5-digit ASCII character as the encryption keys.</p> <p>128-bit WEP: input 26-digit Hex values (in the "A-F", "a-f" and "0-9" range) or 13-digit ASCII characters as the encryption keys.</p>

Click on **Finished** to save and activate all the settings. Now, you can start to use the router as your internet gateway.

## WPA(TKIP)

The screenshot shows the 'Wireless N Router Setup' interface for an AirLink 101 AR675W router. The page is titled '5. Configure Wireless Security Settings'. It includes a navigation sidebar on the left with options like 'Setup Wizard', 'Network', 'Wireless', 'Application & Gaming', 'Access Restriction', 'Security', 'Administration', and 'Status'. The main content area contains a 'Log Out' button in the top right, a 'Security Mode' dropdown menu set to 'WPA(TKIP)', a 'Pre-Shared Key Format' dropdown menu set to 'Passphrase', and a text input field for the 'Pre-Shared Key'. At the bottom of the form are three buttons: 'Cancel', '<<Back', and 'Finished'. A paragraph of text explains that this page allows setting wireless security to prevent unauthorized access, and notes that WPA2-AES is the most secure method while WEP is the least secure.


Wi-Fi Protected Access (WPA) is an advanced security standard. You can use a pre-shared key to authenticate wireless stations and encrypt data during communication. It uses TKIP to change the encryption key frequently.

Parameters	Description
<b>Pre-shared Key Format</b>	You may select to select Passphrase (alphanumeric format) or Hexadecimal Digits (in the “A-F”, “a-f” and “0-9” range) to be the Pre-shared Key. For example: Passphrase: iamguest Hexadecimal Digits: 12345abcde
<b>Pre-shared Key</b>	The Pre-shared key is used to authenticate and encrypt data transmitted in the wireless network. Fill the text box by following the rules below. Hex: input 8~64bit Hex key (in the “A-F”, “a-f” and “0-9” range) for the pre-shared key. Passphrase: input 8~63 characters for the pre-shared key.

Clicking on **OK** to save and activate all the settings. Now, you can start to use the router as your internet gateway.

## WPA2(AES) / WPA2-Mixed

Select **WPA2 (AES)** for Security Mode, and enter a Pre-Shared Key between 8 to 63 characters (alphanumeric, case sensitive).

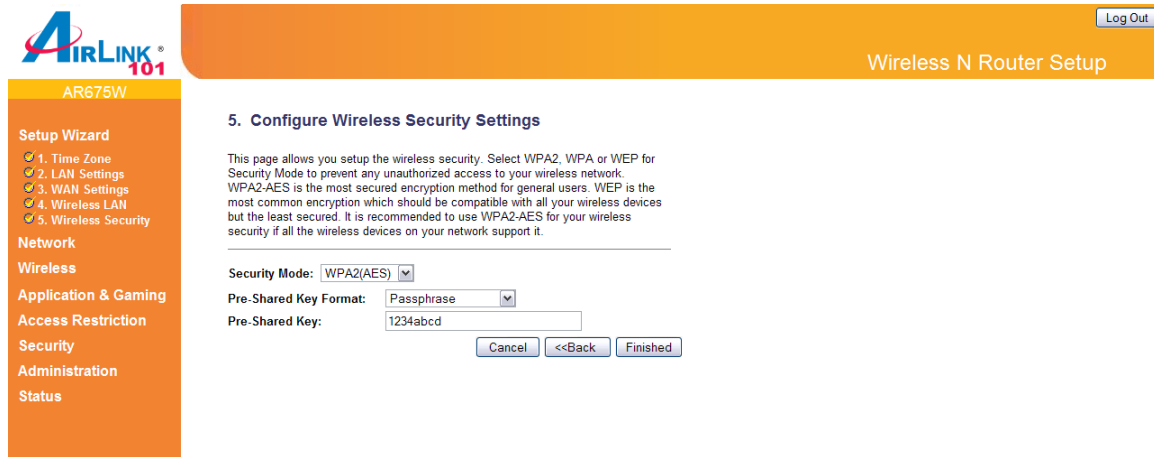

**AIRLINK 101** AR675W

Log Out

Wireless N Router Setup

### 5. Configure Wireless Security Settings

This page allows you setup the wireless security. Select WPA2, WPA or WEP for Security Mode to prevent any unauthorized access to your wireless network. WPA2-AES is the most secured encryption method for general users. WEP is the most common encryption which should be compatible with all your wireless devices but the least secured. It is recommended to use WPA2-AES for your wireless security if all the wireless devices on your network support it.

Security Mode:

Pre-Shared Key Format:

Pre-Shared Key:

Wi-Fi Protected Access 2(WPA2) is an advanced security standard. You can use a pre-shared key to authenticate wireless stations and encrypt data during communication. It uses AES to change the encryption key frequently. WPA2-mixed supports both WPA2 and WPA. It is a good choice when some wireless devices on your network support WPA only.

Parameters	Description
<b>Pre-shared Key Format</b>	You may select Passphrase (alphanumeric format) or Hexadecimal digits (in the "A-F", "a-f" and "0-9" range) to be the Pre-shared Key.
<b>Pre-shared Key</b>	The Pre-shared key is used to authenticate and encrypt data transmitted in the wireless network. Fill the text box by following the rules below. Hex: input 64-digit Hex values (in the "A-F", "a-f" and "0-9" range) or at least 8 character pass phrase as the pre-shared keys.

Click on **Finished** to save and activate all the settings. Now, you can start to use the router as your internet gateway.

**Note: It is suggested to write down the security settings (Security Mode and Key) you configured for the Router on a piece of paper and keep it in a safe place.**

**Step 10** Click **OK** to finish the Setup Wizard. After your router restarts, you will go back to the Status page with valid IP address assigned by you ISP or configured by yourself (i.e. Static IP). Now you should be able to connect to the Internet.

**AIRLINK<sup>®</sup> 101**

AR675W

Log Out

### Wireless N Router Setup

#### Internet Connection

WAN Configuration	
Attain IP Protocol	DHCP
IP Address	192.168.12.172
Subnet Mask	255.255.255.0
Default Gateway	192.168.12.1
MAC Address	00:e0:4c:81:96:b9

goahead  
**WEB SERVER**


If each field has a valid number assigned, the router is connected to the Internet.


**Congratulations! Your router configuration has been finished. You should now be able to access the Internet; if not, please go to section 2.4 for troubleshooting.**




## 2.3 Connecting to the Router Wirelessly

You must configure your wireless computer in order to establish a wireless connection to the router. In this section, you can find the instructions of how to connect to the router wirelessly with your **Vista** computer. You can also refer to the manual of your wireless network card of how to connect to a router wirelessly.


**Step 1** Click on this icon  on the task bar of your desktop, then click on **Wireless networks are available**.

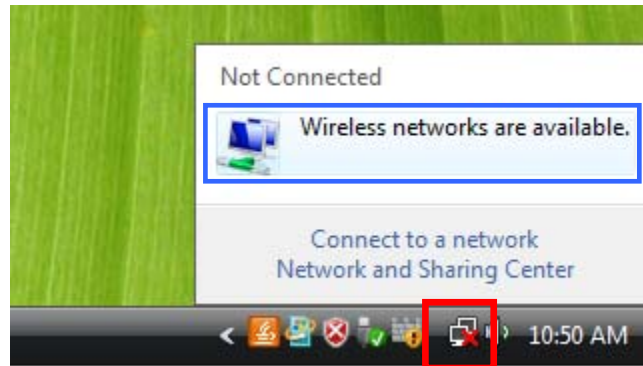


**Step 2** Click on the wireless network you want to connect to and click **Connect**.

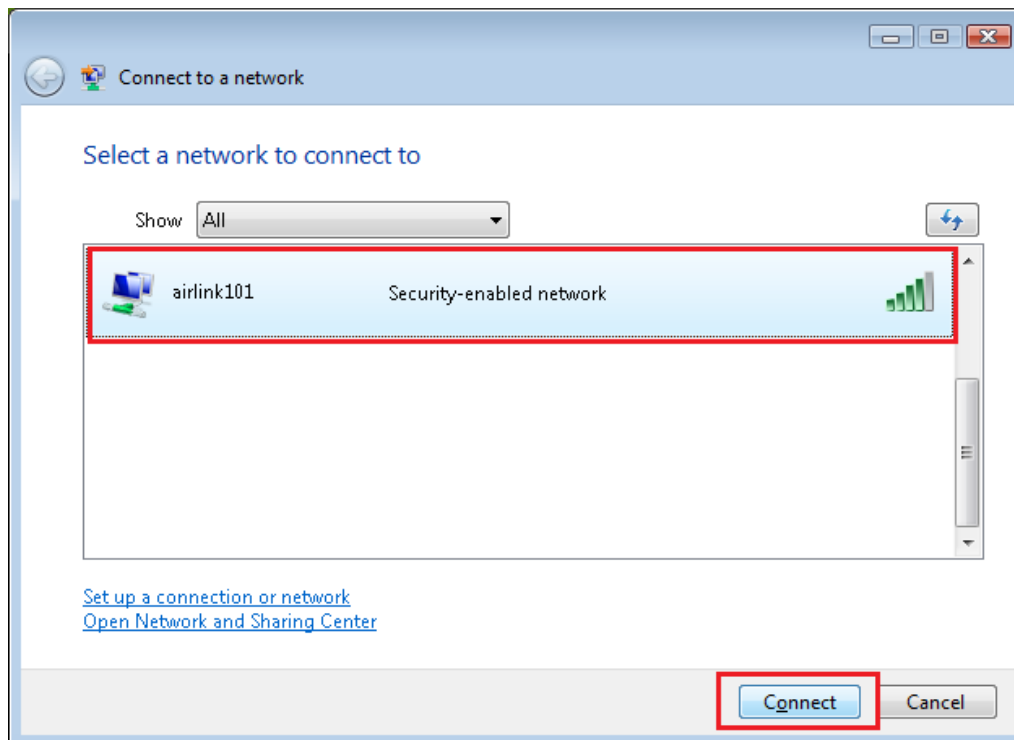

**Step 3** Enter the Security key you configured for the Router (see Step 8 in Section 2). Click **Connect**.

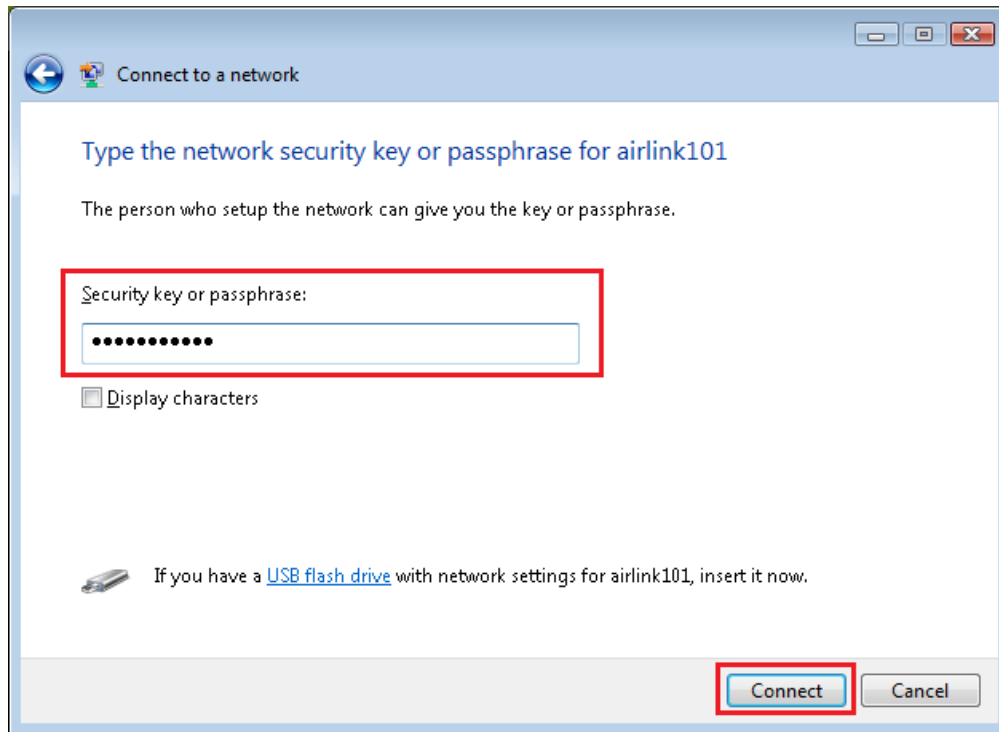

**Step 4** Click on **Close**. Now the wireless connection has been established successfully with the Router.

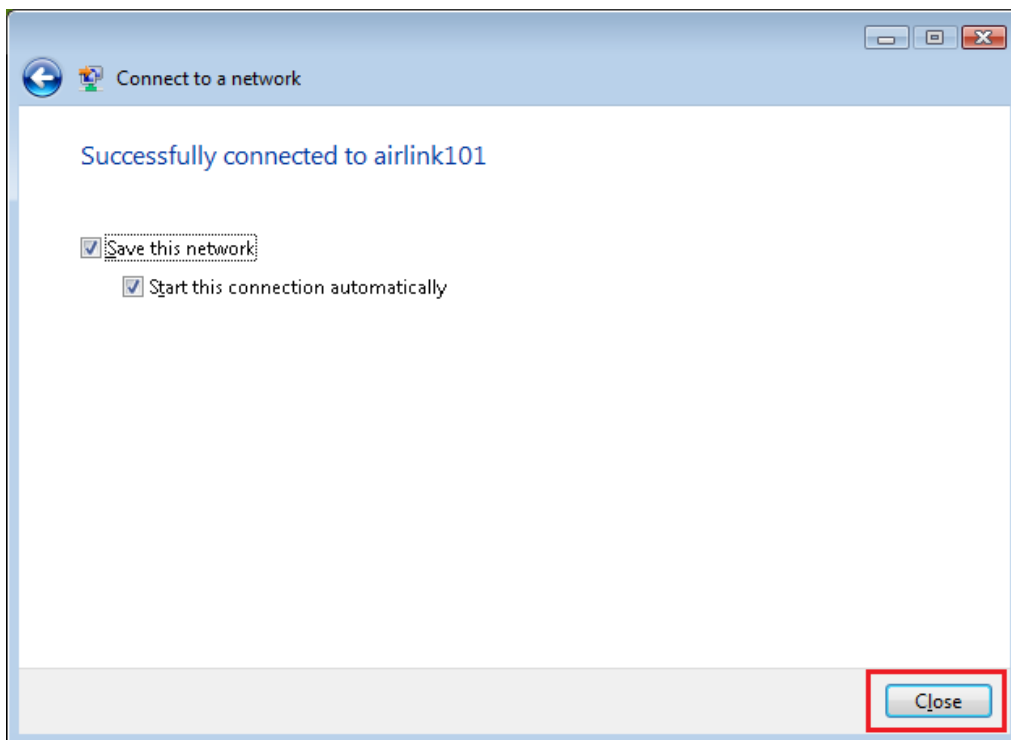

## 2.4 Troubleshooting

If you have trouble connecting to the Internet, try the following steps.

**Step 1** Power off the Cable/DSL modem, router, and computer and wait for **5 minutes**.


**Step 2** Turn on the Cable/DSL modem and wait for the lights on the modem to settle down.

**Step 3** Turn on the router and wait for the lights on the router to settle down.

**Step 4** Turn on the computer.

**Step 5** Log in to the router and select the **Status** tab.

**Step 6** Verify that the **Internet IP Address**, **Subnet Mask**, and **Default Gateway** have valid numbers assigned to them (instead of all 0's).

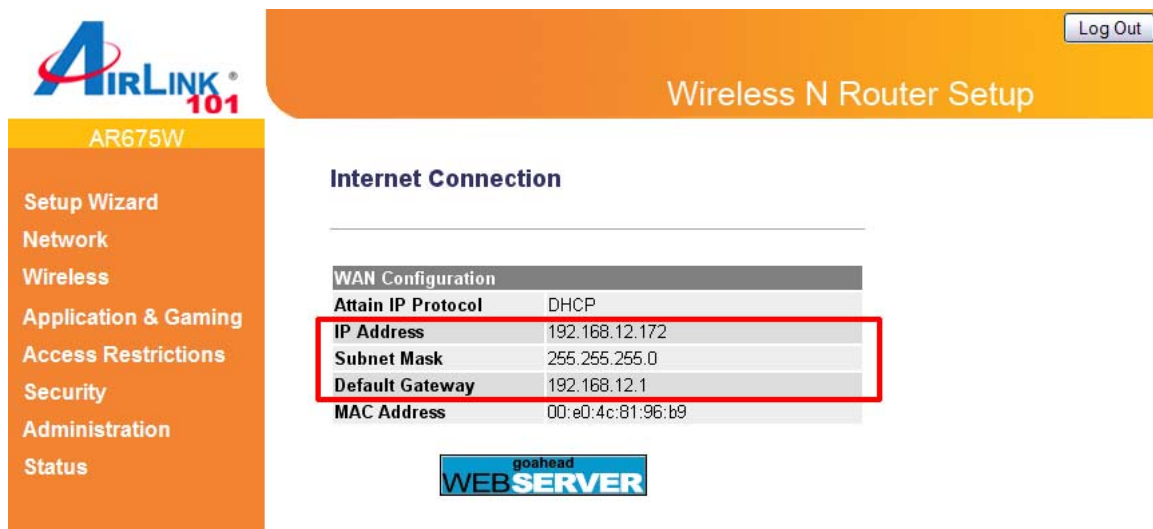

The screenshot shows the router's configuration interface. On the left is a navigation menu with the following items: Setup Wizard, Network, Wireless, Application & Gaming, Access Restrictions, Security, Administration, and Status. The main content area is titled "Wireless N Router Setup" and contains a section for "Internet Connection". Below this is a table for "WAN Configuration" with the following data:

WAN Configuration	
Attain IP Protocol	DHCP
IP Address	192.168.12.172
Subnet Mask	255.255.255.0
Default Gateway	192.168.12.1
MAC Address	00:e0:4c:81:96:b9

At the bottom of the page, there is a "goahead WEB SERVER" logo.

If each field has a valid number assigned, the router is connected to the Internet.

# Chapter 3 Using Web Configuration Utility

The Web Configuration Utility contains advanced features that allow you to configure the router to meet your network's needs such as: Multiple AP, Access Control, QoS (Quality of Service), Port Forwarding (Virtual Server) and other functions.

If you have already configured the Setup Wizard, you do NOT need to configure any other thing here for you to start using the Internet.

Below is a general description of what advance functions are available for this broadband router.

Menu	Description
<b>3.0 Setup Wizard</b>	This quick setup wizard can guide you through the basic settings of this Router. Please see instructions in Chapter 2.2.
<b>3.1 Network</b>	This section allows you to configure the Internet settings with your ISP, the settings for your local area network (LAN), such as enable/disable the DHCP server, Dynamic DNS information, and routing rules.
<b>3.2 Wireless</b>	This section allows you to setup the Router's SSID, security key, scheduling, etc.
<b>3.3 Application &amp; Gaming</b>	This section allows you to configure router's setting for your special applications or gaming requirements.
<b>3.4 Access Restrictions</b>	This section allows you to set up the access control rules, such as MAC filtering, URL filtering to prevent the LAN users from accessing certain type of website.
<b>3.5 Security</b>	This Firewall section allows you to configure Hacker Prevention and DMZ.
<b>3.6 Administration</b>	The section allows you to specify a time zone, change the system password, save/reload the router configuration, upgrade firmware and so on.
<b>3.7 Status</b>	You can see Router's status in this section.

## 3.1 Network

### 3.1.1 WAN

Use the WAN Settings screen to change your Internet connection type. The WAN Settings screen allows to specify the type of WAN port connect you want to establish with your ISP. The WAN settings offer the following selections for the router's WAN port, **Static IP Address**, **DHCP Client**, **PPPoE**, **PPTP**, **L2TP** and **DDNS**. Please choose one type and complete the detail settings below.

The screenshot shows the 'Wireless N Router Setup' interface for an AirLink 101 AR675W router. The left sidebar contains a navigation menu with options: Setup Wizard, Network (selected), LAN, Routing, DDNS, Wireless, Application & Gaming, Access Restrictions, Security, Administration, and Status. The main content area is titled 'WAN Settings' and includes a 'Log Out' button in the top right corner. Below the title, it states: 'The Router can be connected to your Internet Service Provider (ISP) through the following methods:'. There are five radio button options: 'Static IP' (with a description), 'DHCP client' (selected), 'PPPoE' (with a description), 'PPTP' (with a description), and 'L2TP' (with a description). Below these options are several input fields: 'Host Name' (empty), 'MTU Size' (set to 1492, with a note '(1400-1492 bytes)'), 'DNS 1:', 'DNS 2:', and 'DNS 3:' (all empty). There are two radio buttons for DNS: 'Attain DNS Automatically' (selected) and 'Set DNS Manually'. Below these are 'Clone MAC Address' (set to 00:00:00:00:00:00) and a 'Clone MAC' button. There are two checked checkboxes: 'Enable IGMP Proxy' and 'Enable FTP ALG on Port: 21'. At the bottom, there are radio buttons for TTL: 'TTL Standard' (selected), 'TTL+1', 'TTL=1', and 'User Defined 0'. At the very bottom of the form are 'Apply Changes' and 'Reset' buttons.

#### A) Static IP

Select Static IP address if your ISP has given you a specific IP address for you to use. Your ISP should provide all the information required in this section.

AR675W

- Setup Wizard
- Network
  - WAN (Internet)
  - LAN
  - Routing
  - DDNS
- Wireless
- Application & Gaming
- Access Restriction
- Security
- Administration
- Status

### WAN Settings

The Router can be connected to your Internet Service Provider (ISP) through the following methods:

- Static IP** Enter the Static IP Settings. Choose this option when your ISP provides a Static IP Address for you to access Internet services.
- DHCP client** Obtains an IP Address automatically from your ISP. Choose this option if your ISP does not require any username or password to access the Internet, i.e. Cable subscribers
- PPPoE** PPP over Ethernet is a usually used for DSL service provide. Choose this option if your ISP requires you to log in before accessing the Internet
- PPTP** Point-to-Point Tunneling Protocol is a common connection method used in xDSL connections.
- L2TP** Layer Two Tunneling Protocol is a common connection method used in xDSL connections.

IP Address:   
 Subnet Mask:   
 Default Gateway:   
 MTU Size:  (1400-1500 bytes)  
 DNS 1:   
 DNS 2:   
 DNS 3:   
 Clone MAC Address:  [Clone MAC](#)  
 Enable IGMP Proxy  
 Enable FTP ALG on Port:   
 TTL:  TTL Standard  TTL+1  TTL-1  User Defined

[Apply Changes](#) [Reset](#)

Parameters	Description
<b>IP Address</b>	This is the IP address that your ISP has given you.
<b>Subnet Mask</b>	Enter the Subnet Mask provided by your ISP. (e.g. 255.255.255.0)
<b>Default Gateway</b>	This is the IP address of ISP's gateway.
<b>MTU Size</b>	MTU (Maximum Transmission Unit) determine the maximum size of each packet in any transmission within the network. Please specify the MTU range from 1400 to 1500 bytes. Please input the MTU value of your network connection here. If you don't know, you can use default value.
<b>DNS 1~3</b>	Please input the IP address of DNS server provided by your service provider.
<b>Clone MAC Address</b>	For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, you can simply press 'Clone Mac' button to fill the MAC address field with the MAC address of your computer.

**Enable IGMP Proxy**

Check this box if you want to enable the router as IGMP proxy to implement multicast routing. Keep default if you don't know what it is.

**Enable FTP ALG on Port**

If you have built up a FTP server in your network, you can enable this function to let the FTP traffics correctly pass though the NAT gateway of the router. Enter the port number of your FTP server. Keep default if you don't know what it is.

**TTL**

For some special applications, you might need to change the TTL value for the packets routing to your router. Please select 'TTL Standard', 'TTL+1', 'TTL=1' or 'User Defined' to define a value. If you don't know what it is / not sure if you need it, it's safe to set this option to 'TTL Standard'. Keep default if you don't know what it is.

---

Click <**Apply Changes**> at the bottom of the screen to save the above configurations.

***B) DHCP Client***

Choose this option if your ISP will automatically assign you an IP address. Some ISP's may also require that you fill in additional information such as Host Name, Domain Name and MAC address.

AR675W

- Setup Wizard
- Network
  - WAN (Internet)**
  - LAN
  - Routing
  - DDNS
- Wireless
- Application & Gaming
- Access Restriction
- Security
- Administration
- Status

### WAN Settings

The Router can be connected to your Internet Service Provider (ISP) through the following methods:

- Static IP**  
Enter the Static IP Settings. Choose this option when your ISP provides a Static IP Address for you to access Internet services.
- DHCP client**  
Obtains an IP Address automatically from your ISP. Choose this option if your ISP does not require any username or password to access the Internet, i.e. Cable subscribers
- PPPoE**  
PPP over Ethernet is a usually used for DSL service provide. Choose this option if your ISP requires you to log in before accessing the Internet
- PPTP**  
Point-to-Point Tunneling Protocol is a common connection method used in xDSL connections.
- L2TP**  
Layer Two Tunneling Protocol is a common connection method used in xDSL connections.

Host Name:

MTU Size:  (1400-1492 bytes)

**Attain DNS Automatically**

**Set DNS Manually**

DNS 1:

DNS 2:

DNS 3:

Clone MAC Address:  [Clone MAC](#)

**Enable IGMP Proxy**

**Enable FTP ALG on Port:**

TTL:  **TTL Standard**  **TTL+1**  **TTL-1**  **User Defined**

[Apply Changes](#) [Reset](#)

Parameters	Description
<b>Host Name</b>	Please enter the host name, this is optional, and only required if your service provider asks you to do so.
<b>MTU Size</b>	MTU (Maximum Transmission Unit) determine the maximum size of each packet in any transmission within the network. Please specify the MTU range from 1400 to 1492 bytes. Please input the MTU value of your network connection here. If you don't know, you can use default value.
<b>Obtain DNS Automatically</b>	The ISP requires you to obtain a DNS by DHCP server before you connecting to the internet.
<b>Set DNS Manually</b>	If your ISP gives you a static DNS server address to be used to connect to the internet, please select this option.
<b>DNS 1~3</b>	Please input the IP address of DNS server provided by your service provider.
<b>Clone MAC Address</b>	For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, you can simply press 'Clone Mac' button to fill the MAC address field with the MAC address of your computer.



## Enable IGMP Proxy

Check this box if you want to enable the router as IGMP proxy to implement multicast routing. Keep default if you don't know what it is.

## Enable FTP ALG on Port

If you have built up a FTP server in your network, you can enable this function to let the FTP traffics correctly pass though the NAT gateway of the router. Enter the port number of your FTP server. Keep default if you don't know what it is.

## TTL

For some special applications, you might need to change the TTL value for the packets routing to your router. Please select 'TTL Standard', 'TTL+1', 'TTL=1' or 'User Defined' to define a value. If you don't know what it is / not sure if you need it, it's safe to set this option to 'TTL Standard'. Keep default if you don't know what it is.

Click <Apply Changes> at the bottom of the screen to save the above configurations.

## C) PPPoE (PPP over Ethernet)

Select PPPoE if your ISP requires the PPPoE protocol to connect you to the Internet. Your ISP should provide all the information required in this section.

**AIRLINK 101** AR675W

Wireless N Router Setup

Log Out

Setup Wizard

Network

- WAN (Internet)
- LAN
- Routing
- DDNS

Wireless

Application & Gaming

Access Restrictions

Security

Administration

Status

DHCP client

PPPoE

PPTP

L2TP

provides a Static IP Address for you to access Internet services. Obtains an IP Address automatically from your ISP. Choose this option if your ISP does not require any username or password to access the Internet, i.e. Cable subscribers

PPP over Ethernet is a usually used for DSL service provide. Choose this option if your ISP requires you to log in before accessing the Internet

Point-to-Point Tunneling Protocol is a common connection method used in xDSL connections.

Layer Two Tunneling Protocol is a common connection method used in xDSL connections.

User Name:

Password:

Service Name:

Connection Type:

Idle Time:  (1-1000 minutes)

MTU Size:  (1360-1492 bytes)

Attain DNS Automatically

Set DNS Manually

DNS 1:

DNS 2:

DNS 3:

Clone MAC Address:

Enable IGMP Proxy

Enable FTP ALG on Port:

TTL:  TTL Standard  TTL+1  TTL=1  User Defined

Parameters	Description
<b>User Name</b>	Please input user name assigned by your Internet service provider here.
<b>Password</b>	Please input the password assigned by your Internet service provider here.
<b>Service Name</b>	Please give a name to this Internet service, this is optional
<b>Connection Type</b>	Please select the connection type of Internet connection you wish to use. There are 3 options: " <b>Continuous</b> " - keep internet connection alive, do not disconnect, " <b>connect on Demand</b> " - only connects to Internet when there's a connect attempt, and " <b>Manual</b> " - only connects to Internet when 'Connect' button on this page is pressed, and disconnects when 'Disconnect button is pressed.
<b>Idle Time</b>	Please input idle time out. Specify the time to shutdown internet connection after no internet activity is detected after a while. This option is only available when connection type is 'Connect on Demand'.
<b>MTU Size</b>	MTU (Maximum Transmission Unit) determine the maximum size of each packet in any transmission within the network. Please specify the MTU range from 1360 to 1492 bytes. Please input the MTU value of your network connection here. If you don't know, you can use default value.
<b>Obtain DNS Automatically</b>	The ISP requires you to obtain a DNS by DHCP server before you connecting to the internet.
<b>Set DNS Manually</b>	If your ISP gives you a static DNS server to be used to connect to the internet, please select this option.
<b>DNS 1~3</b>	Please input the IP address of DNS server provided by your service provider.
<b>Clone MAC Address</b>	For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, you can simply press 'Clone Mac' button to fill the MAC address field with the MAC address of your computer.

**Enable IGMP Proxy**

Check this box if you want to enable the router as IGMP proxy to implement multicast routing. Keep default if you don't know what it is.

**Enable FTP ALG on Port**

If you have built up a FTP server in your network, you can enable this function to let the FTP traffics correctly pass though the NAT gateway of the router. Enter the port number of your FTP server. Keep default if you don't know what it is.

**TTL**


For some special applications, you might need to change the TTL value for the packets routing to your router. Please select 'TTL Standard', 'TTL+1', 'TTL=1' or 'User Defined' to define a value. If you don't know what it is / not sure if you need it, it's safe to set this option to 'TTL Standard'. Keep default if you don't know what it is.

---

Click <**Apply Changes**> at the bottom of the screen to save the above configurations.

**D) PPTP**

Select PPTP if your ISP requires the PPTP protocol to connect you to the Internet. Your ISP should provide all the information required in this section.

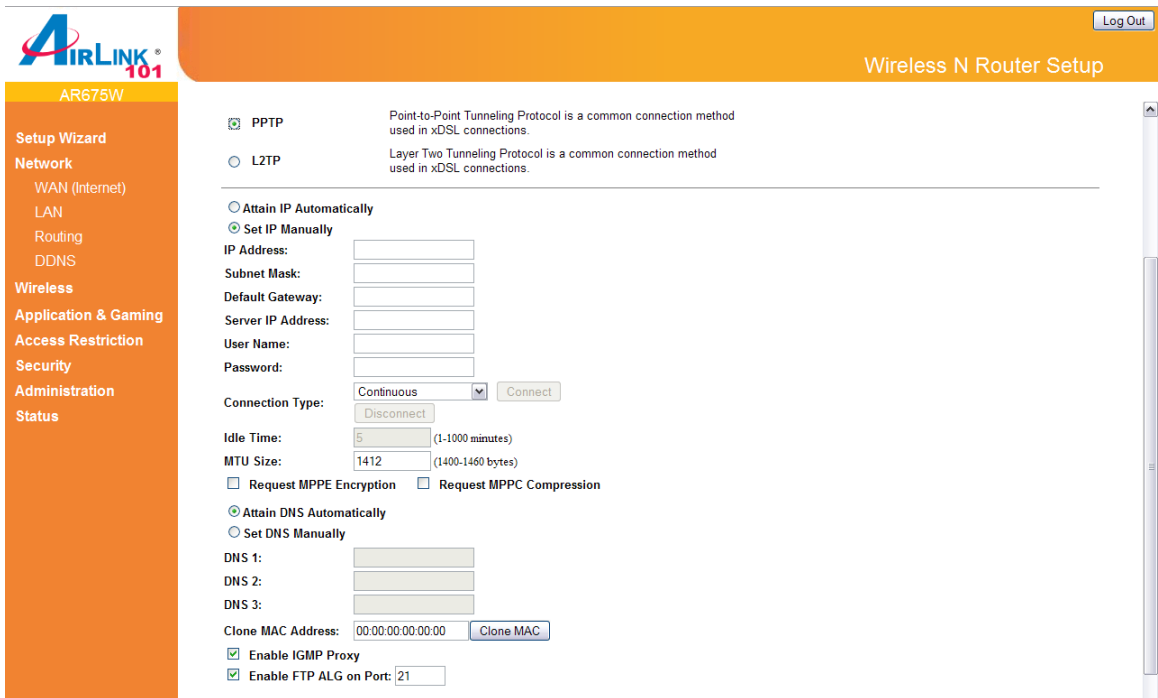

Parameters	Description
<b>Attain IP Automatically</b>	Select this option if your ISP will assign IP Address to your router directly. Please contact your ISP if you don't know what you should select.
<b>Set IP Address</b>	This is the IP address that your ISP has given you.
<b>Subnet Mask</b>	Enter the Subnet Mask provided by your ISP. (e.g. 255.255.255.0)
<b>Default Gateway</b>	This is the IP address of ISP's gateway.
<b>Server IP Address</b>	Please input the IP address of PPTP gateway assigned by your Internet service provider here.
<b>User Name</b>	Please input user name assigned by your Internet service provider here.
<b>Password</b>	Please input the password assigned by your Internet service provider here.
<b>Connection Type</b>	Please select the connection type of Internet connection you wish to use. There are 3 options: " <b>Continuous</b> " - keep internet connection alive, do not disconnect, " <b>connect on Demand</b> " - only connects to Internet when there's a connect attempt, and

**“Manual”** - only connects to Internet when ‘Connect’ button on this page is pressed, and disconnects when ‘Disconnect button is pressed.

- Idle Time** Please input idle time out. Specify the time to shutdown internet connection after no internet activity is detected after a while. This option is only available when connection type is ‘Connect on Demand’.
- MTU Size** MTU (Maximum Transmission Unit) determine the maximum size of each packet in any transmission within the network. Please specify the MTU range from 1400 to 1460 bytes. Please input the MTU value of your network connection here. If you don’t know, you can use default value.
- Request MPPE Encryption** MPPE (Microsoft Point-to-Point Encryption) is a method of encrypting data across PPTP virtual private network connections. Check this box if it is needed for your virtual private network links.
- Request MPPC Encryption** MPPC (Microsoft Point-to-Point Compression) which compresses data across virtual private network links. Check this box if it is needed.
- Obtain DNS Automatically** The ISP requires you to obtain a DNS by DHCP server before you connecting to the internet.
- Set DNS Manually** If your ISP gives you a static DNS server to be used to connect to the internet, please select this option.
- DNS 1~3** Please input the IP address of DNS server provided by your service provider.
- Clone MAC Address** For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, you can simply press ‘Clone Mac’ button to fill the MAC address field with the MAC address of your computer.
- Enable IGMP Proxy** Check this box if you want to enable the router as IGMP proxy to implement multicast routing. Keep default if you don’t know what it is.
- Enable FTP ALG on Port** If you have built up a FTP server in your network, you can enable this function to let the FTP traffics correctly pass though

the NAT gateway of the router. Enter the port number of your FTP server. Keep default if you don't know what it is.

## TTL

For some special applications, you might need to change the TTL value for the packets routing to your router. Please select 'TTL Standard', 'TTL+1', 'TTL=1' or 'User Defined' to define a value. If you don't know what it is / not sure if you need it, it's safe to set this option to 'TTL Standard'. Keep default if you don't know what it is.

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

## E) L2TP

Select L2TP if your ISP requires the L2TP protocol to connect you to the Internet. Your ISP should provide all the information required in this section.

The screenshot shows the 'Wireless N Router Setup' interface for an AirLink 101 AR675W router. The left sidebar contains a navigation menu with categories: Setup Wizard, Network (WAN (Internet), LAN, Routing, DDNS), Wireless, Application & Gaming, Access Restriction, Security, Administration, and Status. The main content area is titled 'Wireless N Router Setup' and features a 'Log Out' button in the top right. Below the title, there are two connection options: 'PPPoE' (used in xDSL connections) and 'L2TP' (Layer Two Tunneling Protocol is a common connection method used in xDSL connections). The 'L2TP' option is selected. Under 'L2TP', there are two radio buttons: 'Attain IP Automatically' and 'Set IP Manually'. The 'Set IP Manually' option is selected, and the following fields are visible: IP Address, Subnet Mask, Default Gateway, Server IP Address, User Name, and Password. Below these fields is a 'Connection Type' dropdown menu set to 'Continuous', with 'Connect' and 'Disconnect' buttons. Further down, there are 'Idle Time' (set to 5 minutes) and 'MTU Size' (set to 1412 bytes) fields. Below these, there are two radio buttons for DNS: 'Attain DNS Automatically' and 'Set DNS Manually'. The 'Attain DNS Automatically' option is selected, and three 'DNS' fields (DNS 1, DNS 2, DNS 3) are visible. At the bottom of the L2TP section, there is a 'Clone MAC Address' field set to '00:00:00:00:00:00' with a 'Clone MAC' button, and two checked checkboxes: 'Enable IGMP Proxy' and 'Enable FTP ALG on Port: 21'. At the very bottom of the page, there are 'Apply Changes' and 'Reset' buttons.

Parameters

Description

<b>Attain IP Automatically</b>	Select this option if your ISP will assign IP Address to your router directly. Please contact your ISP if you don't know what you should select.
<b>Set IP Manually</b>	This is the IP address that your ISP has given you.
<b>IP Address</b>	This is the IP address that your ISP has given you.
<b>Subnet Mask</b>	Enter the Subnet Mask provided by your ISP. (e.g. 255.255.255.0)
<b>Default Gateway</b>	This is the IP address of ISP's gateway.
<b>Server IP Address</b>	Please input the IP address of L2TP gateway assigned by your Internet service provider here.
<b>User Name</b>	Please input user name assigned by your Internet service provider here.
<b>Password</b>	Please input the password assigned by your Internet service provider here.
<b>Connection Type</b>	Please select the connection type of Internet connection you wish to use. There are 3 options: " <b>Continuous</b> " - keep internet connection alive, do not disconnect, " <b>connect on Demand</b> " - only connects to Internet when there's a connect attempt, and " <b>Manual</b> " - only connects to Internet when 'Connect' button on this page is pressed, and disconnects when 'Disconnect' button is pressed.
<b>Idle Time</b>	Please input idle time out. Specify the time to shutdown internet connection after no internet activity is detected after a while. This option is only available when connection type is 'Connect on Demand'.
<b>MTU Size</b>	MTU (Maximum Transmission Unit) determine the maximum size of each packet in any transmission within the network. Please specify the MTU range from 1400 to 1460 bytes. Please input the MTU value of your network connection here. If you don't know, you can use default value.
<b>Obtain DNS Automatically</b>	The ISP requires you to obtain a DNS by DHCP server before you connecting to the internet.
<b>Set DNS Manually</b>	If your ISP gives you a static DNS server to be used to connect to the internet, please select this option.

<b>DNS 1~3</b>	Please input the IP address of DNS server provided by your service provider.
<b>Clone MAC Address</b>	For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, you can simply press 'Clone Mac' button to fill the MAC address field with the MAC address of your computer.
<b>Enable IGMP Proxy</b>	Check this box if you want to enable the router as IGMP proxy to implement multicast routing. Keep default if you don't know what it is.
<b>Enable FTP ALG on Port</b>	If you have built up a FTP server in your network, you can enable this function to let the FTP traffics correctly pass though the NAT gateway of the router. Enter the port number of your FTP server. Keep default if you don't know what it is.
<b>TTL</b>	For some special applications, you might need to change the TTL value for the packets routing to your router. Please select 'TTL Standard', 'TTL+1', 'TTL=1' or 'User Defined' to define a value. If you don't know what it is / not sure if you need it, it's safe to set this option to 'TTL Standard'. Keep default if you don't know what it is.

---

Click <**Apply Changes**> at the bottom of the screen to save the above configurations.

### 3.1.2 LAN

This page allows you to specify an IP address for your router as well as a subnet mask for your LAN segment.



AR675W

- Setup Wizard
- Network
  - WAN (Internet)
  - LAN**
  - Routing
  - DDNS
- Wireless
- Application & Gaming
- Access Restriction
- Security
- Administration
- Status

### LAN Settings

This page is used to configure the local area network settings on your Router. Here you may change the setting for IP address, subnet mask, DHCP, etc..

IP Address:   
 Subnet Mask:   
 Default Gateway:   
 DHCP:    
 DHCP Client Range:  -    
 Static DHCP:    
 Domain Name:   
 802.1d Spanning Tree:

Parameters	Default	Description
<b>IP address</b>	192.168.2.1	This is the router's LAN IP address (Your LAN clients default gateway IP address).
<b>Subnet Mask</b>	255.255.255.0	Specify a Subnet Mask for your LAN segment.
<b>Default Gateway</b>		Specify the default gateway for LAN segment.
<b>DHCP</b>	Server	By selecting the DHCP server, the router will automatically give your LAN clients an IP address. If the DHCP server is not enabled then you'll have to manually set your LAN client's IP addresses; make sure the LAN Client is in the same subnet as this broadband router if you want the router to be your LAN client's default gateway.
<b>DHCP Client Range</b>		<p>You can configure a particular IP address range for your DHCP server to assign IP addresses to your LAN Clients.</p> <p><b>Note:</b> By default the IP range is from: Start IP <b>192.168.2.100</b> to End IP <b>192.168.2.200</b>. If you want your PC to have a static/fixed IP address then you'll have to choose an IP address outside this IP address range.</p>
<b>802.1d Spanning Tree</b>	Disabled	If 802.1d Spanning Tree function is enabled, this router will use the spanning tree protocol to prevent from network loop happened in the LAN ports.

## Static DHCP

Specify the Static DHCP Addresses for your LAN clients.

## Domain Name

Enter the domain name of your LAN interface if there is one.

Click <Apply Changes> at the bottom of the screen to save the above configurations.

## 3.1.3 Routing

You can turn off the NAT function of your router by enabling the Static Routing and let the router forward packets by your routing policy.

The screenshot shows the 'Routing' configuration page for an AIRLINK 101 AR675W router. The page has an orange header with the AIRLINK 101 logo and a 'Log Out' button. A left sidebar contains navigation links: Setup Wizard, Network (WAN (Internet), LAN, Routing, DDNS), Wireless, Application & Gaming, Access Restriction, Security, Administration, and Status. The main content area is titled 'Routing' and includes a sub-header 'You can enable Static Routing to turn off NAT function of this router and let this router forward packets by your routing policy.' Below this is a checkbox for 'Enable Static Routing'. Underneath are three input fields: 'Destination LAN IP', 'Subnet Mask', and 'Default Gateway', each with a corresponding 'Apply Changes' and 'Reset' button. At the bottom, there is a 'Static Routes' section with a table with columns 'Destination IP Address', 'Netmask', 'Gateway', and 'Select', and buttons for 'Delete Selected', 'Delete All', and 'Reset'.

Parameter	Description
<b>Enable Static Routing</b>	Enable/disable the NAT function
<b>Destination LAN IP</b>	Enter the IP Address of the destination LAN.
<b>Subnet Mask</b>	Enter the Subnet Mask of the destination LAN.
<b>Default Gateway</b>	This is the gateway IP Address where packets are sent. Input the gateway IP Address.
<b>Static Routes</b>	From the table, you can check each Static Routing setting.
<b>Delete Selected</b>	If you want to delete a setting, check the 'select' box of the setting you want to delete, then click 'Delete

Selected' button. (You can select more than one setting).

### Delete All

If you want to delete all settings listed here, please click 'Delete All' button.

### Reset

You can also click 'Reset' button to unselect all.

---

Click <Apply Changes> at the bottom of the screen to save the above configurations.

## 3.1.4 DDNS

DDNS allows you to map the static domain name to a dynamic IP address. You must get an account, password and your static domain name from the DDNS service providers. This router supports DynDNS, and TZO.

The screenshot shows the 'Dynamic DNS Setting' page in the router's web interface. The sidebar on the left lists various configuration categories, with 'DDNS' highlighted. The main content area has a title 'Dynamic DNS Setting' and a brief description of the service. Below the description is a checkbox for 'Enable DDNS'. Underneath, there is a dropdown menu for 'Service Provider' currently set to 'DynDNS'. There are three input fields: 'Domain Name', 'User Name/Email', and 'Password/Key'. At the bottom of the form are two buttons: 'Apply Change' and 'Reset'. A note at the bottom provides links for creating accounts with TZO and DynDNS.

Parameters	Default	Description
<b>Enable DDNS</b>	Disable	Enable/Disable the DDNS function of this router.
<b>Service Provider</b>		Select a DDNS service provider.
<b>Domain name</b>		Your static domain name that use DDNS.
<b>User Name/Email</b>		The account that your DDNS service provider assigned to you.

**Password/Key**

The password you set for the DDNS service account above.

---

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

## 3.2 Wireless

### 3.2.1 Basic Settings

You can set parameters that are used for the wireless stations to connect to this router. The parameters include SSID, Channel Number and etc.

The screenshot shows the 'Wireless Basic Settings' page for the AIRLINK 101 AR675W router. The page includes a navigation menu on the left with options like Setup Wizard, Network, Wireless, Basic Settings, Wireless Security, MAC Control, Advanced Settings, Wireless Schedule, WPS, Application & Gaming, Access Restriction, Security, Administration, and Status. The main content area is titled 'Wireless Basic Settings' and contains the following configuration options:

- Disable Wireless LAN Interface
- Mode: 2.4 GHz (B+G+N)
- SSID: airlink101 (with a Multiple AP button)
- Channel Width: 40MHz
- Control Sideband: Lower
- Channel Number: 6
- Broadcast SSID: Enabled
- WMM: Enabled
- Data Rate: Auto
- Associated Clients: Show Active Clients

Buttons for 'Apply Changes' and 'Reset' are located at the bottom of the configuration area.

Parameters	Default	Description
<b>Disable Wireless LAN Interface</b>		Check this box to disable wireless LAN.
<b>Mode</b>		<p>Please select the radio band from one of the following options.</p> <p>2.4GHz(B): 2.4GHz band, only allows 802.11b wireless network client to connect this router (maximum transfer rate 11Mbps*).</p> <p>2.4 GHz (N): 2.4GHz band, only allows 802.11n wireless network client to connect this router (maximum transfer rate 300Mbps*).</p> <p>2.4 GHz (B+G):2.4GHz band, only allows 802.11b and 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, and maximum 54Mbps for 802.11g clients*).</p>

2.4 GHz (G): 2.4GHz band, only allows 802.11g wireless network client to connect this router (maximum transfer rate 54Mbps\*).

2.4 GHz (B+G+N): 2.4GHz band, allows 802.11b, 802.11g, and 802.11n wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, maximum 54Mbps for 802.11g clients, and maximum 300Mbps for 802.11n clients\*).

### **Multiple APs**

This access point supports Multiple APs function. Please go to section 3.2.1.1 below for more information.

### **SSID**

airlink101

This is the name of your wireless network. You can type any alphanumerical characters here, maximum 32 characters. SSID is used to identify your own wireless router from others when there are other wireless routers in the same area. It's recommended to change default SSID value to the one which is meaningful to you, like myhome, office\_room1, etc.

### **Channel Width**

Set channel width of wireless radio. Do not modify default value if you don't know what it is, default setting is '40 MHz'.

### **Control SideBand**

Select the Upper or Lower band for your Control Sideband. While Upper band is selected, the channel number you can select is from channel 5 to channel 11. While Lower band is selected, the channel number you can select is from channel 1 to channel 7.

### **Channel Number**

Please select a channel from the dropdown list of 'Channel Number' for broadcasting. You can choose any channel number you want to use, and almost all wireless clients can locate the channel you're using automatically without any problem. However, it's still useful to remember the channel number you use, some wireless client supports manual channel number select, and this would help in certain scenario when there is some radio communication problem.

### **Broadcast SSID**

Decide if the wireless router will broadcast its own SSID or not. You can hide the SSID of your

wireless router (set the option to 'Disable'), so only people those who know the SSID of your wireless router can get connected.

## WMM

The short of Wi-Fi MultiMedia, it will enhance the data transfer performance of multimedia contents when they're being transferred over wireless network. If you don't know what it is / not sure if you need it, it's safe to set this option to 'Enable'.

## Data Rate

Set the wireless data transfer rate to a certain value. Since most of wireless devices will negotiate with each other and pick a proper data transfer rate automatically, it's not necessary to change this value unless you know what will happen after modification.

## Show Active Clients

Click "Show Active Clients" button, then an "Active Wireless Client Table" will pop up. You can see the status of all active wireless clients that are connecting to the Router.

---

Click <Apply Changes> at the bottom of the screen to save the above configurations.

### 3.2.1.1 Multiple APs

The AR675W supports Multiple APs function. With different SSID names, you can separate to four wireless networks with different wireless security, WMM, access control and etc.

#### Multiple APs

This page shows and updates the wireless setting for multiple APs.

No.	Enable	Band	SSID	Data Rate	Broadcast SSID	WMM	Access	Active Client List
AP1	<input checked="" type="checkbox"/>	2.4 GHz (B+G+N) ▾	default-VAP0	Auto ▾	Enabled ▾	Enabled ▾	LAN+WAN ▾	Show
AP2	<input checked="" type="checkbox"/>	2.4 GHz (B+G+N) ▾	default-VAP1	Auto ▾	Enabled ▾	Enabled ▾	LAN+WAN ▾	Show
AP3	<input checked="" type="checkbox"/>	2.4 GHz (B+G+N) ▾	default-VAP2	Auto ▾	Enabled ▾	Enabled ▾	LAN+WAN ▾	Show
AP4	<input checked="" type="checkbox"/>	2.4 GHz (B+G+N) ▾	default-VAP3	Auto ▾	Enabled ▾	Enabled ▾	LAN+WAN ▾	Show

Parameters	Default	Description
<b>Enable</b>		Check this box if you want to enable multiple access points.
<b>Band</b>		<p>Please select the radio band from one of the following options.</p> <p>2.4GHz(B): 2.4GHz band, only allows 802.11b wireless network client to connect this router (maximum transfer rate 11Mbps).</p> <p>2.4 GHz (N): 2.4GHz band, only allows 802.11n wireless network client to connect this router (maximum transfer rate 150Mbps).</p> <p>2.4 GHz (B+G):2.4GHz band, only allows 802.11b and 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, and maximum 54Mbps for 802.11g clients).</p> <p>2.4 GHz (G): 2.4GHz band, only allows 802.11g wireless network client to connect this router (maximum transfer rate 54Mbps).</p> <p>2.4 GHz (B+G+N): 2.4GHz band, allows 802.11b, 802.11g, and 802.11n wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, maximum 54Mbps for 802.11g clients, and maximum 150Mbps for 802.11n clients).</p>
<b>SSID</b>		<p>This is the name of wireless router. You can type any alphanumerical characters here, maximum 32 characters. SSID is used to identify your own wireless router from others when there are other wireless routers in the same area. Default SSID is 'default-VAP0/1/2/3', it's recommended to change default SSID value to the one which is meaningful to you, like myhome, office_room1, etc.</p>
<b>Data Rate</b>		<p>Set the wireless data transfer rate to a certain value. Since most of wireless devices will negotiate with each other and pick a proper data transfer rate automatically, it's not necessary to</p>



change this value unless you know what will happen after modification.

### **Broadcast SSID**

Decide if the wireless router will broadcast its own SSID or not. You can hide the SSID of your wireless router (set the option to 'Disable'), so only people those who know the SSID of your wireless router can get connected.

### **WMM**

The short of Wi-Fi MultiMedia, it will enhance the data transfer performance of multimedia contents when they're being transferred over wireless network. If you don't know what it is / not sure if you need it, it's safe to set this option to 'Enable'.

### **Access**

If you want to limit stations connect to the specific access point with the right to access Internet only, please select 'WAN'. By default, it is not enabled the access control.

### **Active Client List**

Click "Show" button, then an "Active Wireless Client Table" will pop up. You can see the status of all active wireless stations that are connecting to the access point.

---

Click <**Apply Changes**> at the bottom of the screen to save the above configurations.

## **3.2.2 Security**

The AR675W provides complete wireless LAN security functions, include WEP, IEEE 802.11x, IEEE 802.11x with WEP, WPA with pre-shared key and WPA with RADIUS. With these security functions, you can prevent your wireless LAN from illegal access. Please make sure your wireless clients use the same security function. You can choose different security modes for each SSID (if you have enabled Multiple APs).

AR675W

- Setup Wizard
- Network
- Wireless
  - Basic Settings
  - Wireless Security
  - MAC Control
  - Advanced Settings
  - Wireless Schedule
  - WPS
- Application & Gaming
- Access Restrictions
- Security
- Administration
- Status

### Wireless Security

This page allows you setup the wireless security. Select WPA2, WPA or WEP for Security Mode to prevent any unauthorized access to your wireless network.

 Select SSID: 

 Security Mode: 

 802.1x Authentication: 
[Apply Changes](#) [Reset](#)

Parameters	Default	Description
<b>Select SSID</b>		If you have configured multiple access points, please select the access point you want to configure.
<b>Security Mode</b>		You can choose no encryption, WEP, WPA, WPA2 or WPA2 mixed mode for security.
<b>802.1x Authentication</b>		IEEE 802.1x is an authentication protocol. Every user must use a valid account to login to this Access Point before accessing the wireless LAN. The authentication is processed by a RADIUS server. Check this box to authenticates user by IEEE 802.1x.

Click **<Apply Changes>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

### 3.2.2.1 WEP

When you select 64-bit or 128-bit WEP key, you have to enter WEP keys to encrypt data. You can generate the key by yourself and enter it.

### Wireless Security

This page allows you setup the wireless security. Select WPA2, WPA or WEP for Security Mode to prevent any unauthorized access to your wireless network.

Select SSID:

Security Mode:

802.1x Authentication:

Authentication:  Open System  Shared Key  Auto

Key Length:

Key Format:

Encryption Key:

[Apply Changes](#) [Reset](#)

Parameters	Description
<b>Authentication</b>	There are two authentication types: "Open System" and "Shared Key". When you select "Open System", wireless stations can associate with this wireless router without WEP encryption. When you select "Shared Key", you should also setup WEP key in the "Security" page and wireless stations should use WEP encryption in the authentication phase to associate with this wireless router. If you select "Auto", the wireless client can associate with this wireless router by using any one of these two authentication types.
<b>Key Length</b>	You can select the WEP key length for encryption, 64-bit or 128-bit. Larger WEP key length will provide higher level of security, but the throughput will be lower.
<b>Key Format</b>	You may select to select ASCII Characters (alphanumeric format) or Hexadecimal Digits (in the "A-F", "a-f", "0-9" range) to be the WEP Key.
<b>Encryption Key</b>	The WEP key are used to encrypt data transmitted in the wireless network. Fill the text box by following the rules below. 64-bit WEP: input 10-digit Hex values (in the "A-F", "a-f" and "0-9" range) or 5-digit ASCII character as the encryption keys.

128-bit WEP: input 26-digit Hex values (in the "A-F", "a-f" and "0-9" range) or 13-digit ASCII characters as the encryption keys.

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

### 3.2.2.2 WPA

Wi-Fi Protected Access (WPA) is an advanced security standard. You can use a pre-shared key to authenticate wireless stations and encrypt data during communication. It uses TKIP to change the encryption key frequently. So the encryption key is not easy to be broken by hackers. This can improve security very much.

The screenshot shows the 'Wireless Security' configuration page for an AirLink 101 AR675W router. The page title is 'Wireless N Router Setup'. The left sidebar contains a navigation menu with categories: Setup Wizard, Network, Wireless, Application & Gaming, Access Restrictions, Security, Administration, and Status. The 'Wireless Security' section is active. The main content area includes a 'Log Out' button in the top right. Below the title, there is a description: 'This page allows you setup the wireless security. Select WPA2, WPA or WEP for Security Mode to prevent any unauthorized access to your wireless network.' The 'Select SSID' dropdown is set to 'RootAP - default'. The 'Security Mode' dropdown is set to 'WPA'. The 'Authentication Mode' has two radio buttons: 'Enterprise (RADIUS)' (unselected) and 'Personal (Pre-Shared Key)' (selected). The 'WPA Encryption Mode' has two checkboxes: 'TKIP' (checked) and 'AES' (unchecked). The 'Pre-Shared Key Format' dropdown is set to 'Passphrase'. There is an empty text input field for the 'Pre-Shared Key'. At the bottom, there are 'Apply Changes' and 'Reset' buttons.

Parameters	Description
<b>Authentication Mode</b>	WPA can authenticate by Enterprise (RADIUS) or by Personal (Pre-Shared key). If you enable 'Enterprise (RADIUS)', please go to section 3.2.2.5 for more information.
<b>WPA Encryption Mode</b>	You can choose TKIP or AES for encryption method.
<b>Pre-shared Key Format</b>	You may select to select Passphrase (alphanumeric format) or Hexadecimal Digits (in the "A-F", "a-f" and "0-9" range) to be the Pre-shared Key. For example:

## Pre-shared Key

The Pre-shared key is used to authenticate and encrypt data transmitted in the wireless network. Fill the text box by following the rules below.

Hex: input 64-digit Hex values (in the “A-F”, “a-f” and “0-9” range) or at least 8 character pass phrase as the pre-shared keys.

Click <Apply Changes> at the bottom of the screen to save the above configurations.

### 3.2.2.3 WPA2

Wi-Fi Protected Access 2 (WPA2) is an advanced security standard. You can use a pre-shared key to authenticate wireless stations and encrypt data during communication. It uses CCMP (AES) to change the encryption key frequently, so the encryption key is difficult to be broken which highly improve the wireless security.

The screenshot shows the 'Wireless Security' configuration page for an AirLink 101 AR675W router. The page has a navigation sidebar on the left with options like 'Setup Wizard', 'Network', 'Wireless', 'Application & Gaming', 'Access Restrictions', 'Security', 'Administration', and 'Status'. The main content area is titled 'Wireless Security' and includes a 'Log Out' button in the top right. Below the title, there is a description: 'This page allows you setup the wireless security. Select WPA2, WPA or WEP for Security Mode to prevent any unauthorized access to your wireless network.' The configuration options are: 'Select SSID' (RootAP - default), 'Security Mode' (WPA2), 'Authentication Mode' (Enterprise (RADIUS) and Personal (Pre-Shared Key)), 'WPA2 Encryption Mode' (TKIP and AES), 'Pre-Shared Key Format' (Passphrase), and 'Pre-Shared Key' (text input field). At the bottom, there are 'Apply Changes' and 'Reset' buttons.

Parameters	Description
<b>Authentication Mode</b> or by	WPA can authenticate by Enterprise (RADIUS)  Personal (Pre-Shared key). If you enable 'Enterprise (RADIUS)', please go to section 3.2.2.5 for more information.
<b>WPA2 Encryption Mode</b>	You can choose TKIP or AES for WPA2 encryption method.

## Pre-shared Key Format

You may select to select Passphrase (alphanumeric format) or Hexadecimal Digits (in the “A-F”, “a-f” and “0-9” range) to be the Pre-shared Key.

## Pre-shared Key

The Pre-shared key is used to authenticate and encrypt data transmitted in the wireless network. Fill the text box by following the rules below.

Hex: input 64-digit Hex values (in the “A-F”, “a-f” and “0-9” range) or at least 8 character pass phrase as the pre-shared keys.

Click <Apply Changes> at the bottom of the screen to save the above configurations.

### 3.2.2.4 WPA-Mixed

This security mode combines WPA and WPA2. You can use TKIP or AES encryption method for either mode which highly increases the security and complexity of your encryption key. However, you must make sure that your wireless clients support either WPA or WPA2 mode before you make this configuration.

The screenshot shows the 'Wireless N Router Setup' interface for an AR675W router. The left sidebar contains a navigation menu with options: Setup Wizard, Network, Wireless (selected), Basic Settings, Wireless Security, MAC Control, Advanced Settings, Wireless Schedule, WPS, Application & Gaming, Access Restrictions, Security, Administration, and Status. The main content area is titled 'Wireless Security' and includes a 'Log Out' button in the top right. Below the title, there is a note: 'This page allows you setup the wireless security. Select WPA2, WPA or WEP for Security Mode to prevent any unauthorized access to your wireless network.' The configuration fields are: 'Select SSID' (Root AP - default), 'Security Mode' (WPA-Mixed), 'Authentication Mode' (Enterprise (RADIUS) and Personal (Pre-Shared Key) with Personal selected), 'WPA Encryption Mode' (TKIP and AES with TKIP checked), 'WPA2 Encryption Mode' (TKIP and AES), 'Pre-Shared Key Format' (Passphrase), and 'Pre-Shared Key' (text input field). At the bottom, there are 'Apply Changes' and 'Reset' buttons.

Parameters	Description
<b>Authentication Mode</b>	WPA can authenticate by Enterprise (RADIUS) or by

Personal (Pre-Shared key). If you enable 'Enterprise (RADIUS)', please go to section 3.2.2.5 for more information.

**WPA Encryption Mode**

You can choose TKIP or AES for WPA key method.

**WPA2 Encryption Mode**

You can choose TKIP or AES for WPA2 key method.

**Pre-shared Key Format**

You may select to select Passphrase (alphanumeric format) or Hexadecimal Digits (in the "A-F", "a-f" and "0-9" range) to be the Pre-shared Key.

**Pre-shared Key**

The Pre-shared key is used to authenticate and encrypt data transmitted in the wireless network. Fill the text box by following the rules below.

Hex: input 64-digit Hex values (in the "A-F", "a-f" and "0-9" range) or at least 8 character pass phrase as the pre-shared keys.

---

Click <**Apply Changes**> at the bottom of the screen to save the above configurations.

**3.2.2.5 RADIUS Server**

IEEE 802.1x is an authentication protocol. Every user must use a valid account to login to this wireless router before accessing the wireless LAN. The authentication is processed by a RADIUS server. This mode only authenticates user by IEEE 802.1x, but it does not encryption the data during communication. If there is a RADIUS server in you environment, please enable this function. Check this box and another sub-menu will appear.

AR675W

- Setup Wizard
- Network
- Wireless
  - Basic Settings
  - Wireless Security
  - MAC Control
  - Advanced Settings
  - Wireless Schedule
  - WPS
- Application & Gaming
- Access Restriction
- Security
- Administration
- Status

### Wireless Security

This page allows you setup the wireless security. Select WPA2, WPA or WEP for Security Mode to prevent any unauthorized access to your wireless network. WPA2-AES is the most secured encryption method for general users. WEP is the most common encryption which should be compatible with all your wireless devices but the least secured. It is recommended to use WPA2-AES for your wireless security if all the wireless devices on your network support it.

 Select SSID: 

 Security Mode: 

 Authentication Mode:  Enterprise (RADIUS)

 Personal (Pre-Shared Key)

 WPA2 Encryption Mode:  TKIP  AES

 RADIUS Server IP Address: 

 RADIUS Server Port: 

 RADIUS Server Password: 
 

Parameters	Description
<b>Radius Server IP Address</b>	The IP address of external RADIUS server.
<b>Radius Server Port</b>	The service port of the external RADIUS server.
<b>Radius Server Password</b>	The password used by external RADIUS server.

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

## 3.2.3 MAC Control

This function will help you to prevent unauthorized users from connecting to your wireless router. Only those wireless devices with the MAC addresses you specified here are allowed to access your wireless router. You can use this function with other security measures described in previous section together.



AR675W

- Setup Wizard
- Network
- Wireless
  - Basic Settings
  - Wireless Security
  - MAC Control**
  - Advanced Settings
  - Wireless Schedule
  - WPS
- Application & Gaming
- Access Restrictions
- Security
- Administration
- Status

### Wireless MAC Control

If you choose 'Allowed Listed', only those clients whose wireless MAC addresses are in the access control list will be able to connect to your Router. When 'Deny Listed' is selected, these wireless clients on the list will not be able to connect the Router.

Wireless Access Control Mode:

MAC Address:  Comment:

#### Current Access Control List:

MAC Address	Comment	Select
<input type="text"/>	<input type="text"/>	<input type="checkbox"/>

Parameters	Description
<b>Wireless Access Control Mode</b>	Enable/Disable wireless access control. You can choose 'Allow Listed' if you allow the MAC Addresses listed in the following table to connect to the router; choose 'Deny Listed' if you deny the MAC Addressed listed in the following table to connect to the router.
<b>MAC Address</b>	Input the MAC address of your wireless devices here, format 'aa:bb:cc:dd:ee:ff'.
<b>Comment</b>	You can input any text here as the comment of this MAC address, like 'ROOM 2A Computer' or anything.
<b>Current Access Control List</b>	From the table, you can check the access control settings.
<b>Delete Selected</b>	If you want to delete a specific MAC address entry, check the 'select' box of the MAC address you want to delete, then click 'Delete Selected' button. (You can select more than one MAC addresses).
<b>Delete All</b>	If you want to delete all MAC addresses listed here, please click 'Delete All' button.
<b>Reset</b>	You can also click 'Reset' button to unselect all.

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

## 3.2.4 Advanced Settings

You can set advanced wireless LAN parameters of this router. The parameters include Authentication Type, Fragment Threshold, RTS Threshold, Beacon Interval, Preamble Type, etc. It is suggested not to change these parameters unless you know what effect the changes will have on this router.

The screenshot shows the 'Wireless Advanced Settings' page for an AirLink 101 AR675W router. The page is divided into a left sidebar with navigation options and a main content area. The sidebar includes 'Setup Wizard', 'Network', 'Wireless' (with sub-options like Basic Settings, Wireless Security, MAC Control, Advanced Settings, Wireless Schedule, WPS), 'Application & Gaming', 'Access Restrictions', 'Security', 'Administration', and 'Status'. The main content area is titled 'Wireless Advanced Settings' and contains a warning: 'These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Router.' Below this, several parameters are listed with their current values and ranges: Fragment Threshold (2346, range 256-2346), RTS Threshold (2347, range 0-2347), Beacon Interval (100, range 20-1024 ms), Preamble Type (Long Preamble selected), IAPP (Enabled selected), Protection (Disabled selected), Aggregation (Enabled selected), Short GI (Enabled selected), WLAN Partition (Disabled selected), and RF Output Power (100% selected). At the bottom of the settings area are 'Apply Changes' and 'Reset' buttons.

Parameters	Default	Description
<b>Fragment Threshold</b>		"Fragment Threshold" specifies the maximum size of packet during the fragmentation of data to be transmitted. If you set this value too low, it will result in bad performance.
<b>RTS Threshold</b>		When the packet size is smaller than the RTS threshold, the wireless router will not use the RTS/CTS mechanism to send this packet.
<b>Beacon Interval</b>		The interval of time that this wireless router broadcast a beacon. Beacon is used to synchronize the wireless network.

### **Preamble Type**

The “Long Preamble” can provide better wireless LAN compatibility while the “Short Preamble” can provide better wireless LAN performance.

### **IAPP**

If you enable “IAPP”, it will allow wireless station roaming between IAPP enabled access points within the same wireless LAN.

### **Protection**

This is also called CTS Protection. It is recommended to enable the protection mechanism. This mechanism can decrease the rate of data collision between 802.11b and 802.11g/802.11n wireless stations. When the protection mode is enabled, the throughput of the AP will be a little lower due to many of frame traffic should be transmitted.

### **Aggregation**

This function is used to join multiple data packets for transmission as a single unit to increase network efficiency.

### **Short GI**

The 802.11n draft specifies two guard intervals: 400ns (short) and 800ns (long). Support of the 400ns GI is optional for transmit and receive. Enable this function will increase network efficiency.

### **WLAN Partition**

Enable this function and all the wireless clients cannot access to each other.

### **RF Output Power**

You can set the output power of wireless radio. Unless you’re using this wireless router in a really big space, you may not have to set output power to 100%. **This will enhance security (malicious / unknown users in distance will not be able to reach your wireless router).**

---

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

## **3.2.5 Wireless Schedule**

This page allows you to set up the wireless schedule rules. You can designate to enable wireless interface by time or day.

AR675W

- Setup Wizard
- Network
- Wireless
  - Basic Settings
  - Wireless Security
  - MAC Control
  - Advanced Settings
  - Wireless Schedule
  - WPS
- Application & Gaming
- Access Restrictions
- Security
- Administration
- Status

### Wireless Schedule

This page allows you setup the wireless schedule rule. Please do not forget to configure system time before enable this feature.

 Enable Wireless Schedule

Days :

 Everyday  Sun  Mon  Tue  Wed  Thu  Fri  Sat

Time :

 24 Hours  From  :  To  : 
 

Parameters	Description
<b>Enable Wireless Schedule</b>	Check this box to enable wireless schedule.
<b>Days</b>	Select to enable the wireless access point every day or some other weekdays.
<b>Time</b>	Designate a period of hours in a day to enable the wireless access point.

Click **<Apply Changes>** at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

### 3.2.6 Security Sync-up

The AR675W Airlink101 Wireless N Router has a Security Button built-in which allows you to connect your wireless computer with the router easily and safely. Your wireless adapter must support this feature as well. If not, you will need to set up the wireless security manually and you can skip this section.

**AIRLINK 101**  
AR675W

Wireless N Router Setup

Log Out

**Wi-Fi Protected Setup**

This page allows you to change the setting for WPS (Wi-Fi Protected Setup). Using this feature could let your wireless client automatically synchronize its setting and connect to the Router in a minute without any hassle.

**Disable WPS**

WPS Status:  Configured  UnConfigured

Self-PIN Number:

Push Button Configuration:


Client PIN Number:

Please make sure this feature is enabled on the Router (see the screenshot above). In the instructions below, we are going to use the Airlink101 WLAN Monitor utility comes with the AWLL6077, Airlink101 Wireless N adapter as an example.

**Step 1** Go to the computer with Airlink101 Wireless N adapter, AWLL6077 connected.

**Step 2** Push and hold the Security button on the Adapter until you see the following window pops up on the computer monitor.




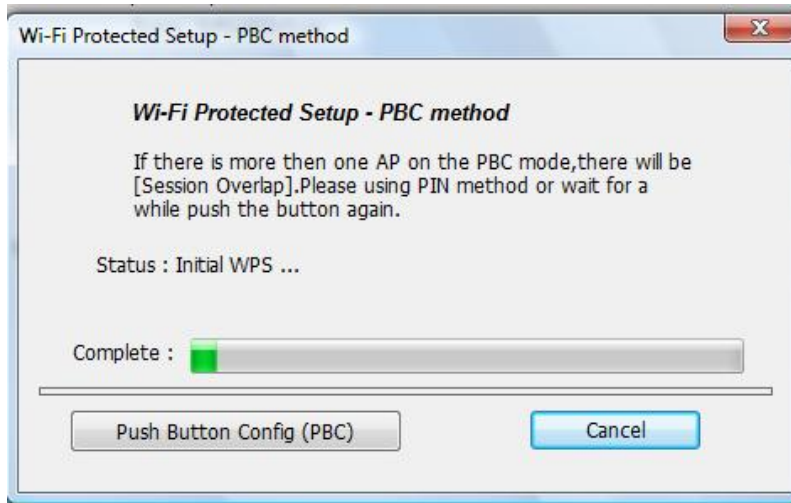

**Step 3** Push the Security button the Router for 3 seconds. The WLAN LED will stay solid green instead of blinking.



**Step 4** The Router will now start the handshake with the wireless adapter which will take about 2 minutes. When you see the window similar to the one below, the connection has been established.

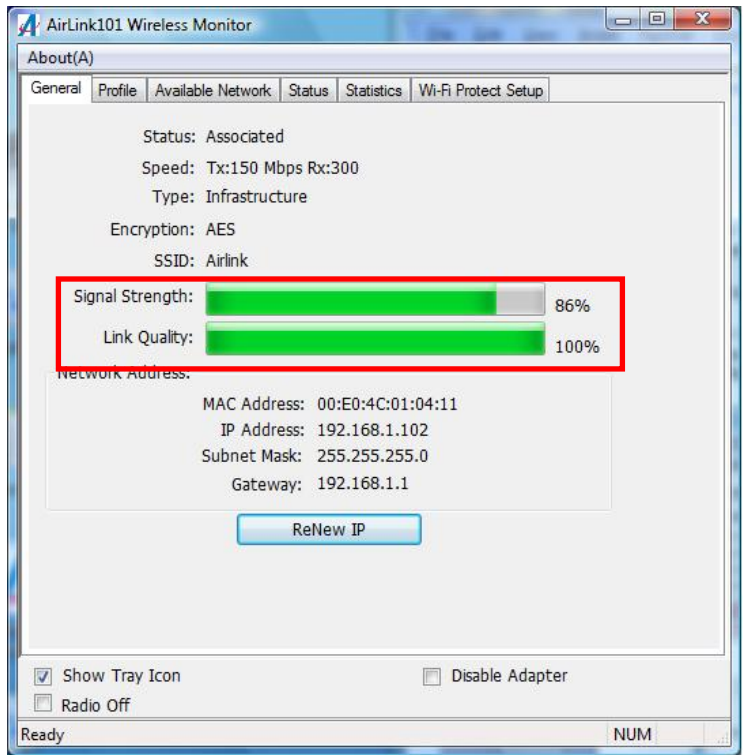

## 3.3 Application & Gaming

### 3.3.1 Port Forwarding

The Port Forwarding allows you to re-direct a particular range of service port numbers (from the Internet/WAN Ports) to a particular LAN IP address. It helps you to host some servers behind the router NAT firewall.

Parameter	Description
<b>Enable Port Forwarding</b>	Enable Port Forwarding
<b>IP Address</b>	This is the private IP of the server behind the NAT firewall. Note: You need to give your LAN PC clients a fixed/static IP address for Port Forwarding to work properly.
<b>Protocol</b>	This is the protocol type to be forwarded. You can choose to forward “TCP” or “UDP” packets only or select “both” to forward both “TCP” and “UDP” packets.
<b>Port Range</b>	The range of ports to be forward to the private IP.
<b>Comment</b>	The description of this setting.
<b>Current Port Forwarding Table</b>	From the table, you can check each Port forwarding setting.
<b>Delete Selected</b>	If you want to delete a setting, check the ‘select’ box of the setting you want to delete, then click ‘Delete Selected’ button. (You can select more than one setting).



## Delete All

If you want to delete all settings listed here, please click 'Delete All' button.

## Reset

You can also click 'Reset' button to unselect all.

Click <Apply Changes> at the bottom of the screen to save the above configurations.

## 3.3.2 Port Triggering

Port triggering allows the router to keep track of outgoing data for specific port numbers. The router remembers which computer sends out what data, so that when the requested data returns through the router, the data is sent back to the proper computer by way of IP address and port mapping rules.

The screenshot shows the 'Port Triggering' configuration page in the AirLink 101 router's web interface. The page title is 'Wireless N Router Setup'. On the left is a navigation menu with options like 'Setup Wizard', 'Network', 'Wireless', 'Application & Gaming', 'Access Restriction', 'Security', 'Administration', and 'Status'. The 'Port Triggering' option is selected. The main content area has a sub-header 'Port Triggering' and a paragraph explaining that some applications require multiple connections and that NAT must be disabled. Below this is a checkbox labeled 'Enable Port Triggering' which is checked. There is a table for adding new trigger ports with columns for IP Address, Computer Name, TCP Port to Open, UDP Port to Open, and Comment. A row is shown with IP 192.168.2.100, Computer Name NIKE, TCP Port 6667, and UDP Port 28800-29000. Below the table is a 'Popular Applications' dropdown menu set to 'MSN Game Zone' and an 'Add' button. At the bottom of the page are 'Apply' and 'Cancel' buttons.

### Parameter

### Description

#### Enable Port Triggering

Check to enable Port Triggering, or uncheck to disable.

#### IP Address

This is the private IP of the computer/server behind the NAT firewall. Note: You need to give your PC a fixed/static IP address for Port Triggering to work properly.

#### Computer Name

This is the computer that you need to enable the port triggering function. Select a PC from here if you do not

know its IP address and click on the << button to add the IP address to the left blank. If you do not see any computer after you click on the drop-down menu, select the option "Refresh" and you will be given a list of computers that are connected to your network.

**TCP/UDP Port to Open**

This is the TCP/UDP ports you want to trigger. Type in a range of TCP/UDP ports to be triggered. For instance, "5000-5300" or "9091, 9093-9100", depending on your special application's requirement.

**Comment**

The description of this setting.

**Popular Application**

This list includes many popular applications you may be using. Select the application you want to use and click on the Add button next to it; you will see the proper port numbers added to the "TCP/UDP Port to Open" blank.

**Add (in red box)**

Click on Add button in the red box to save the trigger rule you set into the Trigger-Port Table.

**Current Trigger-Port Table**

From the table, you can select each Port triggering setting by checking the "Select" checkbox.

**Delete Selected**

If you want to delete a setting, check the 'select' box of the setting you want to delete, then click 'Delete Selected' button. (You can select more than one setting).

**Delete All**

If you want to delete all settings listed here, please click 'Delete All' button.

**Reset**

You can also click 'Reset' button to unselect all.

---

Click <Apply> at the bottom of the screen to save the above configurations.

### 3.3.3 DMZ

If you have a local client PC that cannot run an Internet application (e.g. Games) properly from behind the NAT firewall, then you can open the client up to unrestricted two-way Internet access

by defining a DMZ Host. The DMZ function allows you to re-direct all packets going to your WAN port IP address to a particular IP address in your LAN.

Parameters	Description
<b>Enable DMZ</b>	Enable/disable DMZ.
<b>DMZ Host IP Address</b>	Input the IP address of a particular host in your LAN that will receive all the packets originally going to the WAN port/Public IP address above  <b>Note:</b> You need to give your LAN PC clients a fixed/static IP address for DMZ to work properly.

Click <**Apply Changes**> at the bottom of the screen to save the above configurations. You can now configure other advance sections or start using the router (with the advance settings in place)

### 3.3.4 QoS

Quality of service provides an efficient way for computers on the network to share the internet bandwidth with a promised quality of internet service. Without QoS, all computers and devices on the network will compete with each other to get internet bandwidth, and some applications which require guaranteed bandwidth (like video streaming and network telephone) will be affected, therefore an unpleasing result will occur, like the interruption of video / audio transfer.

With this function, you can limit the maximum bandwidth or give a guaranteed bandwidth for a specific computer, to avoid said unpleasing result from happening.

AR675W

- Setup Wizard
- Network
- Wireless
- Application & Gaming
  - Port Forwarding
  - Port Triggering
  - DMZ
  - QoS
- Access Restriction
- Security
- Administration
- Status

### Quality of Service

Entries in this table improve your online gaming experience by ensuring that your game traffic is prioritized over other network traffic, such as FTP or Web.

Enable QoS  
 Automatic Uplink Speed  
 Manual Uplink Speed (Kbps):

QoS Rule Setting:  
 Local IP Address:  -   
 Mode:   
 Bandwidth (Kbps):   
 Comment:

Current QoS Rules Table:

Local IP Address	MAC Address	Mode	Bandwidth	Comment	Select
<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/> <input type="button" value="Reset"/>					

Parameter	Description
<b>Enable QoS</b>	Check this box to enable QoS, and uncheck this box to disable QoS.
<b>Automatic Uplink Speed</b>	Check this box to enable automatic uplink speed.
<b>Manual Uplink Speed (Kbps)</b>	You can set the limit of uplink speed in Kbps. To disable uplink bandwidth limitation, input '0' here.
<b>Local IP Address</b>	Input the IP Address of your computer to configure the QoS rule.
<b>Mode</b>	Select to guarantee a minimum or maximum bandwidth to the IP Address you designate.
<b>Bandwidth (Kbps)</b>	Input the bandwidth in Kbps.
<b>Comment</b>	Please input any text to describe this QoS rule.
<b>Current QoS Rules Table</b>	From the table, you can check each QoS rule setting.
<b>Delete Selected</b>	If you want to delete a setting, check the 'select' box of the setting you want to delete, then click 'Delete Selected' button. (You can select more than one setting).

**Delete All**

If you want to delete all settings listed here, please click 'Delete All' button.

**Reset**

You can also click 'Reset' button to unselect all.

---

Click <**Apply Changes**> at the bottom of the screen to save the above configurations.

## 3.4 Access Restrictions

The AR675W Wireless N Green Router provides extensive ways to restrict local users to access Internet.

### 3.4.1 Port Filtering

If you want to restrict users from accessing certain Internet applications/services (e.g. Internet websites, email, FTP etc.) by port numbers, then this is the place to set that configuration. Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Router. Port filters can be helpful in securing or restricting your local network.

The screenshot shows the 'Port Filtering' configuration page in the router's web interface. The page has an orange header with the 'AIRLINK 101' logo and 'AR675W' model name. A 'Log Out' button is in the top right. The left sidebar contains navigation options: Setup Wizard, Network, Wireless, Application & Gaming, Access Restriction (selected), Security, Administration, and Status. Under 'Access Restriction', 'Port Filtering' is selected. The main content area is titled 'Port Filtering' and contains a checkbox for 'Enable Port Filtering' which is checked. Below it are input fields for 'Port Range' (two empty boxes), a 'Protocol' dropdown menu set to 'Both', and a 'Comment' text box. There are 'Apply Changes' and 'Reset' buttons. Below the form is a 'Current Filter Table' with columns for 'Port Range', 'Protocol', 'Comment', and 'Select'. At the bottom of the table are 'Delete Selected', 'Delete All', and 'Reset' buttons.

Parameters	Description
<b>Enable Port Filtering</b>	Check this box to enable the port filtering function.
<b>Port Range</b>	The range of ports to be blocked.
<b>Protocol</b>	Choose 'TCP' or 'UDP' or 'Both' protocols for port filtering.
<b>Comment</b>	You can input any text here as the comment of this settings.
<b>Current Filter Table</b>	From the table, you can check each port filter setting.
<b>Delete Selected</b>	If you want to delete a specific setting, check the 'select' box of the setting you want to delete, then click 'Delete Selected' button. (You can select more than one setting).
<b>Delete All</b>	If you want to delete all settings listed here, please click 'Delete All' button.

## Reset

You can also click 'Reset' button to unselect all.

Click <Apply Changes> at the bottom of the screen to save the above configurations.

### 3.4.2 IP Filtering

If you want to restrict users from accessing certain Internet applications/services (e.g. Internet websites, email, FTP etc.) by their IP addresses, then you can set up the filtering rules here. Entries in this table are restricted to use certain type of connections from the router. IP filters can be helpful in securing or restricting your local network.

The screenshot shows the 'IP Filtering' configuration page. It features a sidebar on the left with a navigation menu. The main content area has a title 'IP Filtering' and a descriptive paragraph. Below the text, there is a checkbox for 'Enable IP Filtering', followed by input fields for 'Local IP Address' (with a range separator), a 'Protocol' dropdown menu set to 'Both', and a 'Comment' input field. At the bottom of this section are 'Apply Changes' and 'Reset' buttons. A table titled 'Current Filter Table' is displayed with columns for 'Local IP Address', 'Protocol', 'Comment', and 'Select'. Below the table are buttons for 'Delete Selected', 'Delete All', and 'Reset'.

Parameters	Description
<b>Enable IP Filtering</b>	Check this box to enable the IP filtering function.
<b>Local IP Address</b>	Input the IP Address you want to filter.
<b>Protocol</b>	Choose 'TCP' or 'UDP' or 'Both' protocols for port filtering.
<b>Comment</b>	You can input any text here as the comment of this settings.
<b>Current Filter Table</b>	From the table, you can check each IP filter setting.
<b>Delete Selected</b>	If you want to delete a specific setting, check the 'select' box of the setting you want to delete, then click 'Delete Selected' button. (You can select more than one setting).

## Delete All

If you want to delete all settings listed here, please click 'Delete All' button.

## Reset

You can also click 'Reset' button to unselect all.

---

Click <Apply Changes> at the bottom of the screen to save the above configurations.

## 3.4.3 MAC Filtering

If you want to restrict users from accessing certain Internet applications/services (e.g. Internet websites, email, FTP etc.) by their MAC addresses, then you can set up the filtering rules here. Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Router. MAC filter can be helpful in securing or restricting your local network.

The screenshot shows the 'MAC Filtering' configuration page in the AirLink 101 router's web interface. The page title is 'Wireless N Router Setup'. The left sidebar contains a navigation menu with the following items: Setup Wizard, Network, Wireless, Application & Gaming, Access Restriction (with sub-items: Port Filtering, IP Filtering, MAC Filtering, URL Filtering), Security, Administration, and Status. The main content area is titled 'MAC Filtering' and contains the following text: 'Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.' Below this text is a checkbox labeled 'Enable MAC Filtering'. Underneath the checkbox are two input fields: 'MAC Address:' and 'Comment:'. To the right of these fields are two buttons: 'Apply Changes' and 'Reset'. Below the input fields is a section titled 'Current Filter Table:' which contains a table with three columns: 'MAC Address', 'Comment', and 'Select'. Below the table are three buttons: 'Delete Selected', 'Delete All', and 'Reset'.

---

### Parameters

### Description

#### Enable MAC Filtering

Check this box to enable the MAC filtering function.

#### MAC Address

Input the MAC address of the devices you want to filter, format 'aa:bb:cc:dd:ee:ff'.

#### Comment

You can input any text here as the comment of this MAC address, like 'ROOM 2A Computer'.

#### Current Filter Table

From the table, you can check each MAC Address filter setting.



### Delete Selected

If you want to delete a specific MAC address entry, check the 'select' box of the MAC address you want to delete, then click 'Delete Selected' button. (You can select more than one MAC addresses).

### Delete All

If you want to delete all MAC addresses listed here, please click 'Delete All' button.

### Reset

You can also click 'Reset' button to unselect all.

---

Click <Apply Changes> at the bottom of the screen to save the above configurations.

## 3.4.4 URL Filtering

You can block access to some Websites or web contents from local PCs by entering a full URL address or just keyword of the Web site. This filter can help parents to manage the Internet usage for their children (i.e. Parental Control).

The screenshot shows the 'URL Filtering' configuration page in the router's web interface. The sidebar on the left lists various setup options, with 'URL Filtering' selected under the 'Access Restriction' category. The main panel has a title 'URL Filtering' and a brief description: 'URL filter is used to deny LAN users from accessing the internet. Block those URLs which contain keywords listed below.' There is a checked checkbox for 'Enable URL Filtering' and a text input field for 'URL Address'. Below the input field are 'Apply Changes' and 'Reset' buttons. A 'Current Filter Table' is shown with two columns: 'URL Address' and 'Select'. Below the table are 'Delete Selected', 'Delete All', and 'Reset' buttons.

---

Parameter	Description
<b>Enable URL Filtering</b>	Enable/Disable URL Blocking.
<b>URL Address</b>	You can enter the full URL address of a website or any <b>keyword</b> of certain web contents you want to block.
<b>Current Filter Table</b>	From the table, you can check each URL filter setting.

**Delete Selected**

If you want to delete a setting, check the 'select' box of the setting you want to delete, then click 'Delete Selected' button. (You can select more than one setting).

**Delete All**

If you want to delete all settings listed here, please click 'Delete All' button.

**Reset**


You can also click 'Reset' button to unselect all.

---

Click <**Apply Changes**> at the bottom of the screen to save the above configurations.

## 3.5 Security

### 3.5.1 Firewall

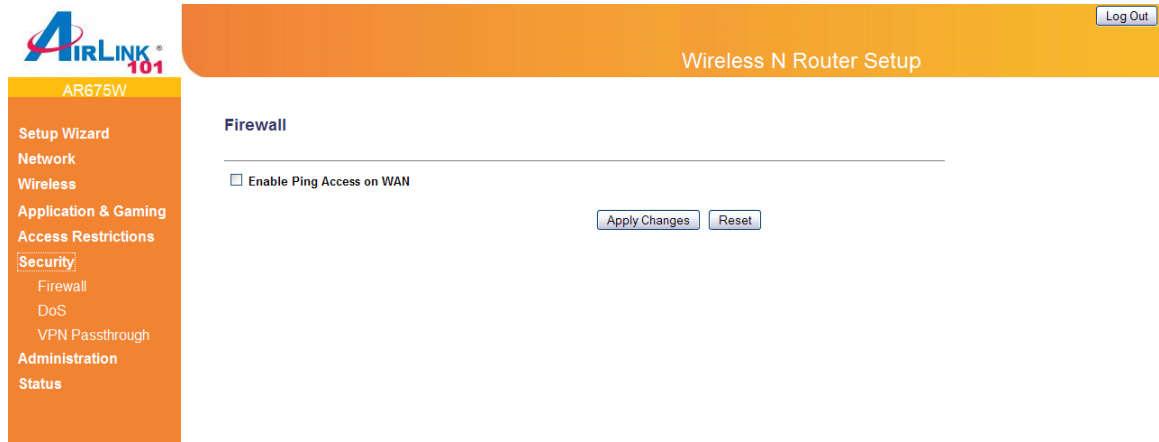

**Enable Ping Access on WAN:** When this function is enabled, other people are allowed to ping the IP address of the router given by your ISP.

Click <Apply Changes> at the bottom of the screen to save the above configurations.

### 3.5.2 DoS (Denial-of-Service)

Denial of Service (DoS) is a common attack measure, by transmitting a great amount of data or request to your Internet IP address and server, the Internet connection will become very slow, and server may stop responding because it is not capable to handle too much traffics.

This router has a built-in DoS attack prevention mechanism; when you activate it, the router will stop the DoS attack for you.

The screenshot shows the 'Denial of Service' configuration page in the router's web interface. The page title is 'Wireless N Router Setup' and the model is 'AR675W'. The left sidebar contains a navigation menu with 'Security' > 'DoS' selected. The main content area is titled 'Denial of Service' and includes a brief definition of a DoS attack. Below this, there is a list of checkboxes for enabling various DoS prevention features, each with an associated input field for 'Packets/Second' or 'Sensitivity'. The features listed are:
 

- Enable DoS Prevention (checkbox)
- Whole System Flood: SYN (checkbox, 0 Packets/Second)
- Whole System Flood: FIN (checkbox, 0 Packets/Second)
- Whole System Flood: UDP (checkbox, 0 Packets/Second)
- Whole System Flood: ICMP (checkbox, 0 Packets/Second)
- Per-Source IP Flood: SYN (checkbox, 0 Packets/Second)
- Per-Source IP Flood: FIN (checkbox, 0 Packets/Second)
- Per-Source IP Flood: UDP (checkbox, 0 Packets/Second)
- Per-Source IP Flood: ICMP (checkbox, 0 Packets/Second)
- TCP/UDP PortScan (checkbox, Low Sensitivity)
- ICMP Smurf (checkbox)
- IP Land (checkbox)
- IP Spoof (checkbox)
- IP TearDrop (checkbox)
- Ping Of Death (checkbox)
- TCP Scan (checkbox)
- TCP SynWithData (checkbox)
- UDP Bomb (checkbox)
- UDP EchoChargen (checkbox)

 At the bottom, there are buttons for 'Select ALL', 'Clear ALL', and 'Enable Source IP Blocking' (checkbox, 0 Block time (sec)). 'Apply Changes' and 'Reset' buttons are also present.

Click <Apply Changes> at the bottom of the screen to save the above configurations.

### 3.5.3 VPN Passthrough

The screenshot shows the 'VPN Passthrough' configuration page in the router's web interface. The page title is 'Wireless N Router Setup' and the model is 'AR675W'. The left sidebar contains a navigation menu with 'Security' > 'VPN Passthrough' selected. The main content area is titled 'VPN Passthrough' and includes three checked checkboxes:
 

- Enable IPsec pass through on VPN connection
- Enable PPTP pass through on VPN connection
- Enable L2TP pass through on VPN connection

 At the bottom, there are 'Apply Changes' and 'Reset' buttons.

Parameter	Description
-----------	-------------

**Enable IPsec pass through  
On VPN connection**

Check this box and the router will enable IPsec packets pass through the router for VPN connection.

**Enable PPTP pass through  
On VPN connection**

Check this box and the router will enable PPTP packets pass through the router for VPN connection

**Enable L2TP pass through  
On VPN connection**

Check this box and the router will enable L2TP packets pass through the router for VPN connection.


---

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

## 3.6 Administration

The Administration page allows you to specify a time zone, to change the system password and to specify a remote management port, to upgrade firmware, to save/reload configuration settings, to enable system log, to view the statistics information, and to enable/disable UPnP for the Router.

### 3.6.1 Time

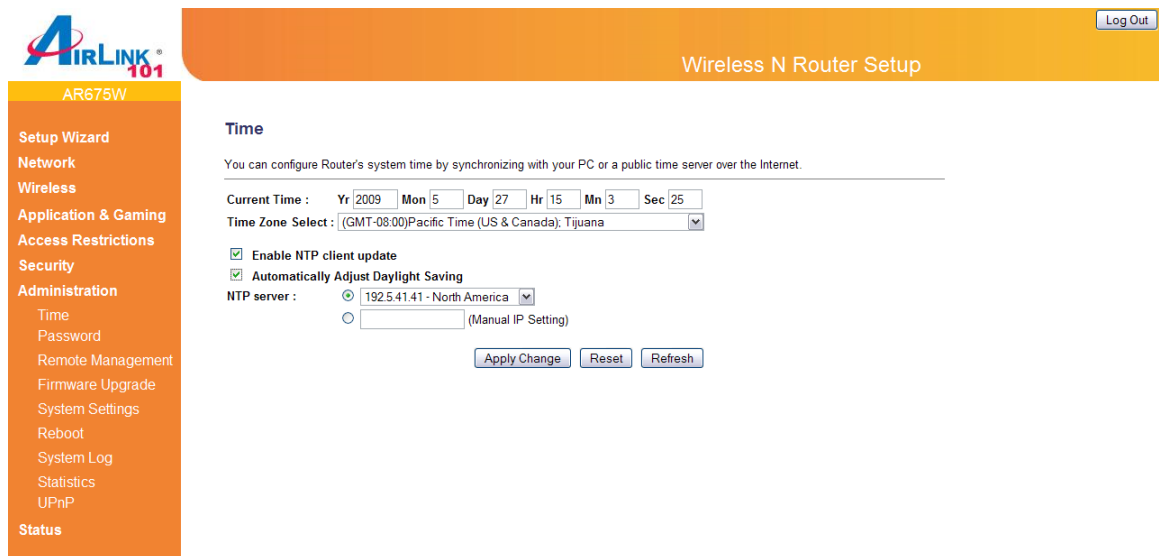

Parameter	Description
<b>Current Time</b>	Set the current time.
<b>Time Zone Select</b>	Select the time zone of the country you are currently in. The router will set its time based on your selection.
<b>Enable NTP client update</b>	Check the box to enable router to update time from NTP server.
<b>Automatically Adjust Daylight Saving</b>	If the country you live uses daylight saving, please check this box.
<b>NTP Server</b>	Select one preset time server or manual input a server IP.

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

## 3.6.2 Password

You can change the password required to log into the Router's web configuration utility. The default user name and password are "admin". It is suggested to change the administrator's default password as soon as you start to use the Router, and store it in a safe place. The password can contain 0 to 12 alphanumeric characters, and are case sensitive.

The screenshot shows the 'Password' configuration page in the AirLink 101 AR675W router's web interface. The page has an orange header with the 'Log Out' button and the title 'Wireless N Router Setup'. A left sidebar contains a navigation menu with 'Password' selected. The main content area is titled 'Password' and includes a recommendation to change the default login credentials. Below this, there is a section for changing the router's username and password, featuring three input fields: 'User Name', 'New Password:', and 'Confirmed Password:'. At the bottom of the form are 'Apply Changes' and 'Reset' buttons.

Parameters	Description
<b>User Name</b>	Change your login user name.
<b>New Password</b>	Enter your new password
<b>Confirmed Password</b>	Enter your new password again for verification purposes
	<b>Note:</b> If you forget your password, you'll have to reset the router to the factory default (user name and password are both 'admin') with the reset button on the back of the router.

Click <**Apply Changes**> at the bottom of the screen to save the above configurations.

### 3.6.3 Remote Management

Enable the remote management so an authorized user can configure the Router from a remote site. You can specify a port for the remote management.

The screenshot shows the 'Wireless N Router Setup' interface for the AirLink 101 AR675W. The left sidebar contains a navigation menu with categories: Setup Wizard, Network, Wireless, Application & Gaming, Access Restrictions, Security, Administration, and Status. Under Administration, 'Remote Management' is selected. The main content area is titled 'Remote Management' and features a checkbox for 'Enable Web Server Access on WAN'. Below this checkbox is a text input field for 'Port' with the value '8080'. At the bottom of the configuration area are two buttons: 'Apply Changes' and 'Reset'. A 'Log Out' button is located in the top right corner of the page header.

Click <Apply Changes> at the bottom of the screen to save the above configurations.

### 3.6.4 Firmware Upgrade

This page allows you to upgrade the router's firmware


The screenshot shows the 'Wireless N Router Setup' interface for the AirLink 101 AR675W. The left sidebar is identical to the previous screenshot, but 'Firmware Upgrade' is selected under the Administration category. The main content area is titled 'Firmware Upgrade' and includes a warning: 'To upgrade the firmware, your PC must have a wired connection to the Router. Do not power off the Router during firmware upgrade otherwise it will crash the system.' Below the warning is a 'Select File:' label followed by a text input field and a 'Browse...' button. At the bottom of the configuration area are two buttons: 'Upload' and 'Reset'. A 'Log Out' button is located in the top right corner of the page header.



To upgrade the firmware for the Router, you need to download the firmware file to your local hard disk, and click on **Browse** to select it, then click **Upload** to start the upgrade process. (You may have to wait a few minutes for the upgrade to complete).

### 3.6.5 System Settings

The System Settings screen allows you to save (**Backup**) the router's current configuration setting. Saving the configuration settings provides an added protection and convenience should problems occur with the router and you have to reset to factory default. When you save the configuration settings (Backup) you can re-load the saved settings into the router through the **Restore** function. If extreme problems occur you can use the **Restore Settings to Default** selection, this will set all configurations to its original default settings (e.g. when you first purchased the router).

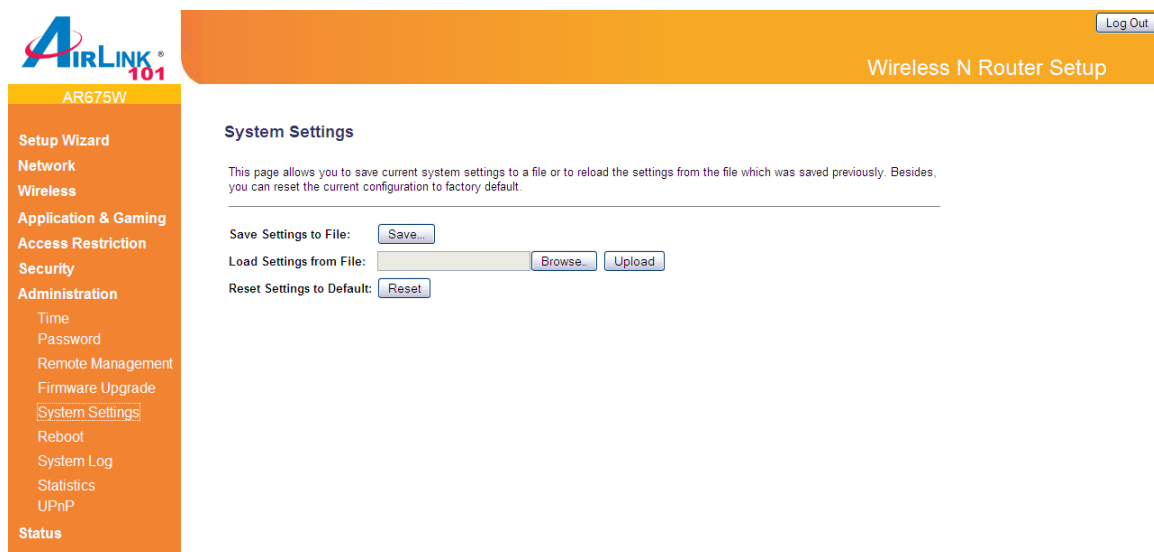

Parameters	Description
<b>Save Settings to File</b>	Click Save button to save the Broadband router current configuration to a file named "config.bin" on your PC.
<b>Load Settings from File</b>	Click Browse button to search the file you have saved before and click Upload button to restore the saved configuration to the Broadband router.
<b>Restore Settings to Default</b>	Click Reset button if you want to force the Broadband router to perform a power reset and restore the original factory settings.

### 3.6.6 Reboot

The screenshot shows the 'Reboot' page in the AirLink 101 router's web interface. The left sidebar contains a navigation menu with 'Reboot' highlighted. The main content area has a heading 'Reboot' and a question: 'Do you want to reboot the Router?'. Below the question are two buttons: 'Yes' and 'No'. The top right corner of the page has a 'Log Out' button.

### 3.6.7 System Log

View the operation log of the system.

The screenshot shows the 'System Log' page in the AirLink 101 router's web interface. The left sidebar contains a navigation menu with 'System Log' highlighted. The main content area has a heading 'System Log' and a sub-heading: 'This page can be used to set remote log server and show the system log.'. Below this are three checkboxes: 'Enable Log', 'Enable Remote Log', and 'Log Server IP Address:'. The 'Enable Log' checkbox is checked, and it has sub-options for 'system all', 'wireless', and 'DoS'. The 'Log Server IP Address' field is empty. Below the checkboxes is an 'Apply Changes' button. At the bottom of the page are 'Refresh' and 'Clear' buttons.

Parameters	Description
<b>Enable Log</b>	Check this box to enable the logging system.

## System all

This page shows the current system log of the Broadband router. It displays any event occurred after system start up. At the bottom of the page, the system log can be cleared with **Clear** button or it can be refreshed by **Refresh** button to get the most updated situation. When the system is powered down, the system log will disappear if not saved to a local file.

## Wireless

By select this options, you can check wireless log.

## DoS

By select this options, you can check DoS log.

## Enable Remote Log

If you want to send all log information to remote server, please check this box to enable this function and fill the server IP Address in the "Log Server IP Address" field.

## Log Server IP Address

Input the server IP address where you want to save the logs.

---

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

## 3.6.8 Statistics

View the statistics of packets sent and received on WAN, LAN and Wireless LAN.

The screenshot shows the 'Wireless N Router Setup' interface for an AirLink 101 AR675W router. The left sidebar contains a navigation menu with options: Setup Wizard, Network, Wireless, Application & Gaming, Access Restrictions, Security, Administration (Time, Password, Remote Management, Firmware Upgrade, System Settings, Reboot, System Log, Statistics, UPnP), and Status. The main content area is titled 'Statistics' and includes a description: 'This page shows the packet counters for transmission and reception regarding to wireless and Ethernet networks.' Below this is a table with the following data:

Ethernet LAN	Sent Packets	4351
	Received Packets	123117
Ethernet WAN	Sent Packets	0
	Received Packets	0

A 'Refresh' button is located below the table.

Parameters	Description
<b>Statistics</b>	Shows the counters of packets sent and received on WAN, LAN and Wireless LAN.

### 3.6.9 UPnP

Check the box to enable UPnP feature here. After you enable the UPnP feature, all client systems that support UPnP, like Windows XP, can discover this router automatically.

The screenshot shows the 'Wireless N Router Setup' interface for an AirLink 101 AR675W router. On the left is a navigation menu with categories: Setup Wizard, Network, Wireless, Application & Gaming, Access Restrictions, Security, Administration (with sub-items: Time, Password, Remote Management, Firmware Upgrade, System Settings, Reboot, System Log, Statistics, and UPnP), and Status. The 'UPnP' option is highlighted. The main content area is titled 'UPnP' and contains a single checkbox labeled 'Enable UPnP', which is currently unchecked. Below the checkbox are two buttons: 'Apply Changes' and 'Reset'. A 'Log Out' button is visible in the top right corner of the page header.

Click **<Apply Changes>** at the bottom of the screen to save the above configurations.

## 3.7 Status

The Status section allows you to monitor the current status of your router. You can use the Status page to monitor: the Internet, LAN connection, Wireless status, and the current firmware version of the Router.

### 3.7.1 Internet Connection Status

The screenshot shows the 'Internet Connection Status' page of the AirLink 101 AR675W router. The page has an orange header with the 'AirLink 101' logo on the left and 'Wireless N Router Setup' on the right, with a 'Log Out' button. A left sidebar contains a menu with 'Status' selected. The main content area is titled 'Internet Connection' and features a table for WAN Configuration. Below the table is a 'goahead' logo and a 'WEBSERVER' button.

WAN Configuration	
Attain IP Protocol	Getting IP from DHCP server...
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
MAC Address	00-1a-a0-b2-af-d2

### 3.7.2 LAN Status

The screenshot shows the 'LAN Status' page of the AirLink 101 AR675W router. The page has an orange header with the 'AirLink 101' logo on the left and 'Wireless N Router Setup' on the right, with a 'Log Out' button. A left sidebar contains a menu with 'LAN' selected. The main content area is titled 'LAN' and features a table for TCP/IP Configuration. Below the table is a 'goahead' logo and a 'WEBSERVER' button.

TCP/IP Configuration	
Attain IP Protocol	Fixed IP
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
DHCP Server	Enabled
MAC Address	00-00-00-00-00-00

### 3.7.3 Wireless Status

The screenshot shows the 'Wireless' status page of an AirLink 101 AR675W router. The page title is 'Wireless N Router Setup'. The left sidebar contains a navigation menu with 'Wireless' selected. The main content area displays the 'Wireless Configuration' table and a 'goahead WEB SERVER' logo.

Wireless Configuration	
Mode	AP
Band	2.4 GHz (B+G+N)
SSID	
Channel Number	
Security Mode	Disabled
BSSID	00:00:00:00:00:00
Associated Clients	0

goahead  
WEB SERVER

### 3.7.4 System Status

The screenshot shows the 'System' status page of an AirLink 101 AR675W router. The page title is 'Wireless N Router Setup'. The left sidebar contains a navigation menu with 'System' selected. The main content area displays the 'System' table and a 'goahead WEB SERVER' logo.

System	
Uptime	0day:4h:59m:13s
Firmware Version	final version

goahead  
WEB SERVER

# Technical Support

E-mail: [support@airlink101.com](mailto:support@airlink101.com)

Toll Free: 1-888-746-3238

Website: [www.airlink101.com](http://www.airlink101.com)

\*Theoretical maximum wireless signal rate derived from IEEE standard 802.11g and draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, mix of wireless products used, radio frequency interference (e.g., cordless telephones and microwaves) as well as network overhead lower actual data throughput rate. This product is based on IEEE draft 802.11n specification and is not guaranteed to be compatible with future versions of IEEE 802.11n specification. Compatibility with draft 802.11n devices from other manufactures is not guaranteed. Specifications are subject to change without notice. Photo of product may not reflect actual content. All products and trademarks are the property of their respective owners. Copyright ©2009 Airlink101®

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>